

Workshop Manual

ZW30-5B Wheel Loader

ZW30-5B WHEEL LOADER WORKSHOP MANUAL

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TONBB-EN
Technical Manual (Troubleshooting) : Vol. No.TTNBB-EN
Workshop Manual : Vol. No.WNBB-EN
Engine Manual : Vol. No.ENBB-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Precautions for Disassembling and Assembling

Precautions for Disassembling and Assembling.....W1-1-1-1

Group 2 Tightening

Tightening Bolts and Nuts.....W1-2-1-1

Piping JointW1-2-1-4

Group 3 Painting

PaintingW1-3-1-1

Group 4 Bleeding Air

Bleeding Air from Hydraulic Oil Tank.....W1-4-1-1

Bleeding Air from Hydraulic SystemW1-4-1-2

Bleeding Air from Fuel System.....W1-4-1-3

Bleeding Air from Expansion Tank (Radiator)W1-4-1-4

Group 5 Releasing Pressure

Front Attachment Hydraulic Circuit Pressure Release Procedure.....W1-5-1-1

Group 6 Preparation

Preparation before Inspection and MaintenanceW1-6-1-1

(Blank)

SECTION 2

MAINTENANCE STANDARD

CONTENTS

Group 2 Front Attachment

Pin and Bushing.....	W2-2-1-1
Cylinder	W2-2-3-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$