

Workshop Manual

ZW310-6

Wheel Loader

ZW310-6 WHEEL LOADER WORKSHOP MANUAL

 **Hitachi Construction Machinery Co., Ltd.**
URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TONFB50-EN
Technical Manual (Troubleshooting) : Vol. No.TTNFB50-EN
Workshop Manual : Vol. No.WNFB50-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Precautions for Disassembling and Assembling

Precautions for Disassembling and Assembling	W1-1-1-1
--	----------

Group 2 Tightening

Tightening Bolts and Nuts	W1-2-1-1
Piping Joint	W1-2-1-4

Group 3 Painting

Painting	W1-3-1-1
----------------	----------

Group 4 Bleeding Air

Bleeding Air from Hydraulic Oil Tank	W1-4-1-1
Bleeding Air from Hydraulic System	W1-4-1-2
Bleed Air from the Fuel System	W1-4-1-3
Bleeding Air from Radiator	W1-4-1-5
Bleeding Air from Brake (Axle)	W1-4-1-6

Group 5 Pressure Release Procedure

Front Attachment Hydraulic Circuit Pressure Release Procedure	W1-5-1-1
Ride Control Accumulator Pressure Release Procedure	W1-5-1-2
Parking Brake Accumulator Pressure Release Procedure	W1-5-1-3

Group 6 Preparation

Preparation before Inspection and Maintenance	W1-6-1-1
---	----------

(Blank)

SECTION 2

MAINTENANCE STANDARD

CONTENTS

Group 1 Body

Center Hinge.....W2-1-1-1

Pilot Valve (Two Lever Type).....W2-1-2-1

Group 2 Front Attachment

Pin and Bushing.....W2-2-1-1

Standard Dimensions for Lift Arm and Bucket....W2-2-2-1

Bucket Stopper ClearanceW2-2-2-2

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$