

Workshop Manual

ZW370-6

Wheel Loader

ZW370-6 WHEEL LOADER WORKSHOP MANUAL

 **Hitachi Construction Machinery Co., Ltd.**
URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TONHJ40-EN
Technical Manual (Troubleshooting) : Vol. No.TTNHJ40-EN
Workshop Manual : Vol. No.WNHJ40-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Precautions for Disassembling and Assembling

Precautions for Disassembling
and AssemblingW1-1-1-1

Group 2 Tightening

Tightening Bolts and Nuts.....W1-2-1-1
Piping JointW1-2-1-4

Group 3 Painting

PaintingW1-3-1-1

Group 4 Bleeding Air

Bleeding Air from Hydraulic Oil Tank.....W1-4-1-1
Bleeding Air from Hydraulic SystemW1-4-1-2
Bleed Air from Fuel SystemW1-4-1-3
Bleeding Air from RadiatorW1-4-1-6
Bleeding Air from Brake (Axle)W1-4-1-7

Group 5 Pressure Release Procedure

Front Attachment Hydraulic Circuit Pressure
Release Procedure.....W1-5-1-1
Ride Control Accumulator Pressure Release
ProcedureW1-5-1-2
Parking Brake Accumulator Pressure Release
ProcedureW1-5-1-3

Group 6 Preparation

Preparation before Inspection
and Maintenance.....W1-6-1-1

(Blank)

SECTION 2

MAINTENANCE STANDARD

CONTENTS

Group 1 Body
Center Hinge.....W2-1-1-1
Pilot Valve (Two Lever Type).....W2-1-2-1

Group 2 Front Attachment
Pin and Bushing.....W2-2-1-1
Standard Dimensions for Lift Arm and Bucket....W2-2-2-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$