

Workshop Manual

ZW550-6 Wheel Loader

 **Hitachi Construction Machinery Co., Ltd.**
URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TONHK40-EN
Technical Manual (Troubleshooting) : Vol. No.TTNHK40-EN
Workshop Manual : Vol. No.WNHK40-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Precautions for Disassembling and Assembling

Precautions for Disassembling and Assembling	W1-1-1-1
--	----------

Group 2 Tightening

Tightening Bolts and Nuts	W1-2-1-1
Piping Joint	W1-2-1-4

Group 3 Painting

Painting	W1-3-1-1
----------------	----------

Group 4 Bleeding Air

Bleeding Air from Hydraulic Oil Tank	W1-4-1-1
Bleeding Air from Hydraulic System	W1-4-1-2
Bleed Air from Fuel System	W1-4-1-3
Bleeding Air from Radiator/CCV Line	W1-4-1-5
Bleeding Air from Brake (Axle)	W1-4-1-8
Bleeding Air from Parking Brake	W1-4-1-9

Group 5 Pressure Release Procedure

Front Attachment Hydraulic Circuit Pressure Release Procedure	W1-5-1-1
Ride Control Accumulator (Option) Pressure Release Procedure	W1-5-1-2
Parking Brake Accumulator Pressure Release Procedure	W1-5-1-3

Group 6 Preparation

Preparation before Inspection and Maintenance	W1-6-1-1
---	----------

(Blank)

SECTION 2

MAINTENANCE STANDARD

CONTENTS

Group 1 Body

Center Hinge.....	W2-1-1-1
Pilot Valve (Two Lever Type).....	W2-1-2-1

Group 2 Front Attachment

Pin and Bushing.....	W2-2-1-1
Standard Dimensions for Lift Arm and Bucket....	W2-2-2-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$