

UPPERSTRUCTURE

Cab W3-1-1-1

Removal of Cab Interior Parts.....	W3-1-1-1
Removal of Cab Exterior Parts.....	W3-1-2-1
Removal of Cab Body.....	W3-1-3-1
Removal of Controller Assembly and Parts Around the Monitor.....	W3-1-4-1
Installation of Controller Assembly and Parts Around the Monitor.....	W3-1-5-1
Installation of Cab Body.....	W3-1-6-1
Installation of Cab Exterior Parts.....	W3-1-7-1
Installation of Cab Interior Parts.....	W3-1-8-1
Dimensions of Cab Glass.....	W3-1-9-1
Procedure to Remove Cab Glass.....	W3-1-10-1
Procedure to Install Cab Glass.....	W3-1-11-1
Procedures to Install Upper Door Glass.....	W3-1-12-1
Procedures to Install Upper Front Glass.....	W3-1-13-1

Counterweight..... W3-2-1-1

Removal of Counterweight.....	W3-2-1-1
Installation of Counterweight.....	W3-2-2-1

Main Frame W3-3-1-1

Removal of Main Frame.....	W3-3-1-1
Installation of Main Frame.....	W3-3-2-1

Engine..... W3-4-1-1

Preparation before Removal of Engine.....	W3-4-1-1
Removal of Covers and Related Parts Around the Engine.....	W3-4-2-1
Removal of Wire Harnesses and Hoses Around the Engine.....	W3-4-3-1
Removal of Engine Body.....	W3-4-4-1
Installation of Engine Body.....	W3-4-5-1
Installation of Wire Harnesses and Hoses Around the Engine.....	W3-4-6-1
Installation of Related Parts of the Engine.....	W3-4-7-1
Work after Installation of Engine and Installation of Covers.....	W3-4-8-1

Radiator Assembly W3-5-1-1

Removal of Radiator.....	W3-5-1-1
Installation of Radiator.....	W3-5-2-1
Removal of Intercooler.....	W3-5-3-1
Installation of Intercooler.....	W3-5-4-1
Removal of Oil Cooler.....	W3-5-5-1

Installation of Oil Cooler.....	W3-5-6-1
---------------------------------	----------

Hydraulic Oil Tank W3-6-1-1

Removal of Hydraulic Oil Tank.....	W3-6-1-1
Installation of Hydraulic Oil Tank.....	W3-6-2-1

Fuel Tank W3-7-1-1

Removal of Fuel Tank.....	W3-7-1-1
Installation of Fuel Tank.....	W3-7-2-1

Pump Device W3-8-1-1

Removal of Pump Device.....	W3-8-1-1
Installation of Pump Device.....	W3-8-2-1
Removal of Coupling.....	W3-8-3-1
Installation of Coupling.....	W3-8-4-1
Disassembly of Pump Device.....	W3-8-5-1
Assembly of Pump Device.....	W3-8-6-1
Disassembly of Regulator.....	W3-8-7-1
Assembly of Regulator.....	W3-8-8-1
Disassembly of Solenoid Valve.....	W3-8-9-1
Assembly of Solenoid Valve.....	W3-8-10-1
Structure of Pilot Pump.....	W3-8-11-1

Control Valve..... W3-9-1-1

Removal of Control Valve.....	W3-9-1-1
Installation of Control Valve.....	W3-9-2-1
Disassembly of Housing.....	W3-9-3-1
Assembly of Housing.....	W3-9-4-1
Disassembly of Spool (A-Side Control Valve).....	W3-9-5-1
Assembly of Spool (A-Side Control Valve).....	W3-9-6-1
Disassembly of Boom Anti-Drift Valve (Check Valve) (j) (A-Side Control Valve).....	W3-9-7-1
Disassembly of Boom Anti-Drift Valve (Selector Valve) (k) (A-Side Control Valve).....	W3-9-8-1
Assembly of Boom Anti-Drift Valve (j, k) (A-Side Control Valve).....	W3-9-9-1
Disassembly of Overload Relief Valve (h, i, ac, ad) (A-Side Control Valve).....	W3-9-10-1
Assembly of Overload Relief Valve (h, i, ac, ad) (A-Side Control Valve).....	W3-9-11-1
Disassembly of Travel (Right) Spool (n) (A-Side Control Valve).....	W3-9-12-1
Assembly of Travel Spool (n) (A-Side Control Valve).....	W3-9-13-1
Disassembly of Bucket Spool (p) (A-Side Control Valve).....	W3-9-14-1

Assemble of Bucket Spool (p) (A-Side Control Valve)	W3-9-15-1
Disassembly of Arm 2 Spool (q) (A-Side Control Valve)	W3-9-16-1
Assembly of Arm 2 Spool (q) (A-Side Control Valve)	W3-9-17-1
Disassembly of Boom 1 Spool (r) (A-Side Control Valve)	W3-9-18-1
Assembly of Boom 1 Spool (r) (A-Side Control Valve)	W3-9-19-1
Disassembly of Boom 3 Spool (s) (A-Side Control Valve)	W3-9-20-1
Assembly of Boom 3 Spool (s) (A-Side Control Valve)	W3-9-21-1
Disassembly of Swing Spool (t) (A-Side Control Valve)	W3-9-22-1
Assembly of Swing Spool (t) (A-Side Control Valve)	W3-9-23-1
Disassembly of Arm Roll-In Meter-Out Open Control Spool (aa) (A-Side Control Valve)	W3-9-24-1
Assembly of Arm Roll-In Meter-Out Open Control Spool (aa) (A-Side Control Valve)	W3-9-25-1
Disassembly of Main Relief Valve (m) (A-Side Control Valve)	W3-9-26-1
Assembly of Main Relief Valve (m) (A-Side Control Valve)	W3-9-27-1
Disassembly of Bucket Regeneration Cut Valve (g) (A-Side Control Valve)	W3-9-28-1
Assembly of Bucket Regeneration Cut Valve (g) (A-Side Control Valve)	W3-9-29-1
Disassembly of Check Valve (d, f) (A-Side Control Valve)	W3-9-30-1
Assembly of Check Valve (d, f) (A-Side Control Valve)	W3-9-31-1
Disassembly of Load Check Valve (e) (A-Side Control Valve)	W3-9-32-1
Assembly of Load Check Valve (e) (A-Side Control Valve)	W3-9-33-1
Disassembly of Flow Combiner Valve (ae) (A-Side Control Valve)	W3-9-34-1
Assembly of Flow Combiner Valve (ae) (A-Side Control Valve)	W3-9-35-1
Disassembly of Pump 1 Bypass Shut-Out Valve (ab) (A-Side Control Valve)	W3-9-36-1
Assembly of Pump 1 Bypass Shut-Out Valve (ab) (A-Side Control Valve)	W3-9-37-1
Disassembly of Check Valves (u, w), Load Check Valves (x, y) (A-Side Control Valve)	W3-9-38-1
Assembly of Check Valves (u, w), Load Check Valves (x, y) (A-Side Control Valve)	W3-9-39-1
Disassembly of Boom Lower Meter-In Cut Valve (v) (A-Side Control Valve)	W3-9-40-1
Assembly of Boom Lower Meter-In Cut Valve (v) (A-Side Control Valve)	W3-9-41-1
Disassembly of Load Check Valve (z) (A-Side Control Valve)	W3-9-42-1

Assembly of Load Check Valve (z) (A-Side Control Valve)	W3-9-43-1
Disassembly and Assembly of Plugs (A-Side Control Valve)	W3-9-44-1
Disassembly of Spool (B-Side Control Valve)	W3-9-45-1
Assembly of Spool (B-Side Control Valve)	W3-9-46-1
Disassembly of Arm Regenerative Valve (j) (B-Side Control Valve)	W3-9-47-1
Assembly of Arm Regenerative Valve (j) (B-Side Control Valve)	W3-9-48-1
Disassembly of Arm Rod Anti-Drift Valve (Check Valve) (e) (B-Side Control Valve)	W3-9-49-1
Disassembly of Arm Rod Anti-Drift Valve (Selector Valve) (d) (B-Side Control Valve)	W3-9-50-1
Assembly of Arm Rod Anti-Drift Valve (d, e) (B-Side Control Valve)	W3-9-51-1
Disassembly of Overload Relief Valve (f, aa) (B-Side Control Valve)	W3-9-52-1
Assembly of Overload Relief Valve (f, aa) (B-Side Control Valve)	W3-9-53-1
Disassembly of Main Relief Valve (ai) (B-Side Control Valve)	W3-9-54-1
Assembly of Main Relief Valve (ai) (B-Side Control Valve)	W3-9-55-1
Disassembly of Load Check Valve (Arm Regenerative Circuit) (ac) (B-Side Control Valve)	W3-9-56-1
Assembly of Load Check Valve (Arm Regenerative Circuit) (ac) (B-Side Control Valve)	W3-9-57-1
Disassembly of Load Check Valve (Travel (Left) Tandem Circuit) (ag) (B-Side Control Valve) ..	W3-9-58-1
Assembly of Load Check Valve (Travel (Left) Tandem Circuit) (ag) (B-Side Control Valve) ..	W3-9-59-1
Disassembly of Check Valve (Main Relief Circuit) (ah) (B-Side Control Valve)	W3-9-60-1
Assembly of Check Valve (Main Relief Circuit) (ah) (B-Side Control Valve)	W3-9-61-1
Disassembly of Travel (Left) Spool (g) (B-Side Control Valve)	W3-9-62-1
Assembly of Travel (Left) Spool (g) (B-Side Control Valve)	W3-9-63-1
Disassembly of Auxiliary 1 Spool (h) (B-Side Control Valve)	W3-9-64-1
Assembly of Auxiliary 1 Spool (h) (B-Side Control Valve)	W3-9-65-1
Disassembly of Arm 1 Spool (i) (B-Side Control Valve)	W3-9-66-1
Assembly of Arm 1 Spool (i) (B-Side Control Valve)	W3-9-67-1
Disassembly of Boom 2 Spool (k) (B-Side Control Valve)	W3-9-68-1
Assembly of Boom 2 Spool (k) (B-Side Control Valve)	W3-9-69-1
Disassembly of Pump 3 Bypass Shut-Out Valve (ae) (B-Side Control Valve)	W3-9-70-1

Assembly of Pump 3 Bypass Shut-Out Valve (ae) (B-Side Control Valve)	W3-9-71-1
Disassembly of Auxiliary 2 Spool (m) (B-Side Control Valve)	W3-9-72-1
Assembly of Auxiliary 2 Spool (m) (B-Side Control Valve)	W3-9-73-1
Disassembly of Digging Regenerative Valve (ab) (B-Side Control Valve)	W3-9-74-1
Assembly of Digging Regenerative Valve (ab) (B- Side Control Valve)	W3-9-75-1
Disassembly of Auxiliary Flow Combiner Valve (z) (B-Side Control Valve)	W3-9-76-1
Assembly of Auxiliary Flow Combiner Valve (z) (B- Side Control Valve)	W3-9-77-1
Disassembly of Arm Bottom Anti-Drift Valve (Check Valve) (y) (B-Side Control Valve)	W3-9-78-1
Disassembly of Arm Bottom Anti-Drift Valve (Selector Valve) (x) (B-Side Control Valve)	W3-9-79-1
Assembly of Arm Bottom Anti-Drift Valve (x, y) (B- Side Control Valve)	W3-9-80-1
Disassembly of Check Valve (Auxiliary Flow Combiner Circuit) (af) (B-Side Control Valve)	W3-9-81-1
Assembly of Check Valve (Auxiliary Flow Combiner Circuit) (af) (B-Side Control Valve)	W3-9-82-1
Disassembly of Arm 1 Flow Rate Control Valve (Poppet Valve) (s) (B-Side Control Valve)	W3-9-83-1
Disassembly of Arm 1 Flow Rate Control Valve (Selector Valve) (t) (B-Side Control Valve)	W3-9-84-1
Assembly of Arm 1 Flow Rate Control Valve (s, t) (B-Side Control Valve)	W3-9-85-1
Disassembly of Load Check Valve (Boom 2 Parallel Circuit) (u) (B-Side Control Valve)	W3-9-86-1
Assembly of Load Check Valve (Boom 2 Parallel Circuit) (u) (B-Side Control Valve)	W3-9-87-1
Disassembly of Load Check Valve (Auxiliary 2 Tandem Circuit) (r) (B-Side Control Valve)	W3-9-88-1
Assembly of Load Check Valve (Auxiliary 2 Tandem Circuit) (r) (B-Side Control Valve)	W3-9-89-1
Disassembly of Load Check Valve (Travel (Left) Parallel Circuit) (n) (B-Side Control Valve)	W3-9-90-1
Assembly of Load Check Valve (Travel Parallel Circuit) (n) (B-Side Control Valve)	W3-9-91-1
Disassembly of Load Check Valve (Auxiliary 2 Parallel Circuit) (ad) (B-Side Control Valve)	W3-9-92-1
Assembly of Load Check Valve (Auxiliary 2 Parallel Circuit) (ad) (B-Side Control Valve)	W3-9-93-1
Disassembly of Load Check Valve (Digging Regenerative Circuit) (w) (B-Side Control Valve)	W3-9-94-1
Assembly of Load Check Valve (Digging Regenerative Circuit) (w) (B-Side Control Valve)	W3-9-95-1
Disassembly of Load Check Valve (Auxiliary Parallel Circuit) (p) (B-Side Control Valve)	W3-9-96-1
Assembly of Load Check Valve (Auxiliary Parallel Circuit) (p) (B-Side Control Valve)	W3-9-97-1

Disassembly of Auxiliary 2 Hydraulic Pressure Source Control Spool (ak) (B-Side Control Valve)	W3-9-98-1
Assembly of Auxiliary 2 Hydraulic Pressure Source Control Spool (ak) (B-Side Control Valve)	W3-9-99-1
Disassembly and Assembly of Plugs (B-Side Control Valve)	W3-9-100-1

Swing Device W3-10-1-1

Removal of Swing Device	W3-10-1-1
Installation of Swing Device	W3-10-2-1
Disassembly of Swing Reduction Gear	W3-10-3-1
Assembly of Swing Reduction Gear	W3-10-4-1
Disassembly of Swing Motor	W3-10-5-1
Assembly of Swing Motor	W3-10-6-1
Structure of Swing Parking Brake Selection Valve	W3-10-7-1

Pilot Valve W3-11-1-1

Removal of Pilot Valve (Left)	W3-11-1-1
Installation of Pilot Valve (Left)	W3-11-2-1
Removal of Pilot Valve (Right)	W3-11-3-1
Installation of Pilot Valve (Right)	W3-11-4-1
Disassembly of Pilot Valves (Left and Right)	W3-11-5-1
Assembly of Pilot Valves (Left and Right)	W3-11-6-1
Removal of Travel Pilot Valve	W3-11-7-1
Installation of Travel Pilot Valve	W3-11-8-1
Disassembly of Travel Pilot Valve	W3-11-9-1
Assembly of Travel Pilot Valve	W3-11-10-1

Solenoid Valve W3-12-1-1

Removal of Pilot Shut-Off Solenoid Valve	W3-12-1-1
Installation of Pilot Shut-Off Solenoid Valve	W3-12-2-1
Disassembly of Pilot Shut-Off Solenoid Valve ...	W3-12-3-1
Assembly of Pilot Shut-Off Solenoid Valve	W3-12-4-1
Removal of 5-Spool Solenoid Valve Unit	W3-12-5-1
Installation of 5-Spool Solenoid Valve Unit	W3-12-6-1
Structure of 5-Spool Solenoid Valve Unit	W3-12-7-1
Removal of 2-Spool Solenoid Valve Unit	W3-12-8-1
Installation of 2-Spool Solenoid Valve Unit	W3-12-9-1
Structure of 2-Spool Solenoid Valve Unit	W3-12-10-1
Removal of 3-Spool Solenoid Valve Unit	W3-12-11-1
Installation of 3-Spool Solenoid Valve Unit	W3-12-12-1
Structure of 3-Spool Solenoid Valve Unit	W3-12-13-1

Signal Control Valve W3-13-1-1

Removal of Signal Control Valve	W3-13-1-1
Installation of Signal Control Valve	W3-13-2-1
Structure of Signal Control Valve	W3-13-3-1

Aftertreatment Device W3-14-1-1

Removal of Aftertreatment Device	W3-14-1-1
Installation of Aftertreatment Device	W3-14-2-1

DEF Tank W3-15-1-1

Removal of DEF Tank	W3-15-1-1
Installation of DEF Tank	W3-15-2-1

Removal of DEF Tank Suction Filter.....	W3-15-3-1
Installation of DEF Tank Suction Filter.....	W3-15-4-1
Removal of DEF Tank Water Supply Inlet Filter .	W3-15-5-1
Installation of DEF Tank Water Supply Inlet Filter ...	
.....	W3-15-6-1
Assembly of DEF Tank Water Supply Inlet Filter	W3-15-7-1
Coolant Control Valve	W3-16-1-1
Removal of Coolant Control Valve	W3-16-1-1
Installation of Coolant Control Valve	W3-16-2-1
DEF Supply Module	W3-17-1-1
Removal of DEF Supply Module	W3-17-1-1
Installation of DEF Supply Module	W3-17-2-1

SECTION3 UPPERSTRUCTURE

Group1 Cab

Removal of Cab Interior Parts

IMPORTANT

When you remove hoses and pipes, put plugs into their openings. Also, put tags on connectors, hoses and pipes so that they can be put back into their original locations during reassembling. If fasteners or clips which tie hoses together are removed, put them back after all hoses are re-connected.

1. Set the machine position for inspection and maintenance. (Refer to "Preparation before Inspection and Maintenance" W1-5-1-1.)



2. Open cover (3).

3. **IMPORTANT**

Turn the key switch to the OFF position, wait 5 minutes or longer, and then turn battery disconnect switch (4) to the OFF position.

Set battery disconnect switch (4) to OFF position (c).

4. Close cover (3).

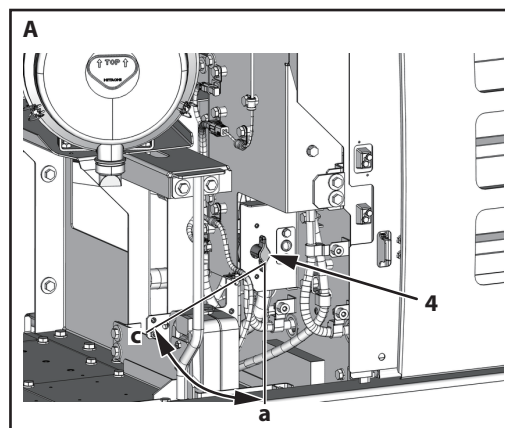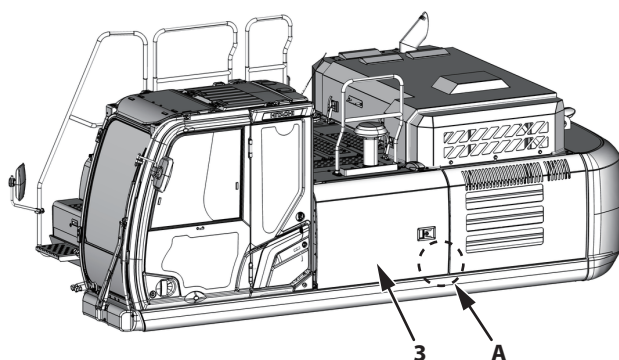


WDD6-03-01-005-1 ja

a- ON Position

c- OFF Position

5. Open door (1).

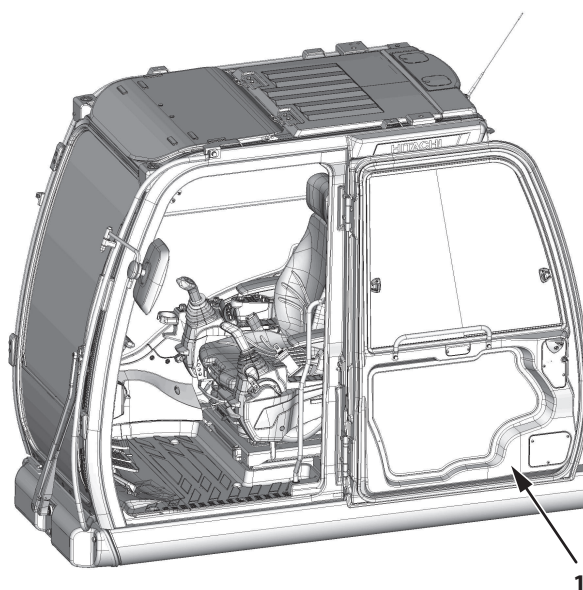

WDFY-03-09-001-3 ja

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$