

Workshop Manual

ZX
670LC-6
690LCH-6
690LCR-6

Hydraulic Excavator

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TOJBK40-EN
Technical Manual (Troubleshooting) : Vol. No.TTJBK40-EN
Workshop Manual : Vol. No.WJBK40-EN
Engine Manual : Vol. No.ETJBK40-EN, EWJBK40-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Precautions for Disassembling and Assembling

Precautions for Disassembling and Assembling.....W1-1-1-1

Group 2 Tightening

Tightening Bolts and Nuts.....W1-2-1-1

Piping JointW1-2-1-4

Group 3 Painting

PaintingW1-3-1-1

Group 4 Bleeding Air

Bleeding Air from Hydraulic SystemW1-4-1-1

Bleeding Air from Fuel System.....W1-4-1-2

Air Bleeding from the Diesel Exhaust Fluid Defrosting PipingW1-4-1-4

Group 5 Preparation

Preparation before Inspection and MaintenanceW1-5-1-1

Hydraulic Circuit Pressure Release ProcedureW1-5-1-3

Pressure Release from Hydraulic Oil TankW1-5-1-4

Pressure Release from Expansion TankW1-5-1-5

(Blank)

SECTION 2

MAINTENANCE STANDARD

CONTENTS

Group 1 Upperstructure

Pump Device	W2-1-1-1
Swing Motor	W2-1-2-1

Group 2 Undercarriage

Travel Motor	W2-2-1-1
Sprocket	W2-2-1-3
Center Joint.....	W2-2-2-1
Front Idler	W2-2-3-1
Upper Roller.....	W2-2-4-1
Lower Roller	W2-2-4-2
Track.....	W2-2-5-1

Group 3 Front Attachment

Pin and Bushing.....	W2-3-1-1
Side Cutter.....	W2-3-1-3
Point.....	W2-3-1-4
Standard Dimensions for Arm and Bucket	
Connection	W2-3-1-5
Standard Dimensions for Arm and Boom	
Connection	W2-3-1-7
Cylinder	W2-3-2-1

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$