

Technical Manual

Operational Principle

ZH

210-6

210LC-6

Hybrid Excavator

ZH210-6 • 210LC-6 HYBRID EXCAVATOR TECHNICAL MANUAL OPERATIONAL PRINCIPLE

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

PRINTED IN JAPAN (K) 2017, 09

TODFX50-EN-00

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TODFX50-EN
Technical Manual (Troubleshooting) : Vol. No.TTDFX50-EN
Workshop Manual : Vol. No.WDFX50-EN
Engine Manual : Vol. No.EDFX50-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Specifications

Specifications	T1-1-1
Working Ranges (Grouser shoe)	T1-1-2

Group 2 Component Layout

Main Component.....	T1-2-1
Electrical System (Overview)	T1-2-5
Electrical System (Rear Tray).....	T1-2-6
Electrical System (Switch Panel)	T1-2-7
Around Air Cleaner	T1-2-8
Around Battery	T1-2-9
Engine	T1-2-10
Lithium-ion Battery Unit.....	T1-2-11
Muffler Filter	T1-2-12
Pump Device	T1-2-13
Around Pump Device	T1-2-14
Control Valve.....	T1-2-15
Signal Control Valve	T1-2-16
Swing Device	T1-2-17
Travel Device.....	T1-2-17
5-Spool Solenoid Valve Unit.....	T1-2-18
Swing Control Solenoid Valve Unit/ 3-spool solenoid valve unit.....	T1-2-18
Layout of Attachment Spec. Parts.....	T1-2-19
Breaker Related Component	T1-2-21

Group 3 Component Specifications

Engine	T1-3-1
Engine Accessories	T1-3-5
Hydraulic Component.....	T1-3-6
Electrical Component.....	T1-3-10
Hybrid Related Component.....	T1-3-11
Hybrid System Cooling Component.....	T1-3-13

(Blank)

SECTION 2

SYSTEM

CONTENTS

Group 1 Controller

Outline	T2-1-1
CAN Circuit	T2-1-2

Group 2 Control System

Outline	T2-2-1
Engine Control	T2-2-4
Pump Control	T2-2-40
Valve Control (Standard)	T2-2-76
Valve Control (Option)	T2-2-98
Pump/Valve Combination Control	T2-2-108
Other Control	T2-2-116

Group 3 Engine System

Outline	T2-3-1
Fuel Injection Control	T2-3-4
Fuel Injection Amount Correction Control	T2-3-12
EGR Control	T2-3-14
Engine Output Restriction Control (INDUCEMENT)	T2-3-16
Preheating Control	T2-3-19
Variable Turbocharger Control	T2-3-20
Alarm Control	T2-3-21
Muffler Filter Control	T2-3-22

Group 4 Hydraulic System

Outline	T2-4-1
Pilot Circuit	T2-4-2
Main Circuit	T2-4-12
Breaker/Pulverizer/Crusher Circuit (Option)	T2-4-34

Group 5 Electrical System

Outline	T2-5-1
Main Circuit	T2-5-2
Electric Power Circuit (Key Switch: OFF)	T2-5-4
CAN Circuit	T2-5-6
Accessory Related Circuit (Key Switch: ACC)	T2-5-8
Starting Circuit (Key Switch: START)	T2-5-10
Engine Start Assist Circuit	T2-5-12
Charging Circuit (Key Switch: ON)	T2-5-14
Surge Voltage Prevention Circuit	T2-5-18
Pilot Shut-Off Circuit (Key Switch: ON)	T2-5-20
Auto Shut-Down Standby Shut-Down Circuit/ Automatic Engine Stop Circuit at Low Temperature	T2-5-24
Engine Stop Circuit	T2-5-26
Monitor Circuit	T2-5-29

Security Circuit	T2-5-30
Radio Circuit	T2-5-32
Air Conditioner Circuit	T2-5-32
Accessory Circuit	T2-5-35
Work Light Circuit	T2-5-36
Wiper/Washer Circuit	T2-5-38
Cab Light Circuit	T2-5-40

Group 6 Hybrid System

Outline	T2-6-1
Energy Management Control	T2-6-4
Power Management Control	T2-6-6
Engine Assist Control	T2-6-10
Hybrid System Activation/Braking Torque Limit Control	T2-6-14
Swing Control	T2-6-16
Lithium-ion Battery Temperature Control	T2-6-26
Cooling/Warm-up circuit of Lithium-ion Battery	T2-6-28
Cooling circuit of swing electric motor, PCU-A, PCU-S	T2-6-30
Power Electrical Circuit for Electric Components	T2-6-32

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$