

Technical Manual

Troubleshooting

ZW

120-6

Wheel Loader

ZW120-6 WHEEL LOADER TECHNICAL MANUAL TROUBLESHOOTING

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

PRINTED IN JAPAN (K) 2018, 05

TTNSA60-EN-00

Service Manual consists of the following separate Part No.

Technical Manual (Operational Principle)	: Vol. No.TONSA60-EN
Technical Manual (Troubleshooting)	: Vol. No.TTNSA60-EN
Workshop Manual	: Vol. No.WNSA60-EN
Engine Manual	: Vol. No.ETLADA0-EN

SECTION 4

OPERATIONAL PERFORMANCE TEST

CONTENTS

Group 1 Introduction

Operational Performance Tests.....	T4-1-1
Preparation for Performance Tests	T4-1-2

Group 2 Standard

Operational Performance Standard Table	T4-2-1
Sensor Activating Range	T4-2-8

Group 3 Engine Test

Engine Speed	T4-3-1
Lubricant Consumption	T4-3-3

Group 4 Machine Performance Test

Travel Speed	T4-4-1
Service Brake Function Check	T4-4-4
Service Brake Wear Amount.....	T4-4-6
Parking Brake Function Check	T4-4-7
Bucket Stopper and Bell Crank Stopper Clearance.....	T4-4-8
Hydraulic Cylinder Cycle Time	T4-4-10
Dig Function Drift Check.....	T4-4-12
Bucket Levelness.....	T4-4-13
Control Lever Operating Force.....	T4-4-14
Control Lever Stroke	T4-4-16

Group 5 Component Test

Primary Pilot Pressure.....	T4-5-1
Secondary Pilot Pressure.....	T4-5-3
HST Pump Delivery Pressure.....	T4-5-4
HST Pump Relief Pressure	T4-5-5
HST Charge Pump Delivery Pressure	T4-5-7
HST Pump Displacement Angle Control Pressure... ..	T4-5-8
Main Relief Set Pressure	T4-5-10
Steering Relief Pressure	T4-5-14
Brake/Transmission Pump Delivery Pressure.....	T4-5-16
Transmission Clutch Pressure	T4-5-17
HST Motor Displacement Angle Control Pressure.....	T4-5-19
Accumulator Gas Pressure (Ride Control Circuit)	T4-5-21
Accumulator Gas Pressure Adjustment Procedure (Ride Control Circuit)	T4-5-23

Group 6 Adjustment

REWRITE OF AFTERTREATMENT DEVICE SERIAL NO.	T4-6-1
HOW TO CLEAR FAULT CODE	T4-6-2

AIR BLEEDING FROM THE DEF DEFROSTING

PIPING.....	T4-6-4
REMEDY AT ENGINE OIL CHANGE REQUEST	T4-6-5
REMEDY AT DEF PRESSURE DECREASE.....	T4-6-6
REMEDY AT DEF ABNORMAL QUALITY.....	T4-6-8
CLEAN DEF TANK.....	T4-6-10
REMEDY WHEN MIXING OIL IN DEF TANK	T4-6-12
AFTERTREATMENT DEVICE FORCIBLE MANUAL REGENERATION PROCEDURE	T4-6-13

(Blank)

SECTION 5

TROUBLESHOOTING

CONTENTS

Group 1 Diagnosing Procedure

INTRODUCTION	T5-1-1
DIAGNOSIS PROCEDURE	T5-1-2
ELECTRICAL SYSTEM INSPECTION	T5-1-5
PRECAUTIONS FOR INSPECTION AND MAINTENANCE	T5-1-6
INSTRUCTIONS FOR DISCONNECTING CONNECTORS	T5-1-8
FUSE INSPECTION	T5-1-10
FUSE AND FUSIBLE LINK INSPECTION	T5-1-13
BATTERY VOLTAGE CHECK	T5-1-14
HOW TO CHECK ALTERNATOR	T5-1-15
CONTINUITY CHECK.....	T5-1-16
VOLTAGE AND CURRENT MEASUREMENT.....	T5-1-18
CHECK BY FALSE SIGNAL	T5-1-26
Test Wire Harness	T5-1-27

Group 2 Monitor

OPERATING PROCEDURES OF SERVICE MENU.....	T5-2-3
COOLANT TEMPERATURE GAUGE AND HST OIL TEMPERATURE GAUGE.....	T5-2-9
FUEL GAUGE AND DEF GAUGE	T5-2-10

Group 3 e-Service

OVERVIEW.....	T5-3-1
LIST OF OPERATION DATA	T5-3-2
SNAPSHOT DATA	T5-3-6
COMMUNICATION SYSTEM	T5-3-7

Group 4 Component Layout

MAIN COMPONENT (OVERVIEW).....	T5-4-1
MAIN COMPONENT	T5-4-3
ELECTRICAL SYSTEM (OVERVIEW)	T5-4-5
AIR CLEANER, RADIATOR, AND SURROUNDINGS	T5-4-6
BATTERY BOX.....	T5-4-8
FRAME: REAR RIGHT INSIDE	T5-4-8
HYDRAULIC OIL TANK.....	T5-4-9
FUEL TANK	T5-4-10
CAB.....	T5-4-11
FRONT CONSOLE.....	T5-4-12
RIGHT CONSOLE	T5-4-13
REAR CONSOLE.....	T5-4-14
CONROL UNIT	T5-4-15
ENGINE.....	T5-4-17
AFTERTREATMENT DEVICE	T5-4-18
TRANSMISSION/HST MOTOR	T5-4-19
PUMP DEVICE	T5-4-20

CONTROL VALVE.....	T5-4-21
PILOT SHUTOFF SOLENOID VALVE	T5-4-22
RIDE CONTROL VALVE.....	T5-4-23
DEF TANK.....	T5-4-24
DEF SUPPLY MODULE.....	T5-4-25

Group 5 Troubleshooting A

TROUBLESHOOTING A (BASE MACHINE DIAGNOSIS BY USING FAULT CODES)	
Procedure	T5-5-1
MC FAULT CODE LIST	T5-5-3
HST CONTROLLER FAULT CODE LIST.....	T5-5-11
INFORMATION CONTROLLER FAULT CODE LIST	T5-5-17
COLUMN DISPLAY CONTROLLER FAULT CODE LIST	T5-5-18
AIR CONDITIONER CONTROLLER FAULT CODE LIST	T5-5-20
COMMUNICATION TERMINAL FAULT CODE LIST....	T5-5-21
MC FAULT CODES 111000 to 111002	T5-5-22
MC FAULT CODE 111003.....	T5-5-23
MC FAULT CODES 111006, 111007, 111030	T5-5-25
CAN1 HARNESS CHECK.....	T5-5-26
MC FAULT CODES 111008, 111014, 111025	T5-5-31
CAN2 HARNESS CHECK.....	T5-5-32
MC FAULT CODES 111103, 111106, 111107	T5-5-35
MC FAULT CODE 111217.....	T5-5-37
MC FAULT CODE 111313.....	T5-5-38
MC FAULT CODE 111422.....	T5-5-39
MC FAULT CODE 111908.....	T5-5-40
MC FAULT CODE 111909.....	T5-5-41
HST CONTROLLER FAULT CODES 111027, 111028.....	T5-5-42
HST CONTROLLER FAULT CODE 111332	T5-5-43
HST CONTROLLER FAULT CODES 111330, 111331	T5-5-44
HST CONTROLLER FAULT CODES 111430, 111434, 111455.....	T5-5-45
HST CONTROLLER FAULT CODE 111457	T5-5-46
HST CONTROLLER FAULT CODES 111450, 111451	T5-5-47
HST CONTROLLER FAULT CODE 111622	T5-5-48
HST CONTROLLER FAULT CODE 111904	T5-5-49
HST CONTROLLER FAULT CODE 111905	T5-5-50
INFORMATION MONITOR CONTROLLER FAULT CODE 115001	T5-5-51

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$