

Technical Manual

Operational Principle

ZW220-6

Wheel Loader

ZW220-6 WHEEL LOADER TECHNICAL MANUAL OPERATIONAL PRINCIPLE

TONEK50-EN-01

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TONEK50-EN
Technical Manual (Troubleshooting) : Vol. No.TTNEK50-EN
Workshop Manual : Vol. No.WNEK50-EN

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

PRINTED IN JAPAN (K) 2018, 09

SECTION 1

GENERAL

CONTENTS

Group 1 Specifications

Specifications	T1-1-1
----------------------	--------

Group 2 Component Layout

Main Component (Overview)	T1-2-1
Main Component.....	T1-2-3
Electrical System (Overview)	T1-2-5
Air Cleaner and Radiator Assembly.....	T1-2-6
Battery Box.....	T1-2-8
Hydraulic Oil Tank	T1-2-9
Fuel Tank	T1-2-10
Drive Unit.....	T1-2-11
Front Axle.....	T1-2-12
Cab	T1-2-13
Engine	T1-2-19
Aftertreatment Device	T1-2-20
Fan Valve	T1-2-21
Pump Device	T1-2-22
Control Valve.....	T1-2-22
Manifold Valve.....	T1-2-23
Parking Brake Solenoid Valve	T1-2-23
Brake Charge Valve.....	T1-2-23
2-Spool Solenoid Valve Unit.....	T1-2-23
Emergency Steering Block.....	T1-2-24
Emergency Steering Pump	T1-2-24
Flow Regulator Valve	T1-2-24
DEF Tank.....	T1-2-25
DEF Supply Module.....	T1-2-25

Group 3 Component Specifications

Engine	T1-3-1
Engine Accessories	T1-3-5
Hydraulic Component.....	T1-3-6
Electrical Component.....	T1-3-11

(Blank)

SECTION 2

SYSTEM

CONTENTS

Group 1 Controller

Outline	T2-1-1
CAN Circuit	T2-1-2

Group 2 Control System

Outline	T2-2-1
Engine Control (ECM)	T2-2-4
Pump Control	T2-2-39
Transmission Control (TCU)	T2-2-44
Forward/Reverse Lever Priority Control	T2-2-48
Fan Control, Valve Control	T2-2-63
Control by Electrical and Hydraulic Combined Circuit	T2-2-95

Group 3 Engine System

Outline	T2-3-1
ECM System	T2-3-2
Fuel Injection Control	T2-3-4
Fuel Injection Amount Correction Control	T2-3-12
EGR Control	T2-3-14
Preheating Control	T2-3-16
Variable Turbocharger Control	T2-3-17
Alarm Control	T2-3-18
Urea SCR System	T2-3-19
Engine Output Restriction Control (INDUCEMENT)	T2-3-30
Aftertreatment Device	T2-3-36
Aftertreatment Device Regeneration Control	T2-3-38

Group 4 Hydraulic System

Outline	T2-4-1
Pilot Circuit	T2-4-2
Parallel Circuit Flow Rate Control	T2-4-32
Main Circuit	T2-4-34
Steering Control Circuit	T2-4-36
Fan Circuit	T2-4-48
Emergency (Secondary) Steering Circuit	T2-4-50

Group 5 Electrical System

Outline	T2-5-1
Main Circuit	T2-5-2
Electric Power Circuit (Key Switch: OFF)	T2-5-4
CAN Circuit	T2-5-6
Accessory Circuit (Key Switch: ACC)	T2-5-8
Starting Circuit (Key Switch: START)	T2-5-10
Charging Circuit (Key Switch: ON)	T2-5-12
Surge Voltage Prevention Circuit	T2-5-16

Pilot Shut-Off Circuit (Key Switch: ON)	T2-5-18
Auto Shut-Down (Idling Stop) Circuit	T2-5-20
Engine Stop Circuit	T2-5-22
Air Conditioner Circuit	T2-5-24
Steering Column Box Circuit	T2-5-27
Headlight Circuit	T2-5-28
Hazard Light Circuit (Key Switch: OFF)	T2-5-34
Turn Signal Light Circuit	T2-5-36
Horn Circuit (Key Switch: OFF)	T2-5-38
Back Buzzer Circuit	T2-5-40
Brake Light Circuit	T2-5-42
Parking Brake Circuit	T2-5-44
Accessory Circuit	T2-5-49
Work Light Circuit	T2-5-50
Wiper Circuit	T2-5-52
Cab Light Circuit	T2-5-58

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$