

Technical Manual

Operational Principle

ZW

250-6

Wheel Loader

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TONEM50-EN
Technical Manual (Troubleshooting) : Vol. No.TTNEM50-EN
Workshop Manual : Vol. No.WNEM50-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Specifications

Specifications	T1-1-1
----------------------	--------

Group 2 Component Layout

Main Component (Overview)	T1-2-1
Main Component	T1-2-2
Electrical System (Overview)	T1-2-4
Air Cleaner and Radiator Assembly	T1-2-5
Battery Box	T1-2-7
Hydraulic Oil Tank	T1-2-8
Fuel Tank	T1-2-9
Drive Unit	T1-2-10
Front Axle	T1-2-11
Cab	T1-2-12
Engine	T1-2-18
Aftertreatment Device	T1-2-19
Fan Valve	T1-2-20
Pump Device	T1-2-21
Multiple Control Valve	T1-2-21
Manifold Valve	T1-2-22
Parking Brake Solenoid Valve	T1-2-22
Brake Charge Valve	T1-2-22
2-Spool Solenoid Valve Unit	T1-2-22
Emergency Steering Block	T1-2-23
Emergency Steering Pump	T1-2-23
Flow Regulator Valve	T1-2-23
DEF Tank	T1-2-24
DEF Supply Module	T1-2-24

Group 3 Component Specifications

Engine	T1-3-1
Engine Accessories	T1-3-5
Hydraulic Component	T1-3-6
Electrical Component	T1-3-12

(Blank)

SECTION 2

SYSTEM

CONTENTS

Group 1 Controller

Outline	T2-1-1
CAN Circuit	T2-1-2

Group 2 Control System

Outline	T2-2-1
Engine Control (ECM)	T2-2-4
Pump Control	T2-2-37
Transmission Control (TCU)	T2-2-42
Fan Control, Valve Control	T2-2-61
Other Controls	T2-2-71
Control by Electrical and Hydraulic Combined Circuit	T2-2-95

Group 3 Engine System

Outline	T2-3-1
ECM System	T2-3-2
Fuel Injection Control	T2-3-4
Fuel Injection Volume Correction Control	T2-3-12
EGR Control	T2-3-14
Preheating Control	T2-3-16
Variable Turbocharger Control	T2-3-17
Alarm Control	T2-3-18
Urea SCR System	T2-3-19
Engine Output Restriction Control (INDUCEMENT)	T2-3-30
Aftertreatment Device	T2-3-36
Aftertreatment Device Regeneration Control	T2-3-38

Group 4 Hydraulic System

Outline	T2-4-1
Pilot Circuit	T2-4-2
Main Circuit	T2-4-34
Steering Control Circuit	T2-4-36
Front Attachment Control Circuit	T2-4-40
Fan Circuit	T2-4-48
Emergency Steering Circuit (Option)	T2-4-50

Group 5 Electrical System

Outline	T2-5-1
Main Circuit	T2-5-2
Electric Power Circuit (Key Switch: OFF)	T2-5-4
CAN Circuit	T2-5-6
Accessory Circuit (Key Switch: ACC)	T2-5-8
Starting Circuit (Key Switch: START)	T2-5-10
Neutral Engine Start Circuit	T2-5-12
Charging Circuit (Key Switch: ON)	T2-5-14

Surge Voltage Prevention Circuit	T2-5-18
Pilot Shut-Off Circuit (Key Switch: ON)	T2-5-20
Auto Idling Stop Circuit	T2-5-22
Engine Stop Circuit	T2-5-24
Monitor Circuit	T2-5-27
Air Conditioner Circuit	T2-5-28
Steering Column Monitor Circuit	T2-5-31
Head Light Circuit	T2-5-32
Hazard Light Circuit (Key Switch: OFF)	T2-5-38
Turn Signal Light Circuit	T2-5-40
Horn Circuit (Key Switch: OFF)	T2-5-42
Reverse Light/Buzzer Circuit	T2-5-44
Brake Light Circuit	T2-5-46
Parking Brake Circuit	T2-5-48
Accessory Circuit	T2-5-53
Work Light Circuit	T2-5-54
Wiper Circuit	T2-5-56
Cab Dome Light Circuit	T2-5-62

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$