

# Technical Manual

## Operational Principle

# ZW250-6

## Wheel Loader

ZW250-6 WHEEL LOADER TECHNICAL MANUAL OPERATIONAL PRINCIPLE

TONEM50-EN-01

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

PRINTED IN JAPAN (K) 2018, 08

Service Manual consists of the following separate Part No.  
Technical Manual (Operational Principle) : Vol. No.TONEM50-EN  
Technical Manual (Troubleshooting) : Vol. No.TTNEM50-EN  
Workshop Manual : Vol. No.WNEM50-EN



---

## SECTION 1

# GENERAL

### CONTENTS

#### Group 1 Specifications

|                                 |        |
|---------------------------------|--------|
| Specifications .....            | T1-1-1 |
| Weight of Main Components ..... | T1-1-2 |

#### Group 2 Component Layout

|                                                  |         |
|--------------------------------------------------|---------|
| Main Component (Overview) .....                  | T1-2-1  |
| Main Component .....                             | T1-2-2  |
| Electrical System (Overview) .....               | T1-2-4  |
| Air Cleaner / Radiator Assembly .....            | T1-2-5  |
| Battery Box .....                                | T1-2-7  |
| Hydraulic Oil Tank .....                         | T1-2-8  |
| Fuel Tank .....                                  | T1-2-9  |
| Drive Unit .....                                 | T1-2-10 |
| Front Axle .....                                 | T1-2-11 |
| Cab .....                                        | T1-2-12 |
| Engine .....                                     | T1-2-19 |
| Aftertreatment Device .....                      | T1-2-20 |
| Fan Valve .....                                  | T1-2-21 |
| Pump Device .....                                | T1-2-22 |
| Multiple Control Valve .....                     | T1-2-22 |
| Manifold Valve .....                             | T1-2-23 |
| Parking Brake Solenoid Valve .....               | T1-2-23 |
| Brake Charge Valve .....                         | T1-2-23 |
| 2-Spool Solenoid Valve Unit .....                | T1-2-23 |
| Steering Valve Block .....                       | T1-2-24 |
| Emergency Steering Pump .....                    | T1-2-24 |
| Flow Regulator Valve .....                       | T1-2-24 |
| DEF Tank .....                                   | T1-2-25 |
| DEF Supply Module .....                          | T1-2-25 |
| Joystick Steering Hydraulic Component Layout ... | T1-2-26 |
| Joystick Steering Cab Components .....           | T1-2-28 |

#### Group 3 Component Specifications

|                            |         |
|----------------------------|---------|
| Engine .....               | T1-3-1  |
| Engine Accessories .....   | T1-3-5  |
| Hydraulic Component .....  | T1-3-6  |
| Electrical Component ..... | T1-3-12 |

---

(Blank)

---

## SECTION 2

# SYSTEM

### CONTENTS

#### Group 1 Controller

|                   |        |
|-------------------|--------|
| Outline .....     | T2-1-1 |
| CAN Circuit ..... | T2-1-2 |

#### Group 2 Control System

|                                                               |          |
|---------------------------------------------------------------|----------|
| Outline .....                                                 | T2-2-1   |
| Engine Control (ECM) .....                                    | T2-2-6   |
| Pump Control .....                                            | T2-2-37  |
| Transmission Control (TCU) .....                              | T2-2-42  |
| Fan Control, Valve Control .....                              | T2-2-61  |
| Other Controls .....                                          | T2-2-71  |
| Control by Electrical and<br>Hydraulic Combined Circuit ..... | T2-2-95  |
| JSS Control System .....                                      | T2-2-101 |

#### Group 3 Engine System

|                                                         |         |
|---------------------------------------------------------|---------|
| Outline .....                                           | T2-3-1  |
| ECM System .....                                        | T2-3-2  |
| Fuel Injection Control .....                            | T2-3-4  |
| Fuel Injection Volume Correction Control .....          | T2-3-12 |
| EGR Control .....                                       | T2-3-14 |
| Preheating Control .....                                | T2-3-16 |
| Variable Turbocharger Control .....                     | T2-3-17 |
| Alarm Control .....                                     | T2-3-18 |
| Urea SCR System .....                                   | T2-3-19 |
| Engine Output Restriction Control<br>(INDUCEMENT) ..... | T2-3-30 |
| Aftertreatment Device .....                             | T2-3-36 |
| Aftertreatment Device Regeneration Control .....        | T2-3-38 |

#### Group 4 Hydraulic System

|                                              |         |
|----------------------------------------------|---------|
| Outline .....                                | T2-4-1  |
| Pilot Circuit .....                          | T2-4-2  |
| Main Circuit .....                           | T2-4-34 |
| Steering Control Circuit .....               | T2-4-36 |
| Front Attachment Control Circuit .....       | T2-4-40 |
| Fan Circuit .....                            | T2-4-48 |
| Emergency (Secondary) Steering Circuit ..... | T2-4-50 |
| Joystick Steering Hydraulic System .....     | T2-4-53 |

#### Group 5 Electrical System

|                                                |         |
|------------------------------------------------|---------|
| Outline .....                                  | T2-5-1  |
| Main Circuit .....                             | T2-5-2  |
| Electric Power Circuit (Key Switch: OFF) ..... | T2-5-4  |
| CAN Circuit .....                              | T2-5-6  |
| Accessory Circuit (Key Switch: ACC) .....      | T2-5-8  |
| Starting Circuit (Key Switch: START) .....     | T2-5-10 |

|                                                 |         |
|-------------------------------------------------|---------|
| Neutral Engine Start Circuit .....              | T2-5-12 |
| Charging Circuit (Key Switch: ON) .....         | T2-5-14 |
| Surge Voltage Prevention Circuit .....          | T2-5-18 |
| Pilot Shut-Off Circuit (Key Switch: ON) .....   | T2-5-20 |
| Auto Shut-Down (Idling Stop) Circuit .....      | T2-5-22 |
| Engine Stop Circuit .....                       | T2-5-24 |
| Monitor Circuit .....                           | T2-5-27 |
| Steering Column Monitor Circuit .....           | T2-5-31 |
| Head Light Circuit .....                        | T2-5-32 |
| Hazard Light Circuit (Key Switch: OFF) .....    | T2-5-38 |
| Turn Signal Light Circuit .....                 | T2-5-40 |
| Horn Circuit (Key Switch: OFF) .....            | T2-5-42 |
| Reverse Light/Buzzer Circuit .....              | T2-5-44 |
| Brake Light Circuit .....                       | T2-5-46 |
| Parking Brake Circuit .....                     | T2-5-48 |
| Accessory Circuit .....                         | T2-5-53 |
| Work Light Circuit .....                        | T2-5-54 |
| Wiper Circuit .....                             | T2-5-56 |
| Cab Dome Light Circuit .....                    | T2-5-62 |
| JSS Electrical System .....                     | T2-5-65 |
| Outline .....                                   | T2-5-66 |
| Joystick Steering Electrical Circuit .....      | T2-5-70 |
| Forward/Reverse Switch Electrical Circuit ..... | T2-5-72 |

It's a preview. You can download the full file by clicking the link below.

**<https://shop servicemanual.com/>**

Service Manuals from 2\$