

Technical Manual

Troubleshooting

ZW

250-6

Wheel Loader

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

SECTION 4

OPERATIONAL PERFORMANCE TEST

CONTENTS

Group 1 Introduction

Operational Performance Tests.....	T4-1-1
Preparation for Performance Tests	T4-1-2

Digging Position Adjustment.....	T4-6-3
----------------------------------	--------

Group 2 Standard

Operational Performance Standard Table	T4-2-1
Main Pump P-Q Diagram	T4-2-10
Sensor Activating Range.....	T4-2-12

Group 3 Engine Test

Engine Speed	T4-3-1
Lubricant Consumption	T4-3-3

Group 4 Machine Performance Test

Travel Speed	T4-4-1
Service Brake Function Check	T4-4-4
Service Brake Wear Amount.....	T4-4-6
Parking Brake Function Check	T4-4-7
Bucket Stopper Clearance, Lever (Bell Crank)	
Stopper Clearance.....	T4-4-8
Hydraulic Cylinder Cycle Time	T4-4-10
Cylinder Drift Check.....	T4-4-12
Bucket Levelness.....	T4-4-13
Control Lever Operating Force.....	T4-4-14
Control Lever Stroke	T4-4-16

Group 5 Component Test

Primary Pilot Pressure (Including Brake Circuit)	T4-5-1
Secondary Pilot Pressure.....	T4-5-4
Solenoid Valve Set Pressure	T4-5-6
Main Pump Delivery Pressure.....	T4-5-8
Loading Circuit Main Relief Set Pressure	T4-5-10
Steering Circuit Relief Set Pressure.....	T4-5-14
Loading Overload Relief Valve Set Pressure	T4-5-16
Main Pump Flow Rate Measurement.....	T4-5-18
Service Brake Pressure (Front and Rear)	T4-5-26
Parking Brake Release Pressure	T4-5-28
Brake Accumulator Pressure	T4-5-30
Brake Warning Pressure (Pressure-Decreasing)	T4-5-32
Brake Warning Pressure (Pressure-Increasing)	T4-5-34
Transmission Clutch Pressure	T4-5-36
Torque Converter Pressure	T4-5-38

Group 6 Adjustment

Rewrite of Aftertreatment Device Serial No.....	T4-6-1
Clean DEF Tank.....	T4-6-2
Transmission Learning	T4-6-3
Lift Arm Angle Sensor Learning.....	T4-6-3

(Blank)

SECTION 5

TROUBLESHOOTING

CONTENTS

Group 1 Diagnosing Procedure

Introduction.....	T5-1-1
Diagnosis Procedure.....	T5-1-2
Electric System Inspection.....	T5-1-5
Precautions for Inspection and Maintenance.....	T5-1-6
Instructions for Disconnecting Connectors	T5-1-8
Fuse Inspection.....	T5-1-10
Fusible Link Inspection	T5-1-12
Battery Voltage Check.....	T5-1-13
Alternator Check	T5-1-14
Continuity Check.....	T5-1-16
Voltage and Current Measurement.....	T5-1-18
Check by False Signal	T5-1-25
Test Harness	T5-1-26
Surge Voltage and Surge Suppression Diodes.....	T5-1-28

Group 2 Monitor

Outline	T5-2-1
Operating Procedures of Service Menu.....	T5-2-2
Troubleshooting.....	T5-2-4
Monitoring	T5-2-6
Controller Version	T5-2-16
Issued Warning Record	T5-2-17
Communication Terminal Status	T5-2-22
Machine Setting	T5-2-24
Aftertreatment Device No.	T5-2-33
Engine Tachometer	T5-2-34
Transmission Oil Temperature Gauge and DEF/AdBlue Level Gauge.....	T5-2-35
Coolant Temperature Gauge	T5-2-36

Group 3 e-Service

Outline	T5-3-1
List of Operation Data	T5-3-2
Snapshot Data.....	T5-3-6
Communication System	T5-3-7

Group 4 Component Layout

Main Component (Overview).....	T5-4-1
Main Component.....	T5-4-2
Electrical System (Overview)	T5-4-4
Air Cleaner and Radiator Assembly.....	T5-4-5
Battery Box.....	T5-4-7
Hydraulic Oil Tank	T5-4-8
Fuel Tank	T5-4-9
Drive Unit.....	T5-4-10
Front Axle.....	T5-4-11

Cab	T5-4-12
Engine	T5-4-18
Aftertreatment Device	T5-4-19
Fan Valve	T5-4-20
Pump Device	T5-4-21
Multiple Control Valve.....	T5-4-21
Manifold Valve.....	T5-4-22
Parking Brake Solenoid Valve	T5-4-22
Brake Charge Valve.....	T5-4-22
2-Spool Solenoid Valve Unit.....	T5-4-22
Steering Valve.....	T5-4-23
Emergency Steering Pump	T5-4-23
Flow Regulator Valve	T5-4-23
DEF Tank.....	T5-4-24
DEF Supply Module.....	T5-4-24

Group 5 Troubleshooting A

Troubleshooting A (Base Machine Diagnosis By Using Fault Codes) Procedure.....	T5-5-1
MPDr. Fault Code Reference Table	T5-5-3
MC Fault Code List.....	T5-5-9
Monitor Controller (Monitor) Fault Code List	T5-5-21
Monitor Controller (Information) Fault Code List.....	T5-5-22
Column Display Controller Fault Code List.....	T5-5-25
Air Conditioner Controller Fault Code List.....	T5-5-27
Communication Terminal Fault Code List	T5-5-28
ECM Fault Code List.....	T5-5-29
TCU Fault Code List	T5-5-59
MC Fault Codes 111000 to 111002.....	T5-5-79
MC Fault Code 111003.....	T5-5-80
MC Fault Codes 111006, 111007, 111009, 111011	T5-5-83
Monitor Controller (Monitor) Fault Codes 113002, 113003, 113005, 113012.....	T5-5-83
CAN1 Harness Check	T5-5-84
CAN3 Harness Check	T5-5-88
MC Fault Codes 111008, 111010, 111014, 111025.....	T5-5-91
Monitor Controller (Monitor) Fault Codes 113004, 113006, 113007.....	T5-5-91
CAN2 Harness Check	T5-5-92
MC Fault Code 111100.....	T5-5-95
MC Fault Codes 111103, 111106, 111107	T5-5-96
MC Fault Codes 111205, 111207	T5-5-97
MC Fault Codes 111200, 111202, 111203	T5-5-98

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$