

Technical Manual

Troubleshooting

ZW

310-6

Wheel Loader

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

SECTION 4

OPERATIONAL PERFORMANCE TEST

CONTENTS

Group 1 Introduction

Operational Performance Tests.....	T4-1-1
Preparation for Performance Tests	T4-1-2

Group 2 Standard

Operational Performance Standard Table	T4-2-1
Sensor Activating Range.....	T4-2-10

Group 3 Engine Test

Engine Speed	T4-3-1
--------------------	--------

Group 4 Machine Performance Test

Travel Speed	T4-4-1
Parking Brake Function Check	T4-4-3
Service Brake Function Check	T4-4-4
Service Brake Wear Amount.....	T4-4-6
Bucket Stopper Clearance, Lever (Bell Crank) Stopper Clearance.....	T4-4-8
Hydraulic Cylinder Cycle Time	T4-4-10
Cylinder Drift Check.....	T4-4-12
Bucket Levelness.....	T4-4-13
Control Lever Operating Force.....	T4-4-14
Control Lever Stroke	T4-4-16

Group 5 Component Test

Primary Pilot Pressure (Unloader Valve Setting Pressure)	T4-5-1
Secondary Pilot Pressure (Reducing Valve Setting Pressure)	T4-5-3
Parallel/Tandem Switching Solenoid Valve Set Pressure.....	T4-5-4
Main Pump Delivery Pressure.....	T4-5-6
Loading Circuit Main Relief Set Pressure	T4-5-8
Steering Circuit Pilot Pressure	T4-5-10
Steering Circuit Main Relief Set Pressure.....	T4-5-12
Overload Relief Valve Set Pressure	T4-5-14
Service Brake Pressure (Front and Rear)	T4-5-16
Parking Brake Pressure.....	T4-5-18
Brake Accumulator Pressure	T4-5-20
Brake Warning Pressure (Pressure-Decreasing)	T4-5-22
Brake Warning Pressure (Pressure-Increasing)	T4-5-24
Transmission Clutch Pressure	T4-5-26
Torque Converter Pressure	T4-5-28

Group 6 Adjustment

Rewrite of Aftertreatment Device Serial No.....	T4-6-1
---	--------

(Blank)

SECTION 5

TROUBLESHOOTING

CONTENTS

Group 1 Diagnosing Procedure

Introduction.....	T5-1-1
Diagnosis Procedure.....	T5-1-2
Electric System Inspection.....	T5-1-5
Precautions for Inspection and Maintenance	T5-1-6
Instructions for Disconnecting Connectors	T5-1-8
Fuse Inspection.....	T5-1-10
Fusible Link Inspection	T5-1-12
Battery Voltage Check.....	T5-1-13
Alternator Check	T5-1-14
Continuity Check.....	T5-1-16
Voltage and Current Measurement.....	T5-1-18
Check by False Signal	T5-1-25
Test Harness	T5-1-26

Group 2 Monitor

Outline	T5-2-1
Operating Procedures of Service Menu.....	T5-2-2
Engine Output Restriction Suspend	T5-2-4
Troubleshooting.....	T5-2-6
Monitoring	T5-2-8
Controller Version	T5-2-16
Issued Warning Record	T5-2-17
Communication Terminal Status.....	T5-2-22
Machine Setting	T5-2-24
Aftertreatment Device No.	T5-2-34
Engine Tachometer	T5-2-35
Transmission Oil Temperature Gauge and DEF/ AdBlue Level Gauge	T5-2-36
Coolant Temperature Gauge	T5-2-37

Group 3 e-Service

Outline	T5-3-1
List of Operation Data	T5-3-2
Snapshot Data.....	T5-3-6
Communication System	T5-3-7

Group 4 Component Layout

Main Component	T5-4-1
Electric Component Layout (Overview).....	T5-4-4
Electrical System (Cab).....	T5-4-5
Electrical System (Relays)	T5-4-10
Electrical System (Around Hydraulic Oil Tank).....	T5-4-11
Electrical System (Around Fuel Tank).....	T5-4-12
Engine	T5-4-13
Aftertreatment Device	T5-4-14
Air Cleaner	T5-4-15

Hydraulic Pump	T5-4-16
Transmission and Torque Converter Assembly.....	T5-4-17
Multiple Control Valve.....	T5-4-18
Unloader Valve (Brake Charge Valve)/ Combination Valve.....	T5-4-19
Flow Regulator Valve	T5-4-20
Brake Valve	T5-4-20
Ride Control Valve (Option).....	T5-4-20
Emergency Steering Group (Option).....	T5-4-21
Steering Valve.....	T5-4-21
Emergency Steering Pump (Option).....	T5-4-21

Group 5 Troubleshooting A

Troubleshooting A (Base Machine Diagnosis By Using Fault Codes) Procedure	T5-5-1
MC Fault Code List.....	T5-5-9
Monitor Controller (Monitor) Fault Code List	T5-5-29
Monitor Controller (Information) Fault Code List.....	T5-5-31
Column Display Controller Fault Code List.....	T5-5-34
Air Conditioner Controller Fault Code List.....	T5-5-36
Communication Terminal Fault Code List	T5-5-37
ECM Fault Code List.....	T5-5-39
MC Fault Codes 111000 to 111002.....	T5-5-59
MC Fault Code 111003.....	T5-5-60
MC Fault Codes 111006, 111007, 111009	T5-5-62
Monitor Controller (Monitor) Fault Codes 113002, 113003, 113005	T5-5-62
Monitor Controller (Information) Fault Codes 114010, 114011, 114013	T5-5-62
CAN1 Harness Check	T5-5-63
MC Fault Codes 111008, 111010, 111014, 111025.....	T5-5-66
Monitor Controller (Monitor) Fault Codes 113004, 113006, 113007	T5-5-66
Monitor Controller (Information) Fault Codes 114012, 114014, 114015	T5-5-66
CAN2 Harness Check	T5-5-68
MC Fault Codes 111103, 111105, 111106	T5-5-71
MC Fault Codes 111205, 111207	T5-5-72
MC Fault Codes 111200, 111202, 111203	T5-5-73
MC Fault Codes 111217, 111312	T5-5-74
MC Fault Code 111204.....	T5-5-75
MC Fault Codes 111206, 111208	T5-5-76
MC Fault Codes 111311, 111313	T5-5-77
MC Fault Code 111407	T5-5-78

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$