

Technical Manual

Troubleshooting

ZW

330-6

Wheel Loader

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

SECTION 4

OPERATIONAL PERFORMANCE TEST

CONTENTS

Group 1 Introduction

Operational Performance Tests.....	T4-1-1
Preparation for Performance Tests	T4-1-2

Group 2 Standard

Operational Performance Standard Table	T4-2-1
Sensor Activating Range.....	T4-2-10

Group 3 Engine Test

Engine Speed	T4-3-1
--------------------	--------

Group 4 Machine Performance Test

Travel Speed	T4-4-1
Parking Brake Function Check	T4-4-3
Service Brake Function Check	T4-4-4
Service Brake Wear Amount.....	T4-4-6
Bucket Stopper Clearance, Bell Crank Stopper Clearance.....	T4-4-8
Hydraulic Cylinder Cycle Time	T4-4-10
Cylinder Drift Check.....	T4-4-12
Bucket Levelness.....	T4-4-13
Control Lever Operating Force.....	T4-4-14
Control Lever Stroke	T4-4-16

Group 5 Component Test

Primary Pilot Pressure (Brake Charge Valve Setting Pressure).....	T4-5-1
Secondary Pilot Pressure (Reducing Valve Setting Pressure).....	T4-5-3
Parallel/Tandem Switching Solenoid Valve Set Pressure	T4-5-4
Solenoid Valve Adjustment Procedure.....	T4-5-5
Main Pump Delivery Pressure.....	T4-5-6
Loading Circuit Main Relief Set Pressure	T4-5-8
Main Relief Valve Pressure Adjustment Procedure.....	T4-5-9
Steering Circuit Pilot Pressure	T4-5-10
Steering Circuit Main Relief Set Pressure.....	T4-5-12
Steering Relief Valve Pressure Adjustment Procedure.....	T4-5-13
Overload Relief Valve Set Pressure	T4-5-14
Service Brake Pressure (Front and Rear)	T4-5-16
Parking Brake Pressure.....	T4-5-18
Brake Accumulator Pressure	T4-5-20
Accumulator Pressure.....	T4-5-21
Number of Brake Pedal Applications	T4-5-21
Accumulator Charge Time.....	T4-5-21

Brake Warning Pressure (Pressure-Decreasing)	T4-5-22
Brake Warning Pressure (Pressure-Increasing)	T4-5-24
Transmission Clutch Pressure	T4-5-26
Transmission Clutch Pack Combination.....	T4-5-27
Torque Converter Pressure	T4-5-28

Group 6 Adjustment

Rewrite of Aftertreatment Device Serial No.....	T4-6-1
Transmission Learning	T4-6-2
Lift Arm Angle Sensor Learning.....	T4-6-2
Digging Position Adjustment.....	T4-6-2

(Blank)

SECTION 5

TROUBLESHOOTING

CONTENTS

Group 1 Diagnosing Procedure

Introduction.....	T5-1-1
Diagnosis Procedure.....	T5-1-2
Electric System Inspection.....	T5-1-5
Precautions for Inspection and Maintenance.....	T5-1-6
Instructions for Disconnecting Connectors	T5-1-8
Fuse Inspection.....	T5-1-10
Fuse Box A	T5-1-11
Fuse Box B	T5-1-11
Fusible Link Inspection	T5-1-12
Battery Voltage Check.....	T5-1-13
Alternator Check	T5-1-14
Continuity Check.....	T5-1-16
Voltage and Current Measurement.....	T5-1-18
24-Volt Circuit	T5-1-18
5-Volt Circuit.....	T5-1-24
Check by False Signal	T5-1-25
Test Harness	T5-1-26
Surge Voltage and Surge Suppression Diodes.....	T5-1-28

Group 2 Monitor

Outline	T5-2-1
Operating Procedures of Service Menu.....	T5-2-2
How to display service menu.....	T5-2-3
Engine Output Restriction Suspend	T5-2-4
Troubleshooting.....	T5-2-6
Monitoring	T5-2-8
List of Monitoring Item.....	T5-2-10
Controller Version	T5-2-16
Issued Warning Record	T5-2-17
List of Alarm.....	T5-2-18
Communication Terminal Status	T5-2-22
List of Communication Terminal Status	T5-2-23
Machine Setting	T5-2-24
Transmission Learning.....	T5-2-26
Lift Arm Angle Sensor Learning	T5-2-30
Digging Position Adjustment	T5-2-32
Aftertreatment Device No.	T5-2-34
Engine Tachometer	T5-2-35
Transmission Oil Temperature Gauge and	
DEF Level Gauge.....	T5-2-36
Coolant Temperature Gauge	T5-2-37

Group 3 e-Service

Outline	T5-3-1
List of Operation Data	T5-3-2

List of Daily Report Data	T5-3-2
List of Frequency Distribution Data.....	T5-3-4
List of Total Operating Hours	T5-3-5
Snapshot Data.....	T5-3-6
Communication System	T5-3-7

Group 4 Component Layout

Main Component.....	T5-4-1
Electric Component Layout (Overview).....	T5-4-4
Electrical System (Cab).....	T5-4-5
Controller and Relays	T5-4-6
Right Console.....	T5-4-7
Monitor and Switches.....	T5-4-8
Monitor Panel	T5-4-9
Electrical System (Relays).....	T5-4-10
Electrical System (Around Hydraulic Oil Tank).....	T5-4-11
Electrical System (Around Fuel Tank).....	T5-4-12
Engine	T5-4-13
Aftertreatment Device	T5-4-14
Air Cleaner	T5-4-15
Hydraulic Pump	T5-4-16
Main Pump.....	T5-4-16
Pilot Pump.....	T5-4-16
Drive Unit.....	T5-4-17
Transmission and Torque Converter.....	T5-4-17
Multiple Control Valve.....	T5-4-18
Brake Charge Valve/Combination Valve	T5-4-19
Flow Regulator Valve	T5-4-20
Brake Valve	T5-4-20
Ride Control Valve.....	T5-4-20
Emergency Steering Group	T5-4-21
Steering Valve.....	T5-4-21
Emergency Steering Pump	T5-4-21
Joystick Steering System (Option)	T5-4-22
Joystick Steering Valve	T5-4-23
2-Spool Solenoid Valve Unit and	
Pressure Sensor.....	T5-4-23
Control Unit (JSS).....	T5-4-24
Operator's Seat (JSS)	T5-4-25
DEF Tank and DEF Supply Module.....	T5-4-26

Group 5 Troubleshooting A

Troubleshooting A (Base Machine Diagnosis	
By Using Fault Codes) Procedure.....	T5-5-1
MPDr. Fault Code Reference Table	T5-5-3
MC Fault Code List	T5-5-9
Controller Hardware Failure.....	T5-5-9

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$