

Technical Manual

Operational Principle

ZX

135US-6

Hydraulic Excavator

ZX135US-6 HYDRAULIC EXCAVATOR TECHNICAL MANUAL OPERATIONAL PRINCIPLE

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TODAS50-EN
Technical Manual (Troubleshooting) : Vol. No.TTDAS50-EN
Workshop Manual : Vol. No.WDAS50-EN
Engine Manual : Vol. No.EDBR50-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Specifications

Specifications	T1-1-1
Working Ranges (Grouser shoe)	T1-1-4

Group 2 Component Layout

Main Component.....	T1-2-1
Electrical System (Overview)	T1-2-5
Electrical System (Rear Tray).....	T1-2-6
Electrical System (Switch Panel)	T1-2-7
Electrical System (Around Air Cleaner)	T1-2-8
Electrical System (Relays)	T1-2-9
Engine	T1-2-10
Aftertreatment Device	T1-2-11
Aftertreatment Device	T1-2-12
Pump Device	T1-2-13
Around Pump Device	T1-2-14
Control Valve.....	T1-2-15
Signal Control Valve	T1-2-15
Swing Device.....	T1-2-17
Travel Device.....	T1-2-17
4-Spool Solenoid Valve Unit.....	T1-2-18
Maximum Pump 1 Flow Rate Limit Control Solenoid Valve	T1-2-18
2-Spool Solenoid Valve Unit (Aftertreatment Device Regeneration Control)	T1-2-18
DEF Tank.....	T1-2-19
DEF Supply Module.....	T1-2-19
Layout of Attachment Spec. Parts.....	T1-2-21

Group 3 Component Specifications

Engine	T1-3-1
Engine Accessories	T1-3-5
Hydraulic Component.....	T1-3-6
Electrical Component.....	T1-3-10
Optional Parts	T1-3-11

(Blank)

SECTION 2

SYSTEM

CONTENTS

Group 1 Controller

Outline	T2-1-1
CAN Circuit	T2-1-2

Group 2 Control System

Outline	T2-2-1
Engine Control	T2-2-4
Pump Control	T2-2-34
Valve Control (Standard)	T2-2-52
Valve Control (Option)	T2-2-70
Other Control	T2-2-80

Group 3 Engine System

ECM System	T2-3-1
Fuel Injection Control	T2-3-2
Fuel Injection Amount Correction Control	T2-3-10
EGR Control	T2-3-12
Preheating Control	T2-3-14
Variable Turbocharger Control	T2-3-15
Alarm Control	T2-3-16
Urea SCR System	T2-3-17
Engine Output Restriction Control (INDUCEMENT)	T2-3-28
Aftertreatment Device	T2-3-32
Aftertreatment Device Regeneration Control	T2-3-36

Group 4 Hydraulic System

Outline	T2-4-1
Pilot Circuit	T2-4-2
Main Circuit	T2-4-14
Blade/Breaker/Pulverizer/Crusher Circuit (Option)	T2-4-32
Outline (2-Piece Boom)	T2-4-41
Pilot Circuit (2-Piece Boom)	T2-4-42
Main Circuit (2-Piece Boom)	T2-4-46

Group 5 Electrical System

Outline	T2-5-1
Main Circuit	T2-5-2
Electric Power Circuit (Key Switch: OFF)	T2-5-4
CAN Circuit	T2-5-6
Accessory Related Circuit (Key Switch: ACC)	T2-5-8
Starting Circuit (Key Switch: START)	T2-5-10
Charging Circuit (Key Switch: ON)	T2-5-12
Surge Voltage Prevention Circuit	T2-5-16
Pilot Shut-Off Circuit (Key Switch: ON)	T2-5-18

Auto Shut-Down Circuit/Automatic Engine Stop

Circuit at Low Temperature	T2-5-20
Engine Stop Circuit	T2-5-22
Monitor Circuit	T2-5-25
Security Circuit	T2-5-26
Radio Circuit	T2-5-28
Air Conditioner Circuit	T2-5-28
Accessory Circuit	T2-5-31
Work Light Circuit	T2-5-32
Wiper/Washer Circuit	T2-5-34
Cab Light Circuit	T2-5-36

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$