

Technical Manual

Troubleshooting

ZX

135US-6

Hydraulic Excavator

ZX135US-6 HYDRAULIC EXCAVATOR TECHNICAL MANUAL TROUBLESHOOTING

 Hitachi Construction Machinery Co., Ltd.

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TODAS50-EN
Technical Manual (Troubleshooting) : Vol. No.TTDAS50-EN
Workshop Manual : Vol. No.WDAS50-EN
Engine Manual : Vol. No.EDBR50-EN

SECTION 4

OPERATIONAL PERFORMANCE TEST

CONTENTS

Group 1 Introduction

Operational Performance Tests.....	T4-1-1
Preparation for Performance Tests	T4-1-2

Group 2 Standard

Operational Performance Standard Table	T4-2-1
Main Pump P-Q Diagram (P1, P2)	T4-2-11
Sensor Activating Range.....	T4-2-13
Monitor Indicating Values.....	T4-2-14

Group 3 Engine Test

Engine Speed	T4-3-1
Lubricant Consumption	T4-3-4

Group 4 Machine Performance Test

Travel Speed	T4-4-1
Track Revolution Speed	T4-4-2
Mistrack Check.....	T4-4-3
Travel Parking Leakage	T4-4-4
Swing Speed.....	T4-4-5
Swing Function Drift Check	T4-4-6
Swing Motor Leakage	T4-4-8
Maximum Swingable Slant Angle.....	T4-4-10
Swing Bearing Play	T4-4-12
Hydraulic Cylinder Cycle Time	T4-4-14
Dig Function Drift Check.....	T4-4-16
Control Lever Operating Force.....	T4-4-20
Control Lever Stroke	T4-4-21
Combined Operation of Boom Raise and Swing Function Check	T4-4-22
Combined Operation of Boom Raise and Arm Roll-In Function Check	T4-4-23
Clearance of Front Attachment Connecting Part.....	T4-4-24

Group 5 Component Test

Primary Pilot Pressure.....	T4-5-1
Secondary Pilot Pressure.....	T4-5-3
4-Spool Solenoid Valve Set Pressure.....	T4-5-4
2-Spool Solenoid Valve (Aftertreatment Device Regeneration Control) Set Pressure.....	T4-5-5
Main Pump Delivery Pressure.....	T4-5-7
Main Relief Set Pressure	T4-5-8
Relief Pressure (when relieving swing)	T4-5-14
Overload Relief Valve Set Pressure	T4-5-16
Main Pump Flow Rate Measurement.....	T4-5-20
Swing Motor Drainage.....	T4-5-28

Travel Motor Drainage	T4-5-30
-----------------------------	---------

Group 6 Adjustment

Rewrite of Aftertreatment Device Serial No.....	T4-6-1
How to Clear Fault Code.....	T4-6-2
Procedure after Replacing DCU and ECM	T4-6-3
Air Bleeding from the Diesel Exhaust Fluid Defrosting Piping	T4-6-4
How to Check Manual Regeneration Switch	T4-6-6
Remedy at DEF Pressure Decrease	T4-6-8
Remedy at DEF Abnormal Quality	T4-6-10
Clean DEF Tank.....	T4-6-12
Remedy when Mixing Oil in DEF Tank.....	T4-6-14

(Blank)

SECTION 5

TROUBLESHOOTING

CONTENTS

Group 1 Diagnosing Procedure

Introduction.....	T5-1-1
Diagnosis Procedure.....	T5-1-2
Electrical System Inspection	T5-1-5
Precautions for Inspection and Maintenance	T5-1-6
Instructions for Disconnecting Connectors	T5-1-8
Fuse Inspection.....	T5-1-10
Fusible Link Inspection	T5-1-13
Battery Voltage Check.....	T5-1-14
Alternator Check	T5-1-15
Continuity Check.....	T5-1-16
Voltage and Current Measurement.....	T5-1-18
Check by False Signal	T5-1-26
Test Wire Harness	T5-1-27

Group 2 Monitor

Outline	T5-2-1
Operating Procedures of Service Menu.....	T5-2-2
Setting Menu	T5-2-43
Inspection of Engine Oil Level, Coolant Level, Hour Meter, and Fuel Gauge	T5-2-48
Fuel Gauge, Coolant Temperature Gauge, DEF Gauge	T5-2-49

Group 3 e-Service

Outline	T5-3-1
List of Operation Data	T5-3-2
Communication System	T5-3-4

Group 4 Component Layout

Main Component.....	T5-4-1
Electrical System (Overview)	T5-4-5
Electrical System (Rear Tray).....	T5-4-6
Electrical System (Switch Panel)	T5-4-7
Electrical System (Around Air Cleaner)	T5-4-8
Electrical System (Relays)	T5-4-9
Engine	T5-4-10
Aftertreatment Device	T5-4-11
Aftertreatment Device	T5-4-12
Pump Device	T5-4-13
Around Pump Device	T5-4-14
Control Valve.....	T5-4-15
Signal Control Valve	T5-4-15
Swing Device	T5-4-17
Travel Device.....	T5-4-17
4-Spool Solenoid Valve Unit.....	T5-4-18

Maximum Pump 1 Flow Rate Limit Control Solenoid Valve	T5-4-18
2-Spool Solenoid Valve Unit (Aftertreatment Device Regeneration Control)	T5-4-18
DEF Tank.....	T5-4-19
DEF Supply Module.....	T5-4-19
Layout of Attachment Spec. Parts.....	T5-4-21
Components in Control Valve.....	T5-4-26
Pilot Port.....	T5-4-44

Group 5 Troubleshooting A

Troubleshooting A (Base Machine Diagnosis By Using Fault Codes) Procedure.....	T5-5-1
MC Fault Code List.....	T5-5-3
ECM Fault Code List.....	T5-5-24
DCU Fault Code List.....	T5-5-38
Monitor Controller (Monitor) Fault Code List	T5-5-46
Monitor Controller (Information) Fault Code List.....	T5-5-47
Air Conditioner Controller Fault Code List.....	T5-5-50
Communication Terminal Fault Code List	T5-5-51
MC Fault Codes 11000 to 11002	T5-5-53
MC Fault Code 11003.....	T5-5-54
MC Fault Codes 11006, 11007, 11009.....	T5-5-57
Monitor Controller (Monitor) Fault Codes 13002, 13003, 13005.....	T5-5-57
CAN0 Harness Check	T5-5-58
ISO-CAN (Engine) Harness Check.....	T5-5-62
MC Fault Codes 11008, 11010	T5-5-65
Monitor Controller (Monitor) Fault Codes 13004, 13006, 13007	T5-5-65
CAN1 Harness Check	T5-5-66
MC Fault Code 11100.....	T5-5-69
MC Fault Code 11101.....	T5-5-70
MC Fault Codes 11200 to 11202	T5-5-71
MC Fault Codes 11206 to 11208	T5-5-72
MC Fault Codes 11301 to 11303	T5-5-73
MC Fault Codes 11304, 11307, 11325	T5-5-74
MC Fault Codes 11995, 11997	T5-5-75
MC Fault Code 11400.....	T5-5-76
MC Fault Code 11401.....	T5-5-77
MC Fault Code 11402.....	T5-5-78
MC Fault Code 11403.....	T5-5-79
MC Fault Code 11407.....	T5-5-80
MC Fault Code 11408.....	T5-5-81
MC Fault Code 11409.....	T5-5-82

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$