

Technical Manual

Troubleshooting

ZX

145W-6

Wheeled Excavator

ZX145W-6 WHEELED EXCAVATOR TECHNICAL MANUAL TROUBLESHOOTING

 Hitachi Construction Machinery Co., Ltd.

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.

Technical Manual (Operational Principle)	: Vol. No.TOLAC50-EN
Technical Manual (Troubleshooting)	: Vol. No.TTLAC50-EN
Workshop Manual	: Vol. No.WLAC50-EN
Engine Manual	: Vol. No.ETLAB50-EN, EWLAB50-EN

SECTION 4

OPERATIONAL PERFORMANCE TEST

CONTENTS

Group 1 Introduction

Operational Performance Tests.....	T4-1-1
Preparation for Performance Tests	T4-1-2

Group 2 Standard

Operational Performance Standard Table	T4-2-1
Main Pump P-Q Diagram	T4-2-12
Sensor Activating Range.....	T4-2-14
Electric Lever	T4-2-15
MPDr. Monitor Indicating Values.....	T4-2-17

Group 3 Engine Test

Engine Speed	T4-3-1
Lubricant Consumption	T4-3-5

Group 4 Machine Performance Test

Travel Speed	T4-4-1
Brake Function Check.....	T4-4-3
Parking Brake Function Check	T4-4-5
Swing Speed.....	T4-4-6
Swing Function Drift Check	T4-4-8
Swing Motor Leakage	T4-4-10
Maximum Swingable Slant Angle.....	T4-4-12
Swing Bearing Play.....	T4-4-14
Hydraulic Cylinder Cycle Time	T4-4-16
Dig Function Drift Check.....	T4-4-19
Control Lever Operating Force.....	T4-4-24
Control Lever Stroke	T4-4-25
Combined Operation of Boom Raise and Swing Function Check.....	T4-4-26
Clearance of Front Attachment Connecting Part..	T4-4-28
Electric Lever Operating Force (Blade/Outrigger, Positioning, Auxiliary)	T4-4-29

Group 5 Component Test

Primary Pilot Pressure.....	T4-5-1
Secondary Pilot Pressure.....	T4-5-3
Secondary Pilot Pressure (Electric Lever)	T4-5-4
Steering Pump Delivery Pressure.....	T4-5-5
4-Spool Solenoid Valve Set Pressure.....	T4-5-6
Pump 1/Pump 2 Flow Rate Control Solenoid Valve Set Pressure	T4-5-7
Axle Lock/Brake Solenoid Valve Set Pressure	T4-5-8
Main Pump Delivery Pressure.....	T4-5-11
Main Relief Set Pressure	T4-5-12
Relief Pressure (when relieving swing)	T4-5-16
Overload Relief Valve Set Pressure	T4-5-17

Main Pump Flow Rate Measurement.....	T4-5-19
Swing Motor Drainage.....	T4-5-27
Steering Relief Pressure	T4-5-29
Brake Pressure (Front and Rear).....	T4-5-31
Brake Accumulated Pressure	T4-5-34
Brake Warning Pressure (Pressure-Decreasing)	T4-5-37
Brake Warning Pressure (Pressure-Increasing)	T4-5-40

Group 6 Adjustment

Rewrite of Aftertreatment Device Serial No.....	T4-6-1
How to Clear Fault Code.....	T4-6-2
Air Bleeding from the Diesel Exhaust Fluid Defrosting Piping	T4-6-4
Remedy at Engine Oil Replacement Request	T4-6-5
Remedy at DEF Pressure Decrease	T4-6-6
Remedy at DEF Abnormal Quality	T4-6-8
Clean DEF Tank.....	T4-6-10
Remedy when Mixing Oil in DEF Tank.....	T4-6-12

(Blank)

SECTION 5

TROUBLESHOOTING

CONTENTS

Group 1 Diagnosing Procedure

Introduction.....	T5-1-1
Diagnosis Procedure.....	T5-1-2
Electrical System Inspection	T5-1-5
Precautions for Inspection and Maintenance	T5-1-6
Instructions for Disconnecting Connectors	T5-1-8
Fuse Inspection.....	T5-1-10
Fusible Link Inspection	T5-1-13
Battery Voltage Check.....	T5-1-14
Alternator Check	T5-1-15
Continuity Check.....	T5-1-16
Voltage and Current Measurement.....	T5-1-18
Check by False Signal	T5-1-26
Test Wire Harness	T5-1-27
Electric Lever Check.....	T5-1-29

Group 2 Monitor

Outline	T5-2-1
Operating Procedures of Service Menu.....	T5-2-2
Setting Menu	T5-2-47
Inspection of Engine Oil Level, Hour Meter and Fuel Gauge	T5-2-52
Fuel Gauge, Coolant Temperature Gauge, DEF Gauge	T5-2-53

Group 3 e-Service

Outline	T5-3-1
List of Operation Data	T5-3-2
Communication System	T5-3-4

Group 4 Component Layout

Main Component	T5-4-1
Electrical System (Overview)	T5-4-5
Electrical System (Cab)	T5-4-7
Electrical System (Switch Panel).....	T5-4-8
Electrical System (Controller, Relays).....	T5-4-10
Electrical System (Cab Rear)	T5-4-12
Electrical System (Relays)	T5-4-13
Electrical System (Lights)	T5-4-14
Engine.....	T5-4-15
Pump Device.....	T5-4-17
Around Pump Device.....	T5-4-18
Control Valve.....	T5-4-19
Signal Control Valve.....	T5-4-20
Swing Shockless Valve.....	T5-4-21
Swing Device	T5-4-22
Accumulator Charging Valve.....	T5-4-22

Swing Dampener Valve	T5-4-22
Travel Shockless Valve	T5-4-23
Brake Valve.....	T5-4-23
Solenoid Valve Unit.....	T5-4-24
Transmission Control Solenoid Valve	T5-4-26
Travel Device.....	T5-4-26
Around DEF Tank	T5-4-27
Layout of Attachment Spec. Parts.....	T5-4-28
Auxiliary Control Solenoid Valve Unit	T5-4-29
Breaker Relief Solenoid Valve.....	T5-4-29
Selector Valve Control Valve	T5-4-29
Layout of Control Valve	T5-4-30
Pilot Port.....	T5-4-48

Group 5 Troubleshooting A

Troubleshooting A (Base Machine Diagnosis By

Using Fault Codes) Procedure.....	T5-5-1
MC1 Fault Code List	T5-5-3
MC2 Fault Code List	T5-5-22
ECM Fault Code List.....	T5-5-40
Monitor Controller (Monitor) Fault Code List	T5-5-227
Monitor Controller (Information) Fault Code List	T5-5-228
Air Conditioner Controller Fault Code List.....	T5-5-231
Communication Terminal Fault Code List.....	T5-5-232
MC1 Fault Codes 11000 to 11002	T5-5-234
MC1 Fault Code 11003	T5-5-235
MC1 Fault Codes 11006, 11007, 11009	T5-5-237
Monitor Controller (Monitor) Fault Codes 13002, 13003, 13005	T5-5-237
CAN0 Harness Check	T5-5-238
LOCAL-CAN (Engine) Harness Check	T5-5-241
MC1 Fault Codes 11008, 11010, 11016	T5-5-243
Monitor Controller (Monitor) Fault Codes 13004, 13006, 13007	T5-5-243
CAN1 Harness Check	T5-5-244
MC1 Fault Code 11100	T5-5-249
MC1 Fault Code 11101	T5-5-250
MC1 Fault Codes 11200, 11202, 11205	T5-5-251
MC1 Fault Codes 11206, 11208.....	T5-5-252
MC1 Fault Codes 11301 to 11303	T5-5-253
MC1 Fault Codes 11305 to 11307	T5-5-254
MC1 Fault Codes 11310, 11311	T5-5-255
MC1 Fault Code 11325	T5-5-256
MC1 Fault Codes 11995, 11997.....	T5-5-257
MC1 Fault Code 11400	T5-5-258

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$