

Technical Manual

Operational Principle

ZX

190LC-6

190LCN-6

Hydraulic Excavator

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.

Technical Manual (Operational Principle)	: Vol. No.TODBS50-EN
Technical Manual (Troubleshooting)	: Vol. No.TTDBS50-EN
Workshop Manual	: Vol. No.WDBS50-EN
Engine Manual	: Vol. No.ETDC150-EN, EWDC150-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Specifications

Specifications	T1-1-1
Working Ranges (Grouser shoe)	T1-1-3

Group 2 Component Layout

Main Component	T1-2-1
Electrical System (Overview)	T1-2-3
Electrical System (Rear Tray)	T1-2-4
Electrical System (Switch Panel)	T1-2-5
Electrical System (Utility Space)	T1-2-6
Electrical System (Relays)	T1-2-7
Engine	T1-2-8
Aftertreatment Device	T1-2-9
Pump Device	T1-2-10
Around Pump Device	T1-2-11
Control Valve	T1-2-12
Signal Control Valve	T1-2-12
Swing Device	T1-2-14
Travel Device	T1-2-14
5-Spool Solenoid Valve Unit	T1-2-15
2-Spool Solenoid Valve Unit (Aftertreatment Device Regeneration Control)	T1-2-15
DEF Tank	T1-2-16
DEF Supply Module	T1-2-16
Layout of Attachment Spec. Parts	T1-2-18
Components Related with Breaker	T1-2-20

Group 3 Component Specifications

Engine	T1-3-1
Engine Accessories	T1-3-5
Hydraulic Component	T1-3-6
Electrical Component	T1-3-10

(Blank)

SECTION 2

SYSTEM

CONTENTS

Group 1 Controller

Outline	T2-1-1
CAN Circuit	T2-1-2

Group 2 Control System

Outline	T2-2-1
Engine Control	T2-2-4
Pump Control	T2-2-36
Valve Control (Standard)	T2-2-60
Valve Control (Optional)	T2-2-78
Other Control	T2-2-88

Group 3 Engine System

ECM System	T2-3-1
Fuel Injection Control	T2-3-2
Fuel Injection Amount Correction Control	T2-3-10
EGR Control	T2-3-12
Preheating Control	T2-3-14
Variable Turbocharger Control	T2-3-15
Alarm Control	T2-3-16
Urea SCR System	T2-3-17
Engine Output Restriction Control (INDUCEMENT)	T2-3-28
Aftertreatment Device	T2-3-32
Aftertreatment Device Regeneration Control	T2-3-34

Group 4 Hydraulic System

Outline	T2-4-1
Pilot Circuit	T2-4-2
Main Circuit	T2-4-14
Breaker/Pulverizer/Crusher Circuit (Optional)	T2-4-36

Group 5 Electrical System

Outline	T2-5-1
Main Circuit	T2-5-2
Electric Power Circuit (Key Switch: OFF)	T2-5-4
CAN Circuit	T2-5-6
Accessory Related Circuit (Key Switch: ACC)	T2-5-8
Starting Circuit (Key Switch: START)	T2-5-10
Charging Circuit (Key Switch: ON)	T2-5-12
Surge Voltage Prevention Circuit	T2-5-16
Pilot Shut-Off Circuit (Key Switch: ON)	T2-5-18
Auto Shut-Down Circuit/Automatic Engine Stop Circuit at Low Temperature	T2-5-20
Engine Stop Circuit	T2-5-22
Monitor Circuit	T2-5-25
Security Circuit	T2-5-26

Radio Circuit	T2-5-28
Air Conditioner Circuit	T2-5-28
Accessory Circuit	T2-5-31
Work Light Circuit	T2-5-32
Wiper/Washer Circuit	T2-5-34
Cab Light Circuit	T2-5-36

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$