

Technical Manual

Operational Principle

ZX

225US-5A

225USLC-5A

Hydraulic Excavator

 **Hitachi Construction Machinery Co., Ltd.**
URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TODFU90-EN
Technical Manual (Troubleshooting) : Vol. No.TTDFU90-EN
Workshop Manual : Vol. No.WDFU90-EN
Engine Manual : Vol. No.ETDCY-EN, EWDCY-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Specifications

Specifications	T1-1-1
Working Ranges (Triple Grouser shoe)	T1-1-2

Group 2 Component Layout

Main Component.....	T1-2-1
Electrical System (Overview)	T1-2-5
Electrical System (Rear Tray).....	T1-2-6
Electrical System (Switch Panel).....	T1-2-7
Electrical System (Utility Space).....	T1-2-8
Electrical System (Relays)	T1-2-9
Engine	T1-2-10
Pump Device	T1-2-11
Around Pump Device	T1-2-12
Control Valve.....	T1-2-13
Signal Control Valve	T1-2-15
Swing Device	T1-2-16
Travel Device.....	T1-2-16
5-Spool Solenoid Valve Unit.....	T1-2-17
Layout of Attachment Spec. Parts	T1-2-18
Components Related with Breaker.....	T1-2-19

Group 3 Component Specifications

Engine	T1-3-1
Engine Accessories	T1-3-5
Hydraulic Component.....	T1-3-6
Electrical Component.....	T1-3-10
Optional Parts	T1-3-11

(Blank)

SECTION 2

SYSTEM

CONTENTS

Group 1 Controller

Outline	T2-1-1
CAN Circuit	T2-1-2

Group 2 Control System

Outline	T2-2-1
Engine Control	T2-2-4
Pump Control	T2-2-36
Valve Control (Standard)	T2-2-58
Valve Control (Optional)	T2-2-74
Other Controls	T2-2-84

Group 3 ECM SYSTEM

Outline	T2-3-1
Fuel Injection Control	T2-3-2
Fuel Injection Amount Correction Control	T2-3-10
EGR Control	T2-3-12
Preheating Control	T2-3-14
Alarm Control	T2-3-15

Group 4 Hydraulic System

Outline	T2-4-1
Pilot Circuit	T2-4-2
Main Circuit	T2-4-12
Breaker/Pulverizer/Crusher Circuit (Option)	T2-4-34

Group 5 Electrical System

Outline	T2-5-1
Main Circuits	T2-5-2
Electric Power Circuit (Key Switch: OFF)	T2-5-4
CAN Circuit	T2-5-6
Accessory-Related Circuit (Key Switch: ACC)	T2-5-8
Starting Circuit (Key Switch: START)	T2-5-10
Charging Circuit (Key Switch: ON)	T2-5-12
Surge Voltage Prevention Circuit	T2-5-16
Pilot Shut-Off Circuit (Key Switch: ON)	T2-5-18
Auto Shut-Down Circuit/Automatic Engine	
Stop Circuit at Low Temperature	T2-5-20
Engine Stop Circuit	T2-5-22
Monitor Circuit	T2-5-25
Security Circuit	T2-5-26
Radio Circuit	T2-5-28
Air Conditioner Circuit	T2-5-28
Accessory Circuit	T2-5-31
Work Light Circuit	T2-5-32
Wiper/Washer Circuit	T2-5-34
Cab Light Circuit	T2-5-36

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$