

Technical Manual

Operational Principle

ZX

470-6

470LC-6

490H-6

490LCH-6

490R-6

490LCR-6

530LCH-6

Hydraulic Excavator

Service Manual consists of the following separate Part No.

Technical Manual (Operational Principle)	: Vol. No.TOJAG50-EN
Technical Manual (Troubleshooting)	: Vol. No.TTJAG50-EN
Workshop Manual	: Vol. No.WJAG50-EN
Engine Manual	: Vol. No.ETJAG50-EN, EWJAG50-EN

 Hitachi Construction Machinery Co., Ltd.

URL:<http://www.hitachi-c-m.com>

SECTION 1

GENERAL

CONTENTS

Group 1 Specifications

Specifications ZX470-6, 470LC-6	T1-1-1
Working Ranges ZX470-6, 470LC-6	T1-1-2
Specifications ZX490H-6, 490LCH-6	T1-1-3
Working Ranges ZX490H-6, 490LCH-6	T1-1-4
Specifications ZX530LCH-6	T1-1-5
Working Ranges ZX530LCH-6	T1-1-6

Group 2 Component Layout

Main Component	T1-2-1
Electrical System (Overview)	T1-2-3
Electrical System (Rear Tray)	T1-2-4
Electrical System (Switch Panel)	T1-2-5
Electrical System (Cab Behind Side)	T1-2-6
Engine 1	T1-2-8
Engine 2	T1-2-9
Aftertreatment Device	T1-2-10
Pump Device	T1-2-11
Control Valve	T1-2-12
DEF Tank	T1-2-13
Expansion Tank	T1-2-13
Check Valve	T1-2-14
Signal Control Valve	T1-2-14
4-Spool Solenoid Valve Unit	T1-2-17
2-Spool Solenoid Valve Unit	T1-2-17
Fan Valve	T1-2-17
Layout of Attachment Spec. Parts (Hydraulic System)	T1-2-18

Group 3 Component Specifications

Engine	T1-3-1
Engine Accessories	T1-3-5
Hydraulic Component	T1-3-7
Electrical Component	T1-3-11

(Blank)

SECTION 2

SYSTEM

CONTENTS

Group 1 Controller

Outline	T2-1-1
CAN Circuit	T2-1-2

Group 2 Control System

Outline	T2-2-1
Engine Control	T2-2-4
Pump Control	T2-2-34
Valve Control (Standard)	T2-2-62
Other Control	T2-2-94

Group 3 Engine System

Outline	T2-3-1
ECM System	T2-3-2
Fuel Injection Control	T2-3-4
Fuel Injection Amount Correction Control	T2-3-12
EGR Control	T2-3-14
Preheating Control	T2-3-16
Variable Turbocharger Control	T2-3-17
Alarm Control	T2-3-18
Urea SCR System	T2-3-19
Engine Output Restriction Control (INDUCEMENT)	T2-3-30
Aftertreatment Device	T2-3-34
Aftertreatment Device Regeneration Control	T2-3-36

Group 4 Hydraulic System

Outline	T2-4-1
Pilot Circuit	T2-4-2
Main Circuit	T2-4-18
Breaker/Pulverizer/Crusher Circuit (Optional)	T2-4-44

Group 5 Electrical System

Outline	T2-5-1
Main Circuit	T2-5-2
Electric Power Circuit (Key Switch: OFF)	T2-5-4
CAN Circuit	T2-5-6
Accessory Circuit (Key Switch: ACC)	T2-5-8
Starting Circuit (Key Switch: START)	T2-5-10
Charging Circuit (Key Switch: ON)	T2-5-12
Surge Voltage Prevention Circuit	T2-5-16
Pilot Shut-Off Circuit (Key Switch: ON)	T2-5-18
Auto Shut-Down Circuit/Automatic Engine Stop Circuit at Low Temperature	T2-5-20
Engine Stop Circuit	T2-5-22
Monitor Circuit	T2-5-25
Security Circuit	T2-5-26

Radio Circuit	T2-5-28
Air Conditioner Circuit	T2-5-28
Accessory Circuit	T2-5-31
Work Light Circuit	T2-5-32
Wiper/Washer Circuit	T2-5-34
Cab Light Circuit	T2-5-36

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$