

Technical Manual

Troubleshooting

ZX

870-6

870LC-6

890H-6

890LCH-6

890R-6

890LCR-6

Hydraulic Excavator

 Hitachi Construction Machinery Co., Ltd.

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TOJBL40-EN
Technical Manual (Troubleshooting) : Vol. No.TTJBL40-EN
Workshop Manual : Vol. No.WJBL40-EN
Engine Manual : Vol. No.ETJBL40-EN, EWJBL40-EN

SECTION 4

OPERATIONAL PERFORMANCE TEST

CONTENTS

Group 1 Introduction

Operational Performance Tests.....	T4-1-1
Preparation for Performance Tests	T4-1-2

Group 2 Standard

Operational Performance Standard Table	T4-2-1
Main Pump P-Q Diagram	T4-2-5
Fan Pump P-Q Diagram	T4-2-6
Fan Pump I-Q Diagram.....	T4-2-7
MPDr. Monitor Indicating Values (MC)	T4-2-8
MPDr. Monitor Indicating Values (ECM).....	T4-2-14
Sensor Activating Range.....	T4-2-15

Group 3 Engine Test

Engine Speed	T4-3-1
Lubricant Consumption	T4-3-4

Group 4 Machine Performance Test

Travel Speed	T4-4-1
Track Revolution Speed	T4-4-2
Mistrack Check.....	T4-4-3
Travel Parking Leakage	T4-4-4
Swing Speed.....	T4-4-5
Swing Function Drift Check	T4-4-6
Swing Motor Leakage	T4-4-8
Maximum Swingable Slant Angle.....	T4-4-10
Swing Bearing Play	T4-4-12
Hydraulic Cylinder Cycle Time	T4-4-14
Dig Function Drift Check.....	T4-4-16
Control Lever Operating Force.....	T4-4-19
Control Lever Stroke	T4-4-20
Combined Operation of Boom Raise and Swing Function Check	T4-4-21

Group 5 Component Test

Primary Pilot Pressure.....	T4-5-1
Secondary Pilot Pressure.....	T4-5-3
4-Spool Solenoid Valve Set Pressure.....	T4-5-4
2-Spool Solenoid Valve Set Pressure.....	T4-5-5
Main Pump Delivery Pressure.....	T4-5-7
Fan Pump Delivery Pressure	T4-5-8
Main Relief Valve Set Pressure	T4-5-9
Overload Relief Valve Set Pressure	T4-5-15
Main Pump Flow Rate Measurement.....	T4-5-20
Fan Pump Flow Rate Measurement	T4-5-26
Swing Motor Drainage.....	T4-5-38
Travel Motor Drainage	T4-5-40

Fan Motor Drainage	T4-5-42
--------------------------	---------

Group 6 Adjustment

PUMP LEARNING	T4-6-1
TORQUE ADJUSTMENT	T4-6-2
CONNECTION	T4-6-3
Rewrite of Aftertreatment Device Serial No.....	T4-6-5
How to Clear Fault Code.....	T4-6-6
Procedure after Replacing DCU and ECM	T4-6-7
Air Bleeding from the Diesel Exhaust Fluid Defrosting Piping	T4-6-8
How to Check Manual Regeneration Switch	T4-6-9
Remedy at DEF Pressure Decrease	T4-6-10
Remedy at DEF Abnormal Quality	T4-6-12
Clean DEF Tank.....	T4-6-14
Remedy when Mixing Oil in DEF Tank.....	T4-6-16

(Blank)

SECTION 5

TROUBLESHOOTING

CONTENTS

Group 1 Diagnosing Procedure

Introduction.....	T5-1-1
Diagnosis Procedure.....	T5-1-2
Electrical System Inspection	T5-1-5
Precautions for Inspection and Maintenance	T5-1-6
Instructions for Disconnecting Connectors	T5-1-8
Fuse Inspection.....	T5-1-10
Fusible Link Inspection	T5-1-13
Battery Voltage Check.....	T5-1-14
Alternator Check	T5-1-15
Continuity Check.....	T5-1-16
Voltage and Current Measurement.....	T5-1-18
Check by False Signal	T5-1-26
Test Wire Harness	T5-1-27

Group 2 Monitor

Outline	T5-2-1
Operating Procedures of Service Menu.....	T5-2-2
Inspection of Engine Oil Level, Coolant Level, Hour Meter, and Fuel Gauge	T5-2-40
Fuel Gauge, Coolant Temperature Gauge, DEF/AdBlue Gauge	T5-2-41

Group 3 e-Service

Outline	T5-3-1
List of Operation Data	T5-3-2
Communication System	T5-3-4

Group 4 Component Layout

Main Component.....	T5-4-1
Around Radiator	T5-4-2
Electrical System (Overview)	T5-4-3
Fuel Pump.....	T5-4-4
Electrical System (Rear Tray).....	T5-4-5
Electrical System (Switch Panel)	T5-4-6
Electrical System (Cab Behind Side)	T5-4-7
Around Horn.....	T5-4-8
Around Oil Cooler	T5-4-9
Auto Lubricating System.....	T5-4-9
Boom Upper Side.....	T5-4-9
Engine	T5-4-10
Aftertreatment Device	T5-4-11
Aftertreatment Device	T5-4-12
Pump Device	T5-4-13
Control Valve.....	T5-4-14
Check Valve	T5-4-15
Signal Control Valve	T5-4-15

4-Spool Solenoid Valve Unit.....	T5-4-18
Fan Valve (Oil Cooler, Radiator)	T5-4-18
2-Spool Solenoid Valve Unit.....	T5-4-18
DEF Tank.....	T5-4-19
DEF Supply Module.....	T5-4-19
Expansion Tank.....	T5-4-20
Pilot Port.....	T5-4-38

Group 5 Troubleshooting A

Troubleshooting A (Base Machine Diagnosis by Using Trouble Symptom) Procedure		T5-5-1
MC Fault Code List.....		T5-5-3
ECM Fault Code List.....		T5-5-25
DCU Fault Code List.....		T5-5-39
Monitor Controller (Monitor) Fault Code List		T5-5-47
Monitor Controller (Information) Fault Code List		T5-5-48
Air Conditioner Controller Fault Code List.....		T5-5-51
Communication Terminal Fault Code List		T5-5-52
MC Fault Codes 11000 to 11002		T5-5-53
MC Fault Code 11003.....		T5-5-54
MC Fault Codes 11004, 11006, 11007, 11009		T5-5-56
Monitor Controller (Monitor) Fault Codes 13002, 13003, 13005		T5-5-56
CAN0 Harness Check		T5-5-57
ISO-CAN (Engine) Harness Check.....		T5-5-60
MC Fault Codes 11005, 11008, 11010.....		T5-5-63
Monitor Controller (Monitor) Fault Codes 13004, 13006, 13007		T5-5-63
CAN1 Harness Check		T5-5-64
MC Fault Code 11100.....		T5-5-67
MC Fault Code 11101.....		T5-5-68
MC Fault Codes 11200, 11202		T5-5-69
MC Fault Codes 11992, 11994		T5-5-70
MC Fault Codes 11301 to 11303		T5-5-71
MC Fault Codes 11304, 11325		T5-5-72
MC Fault Codes 11995, 11997, 11998.....		T5-5-73
MC Fault Codes 11942 to 11944		T5-5-74
MC Fault Codes 11945, 11978, 11979		T5-5-75
MC Fault Code 11990.....		T5-5-76
MC Fault Code 11405.....		T5-5-77
MC Fault Code 11408.....		T5-5-78
MC Fault Code 11412.....		T5-5-79
MC Fault Code 11428.....		T5-5-80
MC Fault Code 11948.....		T5-5-81
MC Fault Code 11950.....		T5-5-82

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$