

# Workshop Manual

## ZX 350LC-6 350LCN-6 Hydraulic Excavator

 **Hitachi Construction Machinery Co., Ltd.**  
URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.  
Technical Manual (Operational Principle) : Vol. No.TODDQ50-EN  
Technical Manual (Troubleshooting) : Vol. No.TTDDQ50-EN  
Workshop Manual : Vol. No.WDDQ50-EN  
Engine Manual : Vol. No.ETDDN50-EN, EWDDN50-EN



---

## SECTION 1

# GENERAL

### CONTENTS

#### **Group 1 Precautions for Disassembling and Assembling**

|                                                    |          |
|----------------------------------------------------|----------|
| Precautions for Disassembling and Assembling ..... | W1-1-1-1 |
|----------------------------------------------------|----------|

#### **Group 2 Tightening**

|                                 |          |
|---------------------------------|----------|
| Tightening Bolts and Nuts ..... | W1-2-1-1 |
| Piping Joint .....              | W1-2-1-4 |

#### **Group 3 Painting**

|                |          |
|----------------|----------|
| Painting ..... | W1-3-1-1 |
|----------------|----------|

#### **Group 4 Bleeding Air**

|                                                                    |          |
|--------------------------------------------------------------------|----------|
| Bleeding Air from Hydraulic System .....                           | W1-4-1-1 |
| Bleeding Air from Fuel System .....                                | W1-4-1-2 |
| Air Bleeding from the Diesel Exhaust Fluid Defrosting Piping ..... | W1-4-1-4 |

#### **Group 5 Preparation**

|                                                     |          |
|-----------------------------------------------------|----------|
| Preparation before Inspection and Maintenance ..... | W1-5-1-1 |
| Hydraulic Circuit Pressure Release Procedure .....  | W1-5-1-3 |
| Pressure Release from Hydraulic Oil Tank .....      | W1-5-1-4 |
| Pressure Release from Expansion Tank .....          | W1-5-1-5 |

---

(Blank)

---

## SECTION 2

# MAINTENANCE STANDARD

### CONTENTS

#### Group 1 Upperstructure

|                   |          |
|-------------------|----------|
| Pump Device ..... | W2-1-1-1 |
| Swing Motor ..... | W2-1-2-1 |

#### Group 2 Undercarriage

|                    |          |
|--------------------|----------|
| Travel Motor ..... | W2-2-1-1 |
| Sprocket .....     | W2-2-1-3 |
| Front Idler .....  | W2-2-2-1 |
| Upper Roller ..... | W2-2-3-1 |
| Lower Roller ..... | W2-2-3-2 |
| Track.....         | W2-2-4-1 |

#### Group 3 Front Attachment

|                                        |          |
|----------------------------------------|----------|
| Pin and Bushing.....                   | W2-3-1-1 |
| Side Cutter (2021232, 2021233) .....   | W2-3-1-3 |
| Point (4512365) .....                  | W2-3-1-4 |
| Side Cutter (4435856, 4435857) .....   | W2-3-1-5 |
| Point (4400253) .....                  | W2-3-1-5 |
| Standard Dimensions for Arm and Bucket |          |
| Connection .....                       | W2-3-1-6 |
| Standard Dimensions for Arm and Boom   |          |
| Connection .....                       | W2-3-1-7 |
| Cylinder .....                         | W2-3-2-1 |

It's a preview. You can download the full file by clicking the link below.

**<https://shop servicemanual.com/>**

Service Manuals from 2\$