

Shop Manual

BULLDOZER

D375A -8R
D375Ai-8R

SERIAL NUMBERS D375A- 90001 and up
 D375Ai-90001

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-21
How to Read the Shop Manual	00-21
Safety Notice for Operation	00-23
Precautions to Prevent Fire	00-31
Procedures If Fire Occurs	00-33
Precautions When You Discard Waste Materials	00-34
Precautions When You Handle Hydraulic Equipment	00-35
Precautions When You Disconnect and Connect Pipings	00-38
Precautions When You Handle Electrical Equipment	00-44
Precautions When You Handle Fuel System Equipment	00-46
Precautions When You Handle Intake System Equipment	00-47
Practical Use of KOMTRAX	00-48
Disconnect and Connect Push-Pull Type Coupler	00-49
Precautions for Disconnection and Connection of Connectors	00-53
How to Disconnect and Connect Deutsch Connector	00-57
How to Disconnect and Connect Slide Lock Type Connector	00-58
How to Disconnect and Connect Connector with Lock to Pull	00-60
How to Disconnect and Connect Connector with Lock to Push	00-61
How to Disconnect and Connect Connector with Housing to Rotate	00-63
Standard Tightening Torque Table	00-64
Conversion Table	00-71
Abbreviation List	00-76
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-7
Weight Table	01-19
Fuel, Coolant, Lubricant	01-23
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-6
System Operating Lamp System	10-6
Battery Disconnect Switch	10-8
Battery Isolator	10-10
Engine System	10-12
Layout Drawing of Engine System	10-12
Engine Control System	10-14
Automatic Idle Stop System	10-17
Component Parts of Engine System	10-20
Fuel System	10-26
Cooling System	10-31
Layout Drawing of Cooling System	10-31
Component Parts of Cooling System	10-33
Control System	10-61
Layout Drawing of Control System	10-61
Machine Monitor System	10-62
KOMTRAX Plus System	10-65
Component Parts of Control System	10-67
Hydraulic System	10-120
Layout Drawing of Hydraulic System	10-120
CLSS	10-121
Component Parts of Hydraulic System	10-124
Power Train System	10-157
Layout Drawing of Power Train System	10-157

Operation of Power Train System	10-160
Transmission, Steering, and Brake Control	10-161
Palm Command Control System	10-166
Centralized Pressure Pickup Port.....	10-171
Component Parts of Power Train System.....	10-173
Work Equipment System.....	10-237
Work Equipment Control	10-237
Layout Drawing of Front Work Equipment.....	10-239
Layout Drawing of Variable Giant Ripper.....	10-240
Layout Drawing of Variable Multi-Shank Ripper	10-241
Shoe Slip Control System	10-242
Component Parts of Work Equipment System	10-243
ICT System	10-260
Layout Drawing of ICT System.....	10-260
System Diagram of ICT Control System.....	10-261
Blade Control System	10-263
Smooth Start System	10-269
Slip Control System.....	10-271
Assist Control System	10-273
Straight Travel Correction System.....	10-275
Smooth Carry System	10-277
Component Parts of ICT System.....	10-279
Lifting System	10-294
Power Ladder System	10-294
Component Parts of Lifting System	10-297
Undercarriage and Frame	10-300
Main Frame.....	10-300
Suspension	10-302
Track Frame and Idler Cushion	10-305
Work Equipment	10-307
Structure of Front Work Equipment	10-307
Structure of Cylinder Stay	10-309
Structure of Variable Giant Ripper.....	10-310
Structure of Variable Multi-Shank Ripper.....	10-311
CAB Related Parts.....	10-312
ROPS.....	10-312
CAB	10-313
CAB Mount	10-314
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: D375A-8R.....	20-3
Standard Value Table for Engine: D375AI-8R.....	20-8
Standard Value Table for Machine.....	20-13
Standard Value Table for Machine: D375A-8R	20-13
Standard Value Table for Machine: D375AI-8R	20-37
Machine Posture and Procedures to Measure Performance	20-61
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-6
Differences In Machine Monitor Symbols	30-7
Related Information on Testing and Adjusting	30-8
Tools for Testing and Adjusting.....	30-8
Sketch of Tools for Testing and Adjusting	30-14
Engine and Cooling System	30-17
Examine Engine Speed.....	30-17
Examine Boost Pressure.....	30-21
Examine Exhaust Gas Temperature.....	30-24

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$