

Shop Manual

DUMP TRUCK

HD325-7
HD405-7

SERIAL NUMBERS

HD325-7001-7025
HD325-7101 and up
HD405-3001-3035
HD405-7101 and up

KOMATSU

DUMP TRUCK

HD325-7

HD405-7

Machine model	Serial number
---------------	---------------

HD325-7	7001 – 7025
HD325-7	7101 and up
HD405-7	3001 – 3035
HD405-7	7101 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00486-09
00 Index and foreword	SEN00743-09
Index	SEN00744-09 ●
Foreword and general information	SEN00745-04
01 Specification	SEN00746-03
Specification and technical data	SEN00747-03
10 Structure, function and maintenance standard	SEN00748-06
Engine and cooling system	SEN00749-02
Power train, Part 1	SEN00750-02
Power train, Part 2	SEN00853-02
Steering system	SEN00751-02
Brake system	SEN00752-04
Undercarriage and frame	SEN00753-03
Hydraulic system	SEN00754-04
Cab and its attachments	SEN00755-02
Electrical system, Part 1	SEN00756-04 ●
Electrical system, Part 2	SEN00757-03
Electrical system, Part 3	SEN00863-02
Electrical system, Part 4	SEN00873-03
20 Standard value table	SEN00758-03
Standard service value table	SEN01181-03
30 Testing and adjusting	SEN00759-04
Testing and adjusting, Part 1	SEN01182-04 ●
Testing and adjusting, Part 2	SEN01183-04 ●
Testing and adjusting, Part 3	SEN01184-03 ●
Testing and adjusting, Part 4	SEN02401-01
40 Troubleshooting	SEN00760-02
General information on troubleshooting	SEN01185-02
Troubleshooting by failure code, General	SEN01186-02
Troubleshooting by failure code, Part 1	SEN01187-02

Troubleshooting by failure code, Part 2	SEN01188-02
Troubleshooting by failure code, Part 3	SEN01189-02
Troubleshooting by failure code, Part 4	SEN01190-02
Troubleshooting by failure code, Part 5	SEN01191-02
Troubleshooting of electrical system (E-mode)	SEN01192-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01193-01
Troubleshooting of mechanical system (S-mode)	SEN01194-02
50 Disassembly and assembly	SEN00761-02
General information on disassembly and assembly	SEN01954-02
Engine and cooling system	SEN01955-02
Power train, Part 1	SEN01956-02
Power train, Part 2	SEN01957-02
Steering system	SEN01958-01
Brake system	SEN01959-02
Undercarriage and frame	SEN01960-02
Hydraulic system	SEN01961-01
Body	SEN01962-01
Cab and its attachments	SEN01963-01
Electrical system	SEN01964-01
90 Diagrams and drawings	SEN00762-06
Hydraulic diagrams and drawings	SEN00763-04
Electrical diagrams and drawings	SEN00764-04

Table of contents

00 Index and foreword	
Index	SEN00744-09
Composition of shop manual	2
Table of contents	4
Foreword and general information	SEN00745-04
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling electric equipment and hydraulic component	11
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN00747-03
Specification drawing	2
Specifications	5
Weight table	17
Fuel, coolant and lubricants	18
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00749-02
Radiator, oil cooler, aftercooler	2
Output shaft	4
Power train, Part 1	SEN00750-02
Power train skeleton	2
Drive shaft	4
Torque converter and transmission hydraulic piping	5
Power train charge pump	6
Retarder cooling pump	7
Torque converter	8
Torque converter valve	14
Transmission	15
Transmission control valve	31
ECMV	32
Power train, Part 2	SEN00853-02
Axle	2
Differential	4
Final drive	6
Wheel	8
Steering system	SEN00751-02
Steering column	2
Steering linkage	3
Brake system	SEN00752-04
Brake piping	2
Brake valve	4
Secondary brake valve	7
Relay valve	8
Front brake cut valve	9
Accumulator charge valve	10

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$