

Shop Manual

DUMP TRUCK

HD325-7R

HD405-7R

SERIAL NUMBERS

HD325-11001

HD405-11001

and up

KOMATSU

DUMP TRUCK

HD325-7R

HD405-7R

Machine model	Serial number
---------------	---------------

HD325-7R	11001 and up
----------	--------------

HD405-7R	11001 and up
----------	--------------

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02373-08
00 Index and foreword	SEN02374-08
Index	SEN02375-08 ●
Foreword and general information	SEN02376-02
01 Specification	SEN02377-00
Specification and technical data	SEN02378-00
10 Structure, function and maintenance standard	SEN02379-02
Engine and cooling system	SEN03095-00
Power train, Part 1	SEN03096-00
Power train, Part 2	SEN03097-00
Steering system	SEN03098-00
Brake system	SEN03099-01
Undercarriage and frame	SEN03100-00
Hydraulic system	SEN03101-01
Cab and its attachments	SEN03102-00
Electrical system, Part 1	SEN03103-00
Electrical system, Part 2	SEN03104-01 ●
Electrical system, Part 3	SEN03105-00
Electrical system, Part 4	SEN03106-00
20 Standard value table	SEN02380-02
Standard service value table	SEN03705-02 ●
30 Testing and adjusting	SEN02381-04
Testing and adjusting, Part 1	SEN03706-04 ●
Testing and adjusting, Part 2	SEN03707-02 ●
Testing and adjusting, Part 3	SEN03708-02 ●
Testing and adjusting, Part 4	SEN03709-00
40 Troubleshooting	SEN02382-03
Failure code table and fuse locations	SEN03710-01
General information on troubleshooting	SEN03711-03 ●
Troubleshooting by failure code, Part 1	SEN03712-01

Troubleshooting by failure code, Part 2	SEN03713-02 ●
Troubleshooting by failure code, Part 3	SEN03714-01
Troubleshooting by failure code, Part 4	SEN03715-01
Troubleshooting by failure code, Part 5	SEN03716-01
Troubleshooting of electrical system (E-mode)	SEN03717-02 ●
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03718-00
Troubleshooting of mechanical system (S-mode)	SEN03719-02 ●
 50 Disassembly and assembly	 SEN02383-02
General information on disassembly and assembly	SEN03720-02 ●
Engine and cooling system	SEN03721-00
Power train, Part 1	SEN03722-01
Power train, Part 2	SEN03723-00
Steering system	SEN03724-00
Brake system	SEN03725-01
Undercarriage and frame	SEN03726-00
Hydraulic system	SEN03727-00
Body	SEN03728-00
Cab and its attachments	SEN03729-00
Electrical system	SEN03730-00
 90 Diagrams and drawings	 SEN02384-06
Hydraulic diagrams and drawings	SEN02385-01
Electrical diagrams and drawings	SEN02386-05 ●

Table of contents

00 Index and foreword

Index	SEN02375-08
Composition of shop manual.....	2
Table of contents	4

Foreword and general information

Safety notice.....	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36

01 Specification

Specification and technical data	SEN02378-00
Specification drawing.....	2
Specifications	3
Weight table	9
Fuel, coolant and lubricants	10

10 Structure, function and maintenance standard

Engine and cooling system	SEN03095-00
Radiator, oil cooler, aftercooler	2
Output shaft.....	4
Power train, Part 1	SEN03096-00
Power train skeleton.....	2
Drive shaft	4
Torque converter and transmission hydraulic piping	5
Power train charge pump	6
Retarder cooling pump	7
Torque converter	8
Torque converter valve	14
Transmission	15
Transmission control valve	31
ECMV	32
Power train, Part 2	SEN03097-00
Axle	2
Differential	4
Final drive.....	6
Wheel	8
Steering system	SEN03098-00
Steering column.....	2
Steering linkage.....	3
Brake system	SEN03099-01
Brake piping	2
Brake valve.....	4
Secondary brake valve	7
Relay valve	8
Front brake cut valve	9

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$