

Shop Manual

DUMP TRUCK

HD465-7E0

HD605-7E0

SERIAL NUMBERS

HD465-10001-10037

HD465- 10101 and up

HD605- 8001- 8032

HD605- 10101 and up

ecot3

KOMATSU

DUMP TRUCK

HD465-7E0

HD605-7E0

Machine model	Serial number
---------------	---------------

HD465-7E0	10001 – 10037
HD465-7E0	10101 and up
HD605-7E0	8001 – 8032
HD605-7E0	10101 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN01081-08
00 Index and foreword	SEN01082-08
Index	SEN01083-08 ●
Foreword and general information	SEN01084-05 ●
01 Specification	SEN01085-02
Specification and technical data	SEN01086-02
10 Structure, function and maintenance standard	SEN01087-04
Engine and cooling system	SEN01088-02
Power train, Part 1	SEN01089-02
Power train, Part 2	SEN01090-01
Steering system	SEN01091-01
Brake system	SEN01092-02
Undercarriage and frame	SEN01093-03
Hydraulic system	SEN01094-02
Work equipment (Body)	SEN04679-00 ○
Cab and its attachments	SEN01095-02
Electrical system, Part 1	SEN01096-02
Electrical system, Part 2	SEN01097-02
Electrical system, Part 3	SEN01098-02
Electrical system, Part 4	SEN01099-03
20 Standard value table	SEN01100-03
Standard service value table	SEN01649-03
30 Testing and adjusting	SEN01101-02
Testing and adjusting, Part 1	SEN01650-02
Testing and adjusting, Part 2	SEN01651-02
Testing and adjusting, Part 3	SEN01652-02
Testing and adjusting, Part 4	SEN01653-01
Testing and adjusting, Part 5	SEN01654-02
40 Troubleshooting	SEN01102-03
Failure code table and fuse locations	SEN01660-02

General information on troubleshooting	SEN01661-03
Troubleshooting by failure code, Part 1	SEN01662-02
Troubleshooting by failure code, Part 2	SEN01663-03
Troubleshooting by failure code, Part 3	SEN01664-03
Troubleshooting by failure code, Part 4	SEN01665-03
Troubleshooting by failure code, Part 5	SEN01666-03
Troubleshooting by failure code, Part 6	SEN01667-03
Troubleshooting by failure code, Part 7	SEN01668-03
Troubleshooting by failure code, Part 8	SEN01669-02
Troubleshooting by failure code, Part 9	SEN01670-02
Troubleshooting of electrical system (E-mode)	SEN01671-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01672-01
Troubleshooting of engine (S-mode)	SEN01673-02
 50 Disassembly and assembly	 SEN01103-02
General information on disassembly and assembly	SEN02483-02
Engine and cooling system	SEN02484-02
Power train, Part 1	SEN02485-01
Power train, Part 2	SEN02486-01
Steering system	SEN02487-01
Brake system	SEN02488-01
Undercarriage and frame	SEN02489-01
Hydraulic system	SEN02490-01
Body	SEN02491-01
Cab and its attachments	SEN02492-02
Electrical system	SEN02493-01
 90 Diagrams and drawings	 SEN01104-05
Hydraulic diagrams and drawings	SEN01105-01
Electrical diagrams and drawings	SEN01106-04 ●

Table of contents

00 Index and foreword	
Index	SEN01083-08
Composition of shop manual	2
Table of contents	4
Foreword and general information	SEN01084-05
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN01086-02
Specification drawing	2
Specifications	3
Weight table	9
Fuel, coolant and lubricants	10
10 Structure, function and maintenance standard	
Engine and cooling system	SEN01088-02
Radiator, torque converter oil cooler, after cooler, work equipment oil cooler, fuel cooler	2
Fuel system	4
Brake oil cooler	5
Output shaft	6
Power train, Part 1	SEN01089-02
Power train skeleton	2
Drive shaft	4
Torque converter and transmission hydraulic piping	6
Brake cooling oil control valve (BCV)	8
Torque converter	10
Torque converter valve	17
Transmission	19
Transmission control valve	35
ECMV	36
Power train, Part 2	SEN01090-01
Axle	2
Differential	4
Final drive	5
Wheels	6
Steering system	SEN01091-01
Steering column	2
Steering linkage	3
Brake system	SEN01092-02
Brake piping	2
Brake valve	4
Secondary brake valve	7
Relay valve	8

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$