

# Shop Manual

DUMP TRUCK

**HD465-7E0**

**HD605-7E0**

SERIAL NUMBERS

HD465- 10001-10037

HD465-10101 and up

HD605- 8001-8032

HD605-10101 and up

**ecot3**

**KOMATSU**

## DUMP TRUCK

### HD465-7E0

### HD605-7E0

| Machine model | Serial number |
|---------------|---------------|
|---------------|---------------|

|           |               |
|-----------|---------------|
| HD465-7E0 | 10001 – 10037 |
| HD465-7E0 | 10101 and up  |
| HD605-7E0 | 8001 – 8032   |
| HD605-7E0 | 10101 and up  |

---

## 00 Index and foreword

### Index

---

---

|                                  |   |
|----------------------------------|---|
| Composition of shop manual ..... | 2 |
| Table of contents .....          | 4 |

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title                                       | Form Number   |
|-----------------------------------------------------|---------------|
| Shop Manual, contents binder, binder label and tabs | SEN01081-12   |
| 00 Index and foreword                               | SEN01082-12   |
| Index                                               | SEN01083-12 ● |
| Foreword and general information                    | SEN01084-06   |
| 01 Specification                                    | SEN01085-03   |
| Specification and technical data                    | SEN01086-03   |
| 10 Structure, function and maintenance standard     | SEN01087-07   |
| Engine and cooling system                           | SEN01088-02   |
| Power train, Part 1                                 | SEN01089-02   |
| Power train, Part 2                                 | SEN01090-01   |
| Steering system                                     | SEN01091-01   |
| Brake system                                        | SEN01092-02   |
| Undercarriage and frame                             | SEN01093-03   |
| Hydraulic system                                    | SEN01094-03   |
| Work equipment (Body)                               | SEN04679-00   |
| Cab and its attachments                             | SEN01095-02   |
| Electrical system, Part 1                           | SEN01096-04   |
| Electrical system, Part 2                           | SEN01097-03   |
| Electrical system, Part 3                           | SEN01098-02   |
| Electrical system, Part 4                           | SEN01099-05   |
| 20 Standard value table                             | SEN01100-03   |
| Standard service value table                        | SEN01649-03   |
| 30 Testing and adjusting                            | SEN01101-05   |
| Testing and adjusting, Part 1                       | SEN01650-04   |
| Testing and adjusting, Part 2                       | SEN01651-04   |
| Testing and adjusting, Part 3                       | SEN01652-04   |
| Testing and adjusting, Part 4                       | SEN01653-02   |
| Testing and adjusting, Part 5                       | SEN01654-04 ● |
| 40 Troubleshooting                                  | SEN01102-05   |
| Failure code table and fuse locations               | SEN01660-04   |

|                                                             |                 |
|-------------------------------------------------------------|-----------------|
| General information on troubleshooting                      | SEN01661-05     |
| Troubleshooting by failure code, Part 1                     | SEN01662-02     |
| Troubleshooting by failure code, Part 2                     | SEN01663-03     |
| Troubleshooting by failure code, Part 3                     | SEN01664-04     |
| Troubleshooting by failure code, Part 4                     | SEN01665-04     |
| Troubleshooting by failure code, Part 5                     | SEN01666-04     |
| Troubleshooting by failure code, Part 6                     | SEN01667-04     |
| Troubleshooting by failure code, Part 7                     | SEN01668-03     |
| Troubleshooting by failure code, Part 8                     | SEN01669-02     |
| Troubleshooting by failure code, Part 9                     | SEN01670-02     |
| Troubleshooting of electrical system (E-mode)               | SEN01671-03     |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN01672-01     |
| Troubleshooting of engine (S-mode)                          | SEN01673-03     |
| <br>50 Disassembly and assembly                             | <br>SEN01103-04 |
| General information on disassembly and assembly             | SEN02483-03     |
| Engine and cooling system                                   | SEN02484-03     |
| Power train, Part 1                                         | SEN02485-01     |
| Power train, Part 2                                         | SEN02486-01     |
| Steering system                                             | SEN02487-01     |
| Brake system                                                | SEN02488-01     |
| Undercarriage and frame                                     | SEN02489-02     |
| Hydraulic system                                            | SEN02490-01     |
| Body                                                        | SEN02491-02     |
| Cab and its attachments                                     | SEN02492-03     |
| Electrical system                                           | SEN02493-01     |
| <br>90 Diagrams and drawings                                | <br>SEN01104-08 |
| Hydraulic diagrams and drawings                             | SEN01105-03     |
| Electrical diagrams and drawings                            | SEN01106-06     |

## Table of contents

|                                                                                                   |             |
|---------------------------------------------------------------------------------------------------|-------------|
| 00 Index and foreword                                                                             |             |
| Index                                                                                             | SEN01083-12 |
| Composition of shop manual .....                                                                  | 2           |
| Table of contents .....                                                                           | 4           |
| Foreword and general information                                                                  | SEN01084-06 |
| Safety notice .....                                                                               | 2           |
| How to read the shop manual .....                                                                 | 7           |
| Explanation of terms for maintenance standard .....                                               | 9           |
| Handling of electric equipment and hydraulic component .....                                      | 11          |
| Handling of connectors newly used for engines .....                                               | 20          |
| How to read electric wire code .....                                                              | 23          |
| Precautions when carrying out operation .....                                                     | 26          |
| Method of disassembling and connecting push-pull type coupler .....                               | 29          |
| Standard tightening torque table .....                                                            | 32          |
| Conversion table .....                                                                            | 36          |
| 01 Specification                                                                                  |             |
| Specification and technical data                                                                  | SEN01086-03 |
| Specification drawing .....                                                                       | 2           |
| Specifications .....                                                                              | 4           |
| Weight table .....                                                                                | 12          |
| Fuel, coolant and lubricants .....                                                                | 13          |
| 10 Structure, function and maintenance standard                                                   |             |
| Engine and cooling system                                                                         | SEN01088-02 |
| Radiator, torque converter oil cooler, after cooler, work equipment oil cooler, fuel cooler ..... | 2           |
| Fuel system .....                                                                                 | 4           |
| Brake oil cooler .....                                                                            | 5           |
| Output shaft .....                                                                                | 6           |
| Power train, Part 1                                                                               | SEN01089-02 |
| Power train skeleton .....                                                                        | 2           |
| Drive shaft .....                                                                                 | 4           |
| Torque converter and transmission hydraulic piping .....                                          | 6           |
| Brake cooling oil control valve (BCV) .....                                                       | 8           |
| Torque converter .....                                                                            | 10          |
| Torque converter valve .....                                                                      | 17          |
| Transmission .....                                                                                | 19          |
| Transmission control valve .....                                                                  | 35          |
| ECMV .....                                                                                        | 36          |
| Power train, Part 2                                                                               | SEN01090-01 |
| Axle .....                                                                                        | 2           |
| Differential .....                                                                                | 4           |
| Final drive .....                                                                                 | 5           |
| Wheels .....                                                                                      | 6           |
| Steering system                                                                                   | SEN01091-01 |
| Steering column .....                                                                             | 2           |
| Steering linkage .....                                                                            | 3           |
| Brake system                                                                                      | SEN01092-02 |
| Brake piping .....                                                                                | 2           |
| Brake valve .....                                                                                 | 4           |
| Secondary brake valve .....                                                                       | 7           |
| Relay valve .....                                                                                 | 8           |

It's a preview. You can download the full file by clicking the link below.

**<https://shop servicemanual.com/>**

Service Manuals from 2\$