

Shop Manual

DUMP TRUCK

HD465-7E0

HD605-7E0

SERIAL NUMBERS

HD465- 10001-10037

HD465-10101 and up

HD605- 8001-8032

HD605-10101 and up

ecot3

KOMATSU

DUMP TRUCK

HD465-7E0
HD605-7E0

Machine model	Serial number
HD465-7E0	10001 – 10037
HD465-7E0	10101 and up
HD605-7E0	8001 – 8032
HD605-7E0	10101 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents.....	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN01081-20
00 Index and foreword	SEN01082-20
Index	SEN01083-20 ●
Foreword and general information	SEN01084-06
01 Specification	SEN01085-04
Specification and technical data	SEN01086-04
10 Structure, function and maintenance standard	SEN01087-11
Engine and cooling system	SEN01088-02
Power train, Part 1	SEN01089-04
Power train, Part 2	SEN01090-01
Steering system	SEN01091-01
Brake system	SEN01092-02
Undercarriage and frame	SEN01093-03
Hydraulic system	SEN01094-03
Work equipment (Body)	SEN04679-00
Cab and its attachments	SEN01095-03
Electrical system, Part 1	SEN01096-05
Electrical system, Part 2	SEN01097-05
Electrical system, Part 3	SEN01098-02
Electrical system, Part 4	SEN01099-06
20 Standard value table	SEN01100-03
Standard service value table	SEN01649-03
30 Testing and adjusting	SEN01101-08
Testing and adjusting, Part 1	SEN01650-06 ●
Testing and adjusting, Part 2	SEN01651-07 ●
Testing and adjusting, Part 3	SEN01652-05
Testing and adjusting, Part 4	SEN01653-02
Testing and adjusting, Part 5	SEN01654-04
40 Troubleshooting	SEN01102-09
General information on troubleshooting	SEN01661-05

Failure code table and fuse locations	SEN01660-05
Troubleshooting by failure code, Part 1	SEN01662-04
Troubleshooting by failure code, Part 2	SEN01663-05
Troubleshooting by failure code, Part 3	SEN01664-05
Troubleshooting by failure code, Part 4	SEN01665-05
Troubleshooting by failure code, Part 5	SEN01666-06
Troubleshooting by failure code, Part 6	SEN01667-06
Troubleshooting by failure code, Part 7	SEN01668-03
Troubleshooting by failure code, Part 8	SEN01669-02
Troubleshooting by failure code, Part 9	SEN01670-03
Troubleshooting of electrical system (E-mode)	SEN01671-05 ●
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01672-01
Troubleshooting of engine (S-mode)	SEN01673-03
 50 Disassembly and assembly	 SEN01103-06
General information on disassembly and assembly	SEN02483-05 ●
Engine and cooling system	SEN02484-04
Power train, Part 1	SEN02485-02
Power train, Part 2	SEN02486-02 ●
Steering system	SEN02487-01
Brake system	SEN02488-02 ●
Undercarriage and frame	SEN02489-03 ●
Hydraulic system	SEN02490-01
Body	SEN02491-02
Cab and its attachments	SEN02492-03
Electrical system	SEN02493-01
 90 Diagrams and drawings	 SEN01104-12
Hydraulic diagrams and drawings	SEN01105-05 ●
Electrical diagrams and drawings	SEN01106-10 ●

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$