

Shop Manual

DUMP TRUCK

GALEO

HD465-7R

HD605-7R

SERIAL NUMBERS

HD465- 15001

HD605- 16001

and up

KOMATSU

DUMP TRUCK

HD465-7R

HD605-7R

Machine model	Serial number
---------------	---------------

HD465-7R	15001 and up
HD605-7R	16001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02283-01
00 Index and foreword	SEN02284-01
Index	SEN02285-01 ●
Foreword and general information	SEN02286-00
01 Specification	SEN02287-00
Specification and technical data	SEN02289-00
10 Structure, function and maintenance standard	SEN02290-00
Engine and cooling system	SEN02291-00
Power train system, Part 1	SEN02292-00
Power train system, Part 2	SEN02293-00
Steering system	SEN02294-00
Brake system	SEN02295-00
Undercarriage and frame	SEN02296-00
Hydraulic system	SEN02297-00
Cab and its attachments	SEN02298-00
Electrical system, Part 1	SEN02299-00
Electrical system, Part 2	SEN02300-00
Electrical system, Part 3	SEN02301-00
Electrical system, Part 4	SEN02302-00
20 Standard value table	SEN02308-00
Standard service value table	SEN02527-00 ○
30 Testing and adjusting	SEN02309-00
Testing and adjusting, Part 1	SEN02528-00 ○
Testing and adjusting, Part 2	SEN02529-00 ○
Testing and adjusting, Part 3	SEN02530-00 ○
Testing and adjusting, Part 4	SEN02531-00 ○
Testing and adjusting, Part 5	SEN02532-00 ○
40 Troubleshooting	SEN02310-00
Failure code table and fuse locations	SEN02717-00 ○
General information on troubleshooting	SEN02718-00 ○

Troubleshooting by failure code, Part 1	SEN02533-00 ○
Troubleshooting by failure code, Part 2	SEN02534-00 ○
Troubleshooting by failure code, Part 3	SEN02535-00 ○
Troubleshooting by failure code, Part 4	SEN02536-00 ○
Troubleshooting by failure code, Part 5	SEN02537-00 ○
Troubleshooting by failure code, Part 6	SEN02538-00 ○
Troubleshooting by failure code, Part 7	SEN02539-00 ○
Troubleshooting by failure code, Part 8	SEN02540-00 ○
Troubleshooting by failure code, Part 9	SEN02541-00 ○
Troubleshooting of electrical system (E-mode)	SEN02542-00 ○
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02543-00 ○
Troubleshooting of engine (S-mode)	SEN02544-00 ○
90 Diagrams and drawings	SEN02312-01
Hydraulic circuit diagram	SEN02313-00
Electrical circuit diagram	SEN02314-01 ●

Table of contents

00 Index and foreword	
Index	SEN02285-01
Composition of shop manual.....	2
Table of contents	4
Foreword and general information	SEN02286-00
Safety notice.....	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling electric equipment and hydraulic component.....	11
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN02289-00
Specification drawing.....	2
Specifications	3
Weight table	9
Fuel, coolant and lubricants	10
10 Structure, function and maintenance standard	
Engine and cooling system	SEN02291-00
Radiator, torque converter oil cooler, after cooler, work equipment oil cooler, fuel cooler.....	2
Fuel system	4
Brake oil cooler.....	5
Output shaft.....	6
Power train system, Part 1	SEN02292-00
Power train skeleton.....	2
Drive shaft	4
Torque converter and transmission hydraulic piping	6
Brake cooling oil control valve (BCV).....	8
Torque converter	10
Torque converter valve	17
Transmission	19
Transmission control valve	35
ECMV	36
Power train system, Part 2	SEN02293-00
Axle	2
Differential	4
Final drive.....	5
Wheels	6
Steering system	SEN02294-00
Steering column.....	2
Steering linkage.....	3
Brake system	SEN02295-00
Brake piping	2
Brake valve.....	4
Secondary brake valve	7
Relay valve	8
Front brake off valve.....	9

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$