

Shop Manual

DUMP TRUCK

HD785-7

SERIAL NUMBERS 30001 and up

KOMATSU

DUMP TRUCK

HD785-7

Machine model	Serial number
---------------	---------------

HD785-7	30001 and up
---------	--------------

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN05900-17
00 Index and foreword	SEN05901-17
Index	SEN05902-17 ●
Foreword and general information	SEN05903-00
01 Specification	SEN05904-00
Specification and technical data	SEN05905-00
10 Structure, function and maintenance standard	SEN05906-05
Engine and cooling system	SEN05907-00
Power train, Part 1	SEN05908-00
Power train, Part 2	SEN05909-00
Steering system	SEN05910-00
Brake system	SEN05911-01
Undercarriage and frame	SEN05912-01
Hydraulic system	SEN05913-00
Work equipment (Body)	SEN05914-01
Cab and its attachments	SEN05915-00
Electrical system, Part 1	SEN05916-00
Electrical system, Part 2	SEN05917-03
Electrical system, Part 3	SEN05918-02
Electrical system, Part 4	SEN05919-00
Electrical system, Part 5	SEN06906-00
20 Standard value table	SEN05920-01
Standard service value table	SEN05927-01
30 Testing and adjusting	SEN05921-08
Testing and adjusting, Part 1	SEN05928-06
Testing and adjusting, Part 2	SEN05929-07
Testing and adjusting, Part 3	SEN05930-01
Testing and adjusting, Part 4	SEN05931-00
Testing and adjusting, Part 5	SEN05932-02
Testing and adjusting, Part 6	SEN06907-00

40 Troubleshooting	SEN05922-06
Failure code table and fuse locations	SEN05933-03
General information on troubleshooting	SEN05934-02
Troubleshooting by failure code, Part 1	SEN05935-00
Troubleshooting by failure code, Part 2	SEN05936-02
Troubleshooting by failure code, Part 3	SEN05937-00
Troubleshooting by failure code, Part 4	SEN05938-00
Troubleshooting by failure code, Part 5	SEN05939-00
Troubleshooting by failure code, Part 6	SEN05940-02
Troubleshooting by failure code, Part 7	SEN05941-01
Troubleshooting by failure code, Part 8	SEN05942-00
Troubleshooting by failure code, Part 9	SEN05943-02
Troubleshooting by failure code, Part 10	SEN05944-01
Troubleshooting of electrical system (E-mode)	SEN05945-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN05946-01
Troubleshooting of engine (S-mode)	SEN05947-00
50 Disassembly and assembly	SEN05923-11
General information on disassembly and assembly	SEN05948-06
Engine and cooling system	SEN05949-03
Power train, Part 1	SEN05950-05
Power train, Part 2	SEN05951-03
Steering system	SEN05952-04
Brake system	SEN05953-08
Undercarriage and frame	SEN05954-06 ●
Hydraulic system	SEN05955-04
Body	SEN05956-02
Cab and its attachments	SEN05957-02
Electrical system, Part 1	SEN05958-03
Electrical system, Part 2	SEN06908-00
80 Appendix	SEN06492-01
Air conditioner	SEN06493-01
90 Diagrams and drawings	SEN05924-03
Hydraulic diagrams and drawings	SEN05925-01
Electrical diagrams and drawings	SEN05926-02

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$