

Shop Manual

HYDRAULIC
EXCAVATOR

PC110-8M0

SERIAL NUMBERS DBBUF001 and up

KOMATSU

00 Index and foreword

CONTENTS

00 Index and Foreword	00-1
CONTENTS	00-3
Foreword and general information.....	00-14
Safety notice	00-14
How to read the shop manual	00-19
Explanation of terms for maintenance standard	00-21
Handling of electric equipment and hydraulic component	00-23
Handling of connectors newly used for engines	00-32
How to read electric wire code	00-35
Precautions when carrying out operation.....	00-38
Method of disassembling and connecting push-pull type coupler.....	00-31
Standard tightening torque table	00-44
Conversion table	00-48
01 Specification.....	01-1
CONTENTS	01-3
Specifications.....	01-5
Specification dimension drawings	01-5
Working range diagram.....	01-6
Specifications	01-7
List of weights	01-10
List of lubricant and coolant to be filled	01-12
10 Structure, function and maintenance standard.....	10-1
CONTENTS	10-3
Engine and cooling system.....	10-5
Engine mount.....	10-5
PTO.....	10-7
Cooling system	10-8
Power train.....	10-10
Power train	10-10
Swing circle	10-11
Swing machinery.....	10-12
Undercarriage and frame.....	10-14
Track frame	10-14
Idler cushion.....	10-15
Idler	10-16
Track roller	10-17
Carrier roller	10-18
Sprocket	10-19
Track shoe	10-20
Hydraulic system.....	10-24
Hydraulic equipment layout drawing	10-24
Valve control	10-26
Hydraulic tank and filter	10-28
Hydraulic pump	10-30
Hydraulic control system.....	10-56
Control valve	10-56
CLSS.....	10-66
Functions and operation by valve	10-70
Work equipment, swing and travel system.....	10-100
PPC valve	10-100
Swing motor	10-116
Travel motor	10-124

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$