

Shop Manual

HYDRAULIC
EXCAVATOR

PC1250 -11R
PC1250SP-11R

SERIAL NUMBERS 50090 and up
50090

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-18
FOREWORD, SAFETY, BASIC INFORMATION	00-24
HOW TO READ THE SHOP MANUAL	00-24
SAFETY NOTICE FOR OPERATION	00-26
PRECAUTIONS TO PREVENT FIRE	00-34
ACTIONS IF FIRE OCCURS	00-36
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-37
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-38
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-41
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-47
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-49
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-50
PRACTICAL USE OF KOMTRAX	00-51
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-52
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-56
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-60
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-61
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-63
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-64
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-66
HOW TO READ ELECTRICAL WIRE CODE	00-67
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-71
STANDARD TIGHTENING TORQUE TABLE	00-74
CONVERSION TABLE	00-81
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
WORKING RANGE DRAWINGS	01-5
SPECIFICATIONS	01-7
WEIGHT TABLE	01-13
FUEL, COOLANT AND LUBRICANT TO MEET AMBIENT TEMPERATURE	01-16
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
BOOT-UP SYSTEM	10-5
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-5
SYSTEM OPERATING LAMP SYSTEM	10-6
BATTERY DISCONNECT SWITCH	10-8
ENGINE SYSTEM	10-9
LAYOUT DRAWING OF ENGINE SYSTEM	10-9
ENGINE CONTROL SYSTEM	10-11
AUTO-DECELERATION SYSTEM	10-14
AUTOMATIC LOW IDLE SYSTEM	10-16
ENGINE AUTOMATIC WARM-UP SYSTEM	10-18
OVERHEAT PREVENTION SYSTEM	10-20
TURBOCHARGER PROTECTION SYSTEM	10-21
AUTOMATIC IDLE STOP SYSTEM	10-22
COMPONENT PARTS OF ENGINE SYSTEM	10-25
COOLING SYSTEM	10-28
LAYOUT DRAWING OF COOLING SYSTEM	10-28
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN	10-30
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN	10-32
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN	10-34
COMPONENT PARTS OF COOLING SYSTEM	10-35

CONTROL SYSTEM.....	10-55
LAYOUT DRAWING OF CONTROL SYSTEM	10-55
MACHINE MONITOR SYSTEM	10-57
KomVision SYSTEM	10-58
KOMTRAX Plus SYSTEM.....	10-62
COMPONENT PARTS OF CONTROL SYSTEM.....	10-66
HYDRAULIC SYSTEM.....	10-111
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-111
OLSS	10-114
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-126
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-130
WORK EQUIPMENT SYSTEM	10-200
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-200
MACHINE PUSH-UP SYSTEM.....	10-206
HEAVY LIFT SYSTEM	10-208
BOOM SHOCKLESS CONTROL SYSTEM	10-211
PPC LOCK SYSTEM	10-213
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-214
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-216
SWING SYSTEM	10-228
LAYOUT DRAWING OF SWING SYSTEM	10-228
SWING CONTROL SYSTEM DIAGRAM	10-231
SWING PRIORITY SYSTEM DIAGRAM.....	10-235
SWING COMPENSATION SYSTEM DIAGRAM	10-238
COMPONENT PARTS OF SWING SYSTEM.....	10-239
TRAVEL SYSTEM.....	10-253
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-253
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-257
COMPONENT PARTS OF TRAVEL SYSTEM	10-260
LIFTING SYSTEM	10-277
HYDRAULICALLY OPERATED STAIRWAY SYSTEM	10-277
COMPONENT PARTS OF LIFTING SYSTEM	10-280
UNDERCARRIAGE AND FRAME.....	10-283
LAYOUT DRAWING OF UNDERCARRIAGE	10-283
WORK EQUIPMENT.....	10-285
STRUCTURE OF WORK EQUIPMENT	10-285
FUNCTION OF WORK EQUIPMENT	10-286
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-287
BUCKET CLEARANCE ADJUSTMENT SHIM	10-288
CAB AND ITS ATTACHMENTS	10-289
CAB	10-289
CAB MOUNT	10-290
CAB TIPPING STOPPER	10-291
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: PC1250-11R	20-3
STANDARD VALUE TABLE FOR ENGINE: PC1250SP-11R	20-8
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC1250-11R	20-13
STANDARD VALUE TABLE FOR MACHINE: PC1250SP-11R.....	20-27
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-41
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-6
TOOLS FOR TESTING AND ADJUSTING.....	30-6
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-16
ENGINE AND COOLING SYSTEM.....	30-17

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$