

# Shop Manual

COMPACT  
HYDRAULIC  
EXCAVATOR

***PC45MR-5***  
***PC55MR-5***

SERIAL NUMBERS

PC45MR-30001  
PC55MR-20001

and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

|                                                                            |       |
|----------------------------------------------------------------------------|-------|
| 00 INDEX AND FOREWORD .....                                                | 00-1  |
| ABBREVIATION LIST .....                                                    | 00-11 |
| FOREWORD, SAFETY, BASIC INFORMATION .....                                  | 00-17 |
| HOW TO READ THE SHOP MANUAL .....                                          | 00-17 |
| SAFETY NOTICE FOR OPERATION .....                                          | 00-19 |
| PRECAUTIONS TO PREVENT FIRE .....                                          | 00-27 |
| ACTIONS IF FIRE OCCURS .....                                               | 00-29 |
| PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....                         | 00-30 |
| PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....                         | 00-31 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....              | 00-34 |
| PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....                        | 00-41 |
| PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....                       | 00-43 |
| PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....                     | 00-44 |
| PRACTICAL USE OF KOMTRAX .....                                             | 00-45 |
| DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....                        | 00-46 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....           | 00-50 |
| METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....            | 00-54 |
| METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....    | 00-55 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..     | 00-57 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..     | 00-58 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . | 00-60 |
| HOW TO READ ELECTRICAL WIRE CODE .....                                     | 00-61 |
| EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....                        | 00-65 |
| STANDARD TIGHTENING TORQUE TABLE .....                                     | 00-68 |
| CONVERSION TABLE .....                                                     | 00-75 |
| 01 SPECIFICATIONS .....                                                    | 01-1  |
| CONTENTS .....                                                             | 01-2  |
| ABBREVIATION LIST .....                                                    | 01-3  |
| SPECIFICATIONS .....                                                       | 01-9  |
| SPECIFICATION DRAWING .....                                                | 01-9  |
| WORKING RANGE DRAWINGS .....                                               | 01-13 |
| SPECIFICATIONS .....                                                       | 01-15 |
| WEIGHT TABLE .....                                                         | 01-23 |
| TABLE OF FUEL, COOLANT, AND LUBRICANTS .....                               | 01-27 |
| 10 STRUCTURE AND FUNCTION .....                                            | 10-1  |
| CONTENTS .....                                                             | 10-2  |
| ABBREVIATION LIST .....                                                    | 10-4  |
| BOOT-UP SYSTEM .....                                                       | 10-10 |
| LAYOUT DRAWING OF BOOT-UP SYSTEM .....                                     | 10-10 |
| SYSTEM OPERATING LAMP SYSTEM .....                                         | 10-12 |
| BATTERY DISCONNECT SWITCH .....                                            | 10-14 |
| ENGINE SYSTEM .....                                                        | 10-15 |
| LAYOUT DRAWING OF ENGINE SYSTEM .....                                      | 10-15 |
| ENGINE CONTROL SYSTEM .....                                                | 10-16 |
| AUTO-DECELERATION SYSTEM .....                                             | 10-20 |
| OVERHEAT PREVENTION SYSTEM .....                                           | 10-22 |
| AUTOMATIC IDLE STOP SYSTEM .....                                           | 10-24 |
| COMPONENT PARTS OF ENGINE SYSTEM .....                                     | 10-26 |
| COOLING SYSTEM .....                                                       | 10-27 |
| LAYOUT DRAWING OF COOLING SYSTEM .....                                     | 10-27 |
| CONTROL SYSTEM .....                                                       | 10-29 |
| LAYOUT DRAWING OF CONTROL SYSTEM .....                                     | 10-29 |
| MACHINE MONITOR SYSTEM .....                                               | 10-30 |
| KOMTRAX SYSTEM .....                                                       | 10-31 |
| COMPONENT PARTS OF CONTROL SYSTEM .....                                    | 10-32 |

|                                                               |        |
|---------------------------------------------------------------|--------|
| HYDRAULIC SYSTEM.....                                         | 10-48  |
| LAYOUT DRAWING OF HYDRAULIC SYSTEM .....                      | 10-48  |
| CLSS .....                                                    | 10-50  |
| ENGINE AND PUMP COMBINED CONTROL SYSTEM.....                  | 10-53  |
| COMPONENT PARTS OF HYDRAULIC SYSTEM .....                     | 10-56  |
| WORK EQUIPMENT SYSTEM .....                                   | 10-118 |
| LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....                 | 10-118 |
| STRUCTURE OF VALVE CONTROL .....                              | 10-122 |
| PPC LOCK SYSTEM .....                                         | 10-124 |
| WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....         | 10-126 |
| OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....                  | 10-127 |
| COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....                 | 10-129 |
| SWING SYSTEM .....                                            | 10-145 |
| LAYOUT DRAWING OF SWING SYSTEM .....                          | 10-145 |
| COMPONENT PARTS OF SWING SYSTEM.....                          | 10-146 |
| TRAVEL SYSTEM.....                                            | 10-156 |
| LAYOUT DRAWING OF TRAVEL SYSTEM.....                          | 10-156 |
| TRAVEL CONTROL SYSTEM DIAGRAM.....                            | 10-158 |
| COMPONENT PARTS OF TRAVEL SYSTEM .....                        | 10-160 |
| UNDERCARRIAGE AND FRAME.....                                  | 10-171 |
| LAYOUT DRAWING OF UNDERCARRIAGE .....                         | 10-171 |
| IDLER CUSHION .....                                           | 10-172 |
| WORK EQUIPMENT.....                                           | 10-173 |
| STRUCTURE OF WORK EQUIPMENT .....                             | 10-173 |
| FUNCTION OF WORK EQUIPMENT .....                              | 10-174 |
| WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....                 | 10-175 |
| CAB AND ITS ATTACHMENTS .....                                 | 10-176 |
| ROPS CAB .....                                                | 10-176 |
| TILT TYPE FLOOR .....                                         | 10-177 |
| 20 STANDARD VALUE TABLE .....                                 | 20-1   |
| CONTENTS .....                                                | 20-2   |
| ABBREVIATION LIST .....                                       | 20-3   |
| STANDARD VALUE TABLE FOR ENGINE .....                         | 20-9   |
| STANDARD VALUE TABLE FOR ENGINE: PC45MR-5.....                | 20-9   |
| STANDARD VALUE TABLE FOR ENGINE: PC55MR-5.....                | 20-11  |
| STANDARD VALUE TABLE FOR MACHINE.....                         | 20-13  |
| STANDARD VALUE TABLE FOR MACHINE: PC45MR-5 .....              | 20-13  |
| STANDARD VALUE TABLE FOR MACHINE: PC55MR-5 .....              | 20-25  |
| MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE ..... | 20-37  |
| 30 TESTING AND ADJUSTING .....                                | 30-1   |
| CONTENTS .....                                                | 30-2   |
| ABBREVIATION LIST .....                                       | 30-5   |
| RELATED INFORMATION ON TESTING AND ADJUSTING .....            | 30-11  |
| TOOLS FOR TESTING AND ADJUSTING.....                          | 30-11  |
| SKETCH OF TOOLS FOR TESTING AND ADJUSTING .....               | 30-15  |
| ENGINE AND COOLING SYSTEM.....                                | 30-17  |
| TEST ENGINE SPEED .....                                       | 30-17  |
| TEST EXHAUST GAS COLOR.....                                   | 30-19  |
| TEST AND ADJUST VALVE CLEARANCE .....                         | 30-21  |
| TEST COMPRESSION PRESSURE.....                                | 30-23  |
| TEST ENGINE OIL PRESSURE .....                                | 30-25  |
| BLEED AIR FROM FUEL SYSTEM .....                              | 30-27  |
| TEST FUEL CIRCUIT FOR LEAKAGE .....                           | 30-29  |
| HANDLE CYLINDER CUT-OUT MODE OPERATION.....                   | 30-30  |
| TEST AND ADJUST ALTERNATOR BELT TENSION .....                 | 30-31  |
| TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION ..... | 30-32  |
| POWER TRAIN.....                                              | 30-34  |
| TEST SWING CIRCLE BEARING CLEARANCE .....                     | 30-34  |

It's a preview. You can download the full file by clicking the link below.

**<https://shop servicemanual.com/>**

Service Manuals from 2\$