

Shop Manual

HYDRAULIC
EXCAVATOR

PC88MR-10

SERIAL NUMBERS 7001 and up

KOMATSU

HYDRAULIC EXCAVATOR

PC88MR-10

Model Serial Number

PC88MR-10 7001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-13
Important safety notice	00-13
How to read the shop manual	00-20
Explanation of terms for maintenance standard	00-22
Handling equipment of fuel system devices	00-24
Handling of intake system parts	00-25
Handling of hydraulic equipment	00-26
Method of disconnecting and connecting of push-pull type coupler	00-28
Handling of electrical equipment	00-31
How to read electric wire code	00-39
Precautions when performing operation	00-42
Practical use of KOMTRAX	00-47
Standard tightening torque table	00-48
List of abbreviation	00-54
Conversion table	00-59
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Working range drawings	01-4
Specifications	01-5
Weight table	01-9
Table of fuel, coolant, and lubricants	01-11
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
PTO	10-5
Variable flow turbocharger	10-6
EGR system piping drawing	10-10
EGR system circuit diagram	10-12
EGR valve	10-13
EGR cooler	10-15
KCCV layout drawing	10-17
KCCV ventilator	10-20
KDOC muffler	10-22
Cooling system	10-24
Power train	10-27
Power train system	10-27
Swing circle	10-29
Swing machinery	10-31
Undercarriage and frame	10-33
Track frame	10-33
Idler cushion	10-35
Hydraulic system	10-36
Hydraulic component layout	10-36
Valve control	10-38
Hydraulic tank	10-40
CLSS	10-44
Main pump	10-48
Control valve	10-60
Swing motor	10-108
Travel motor	10-119
Work equipment and swing PPC valve	10-130
Travel PPC valve	10-137
Blade PPC valve	10-143

Boom swing PPC valve	10-145
Solenoid valve	10-147
Multi-control valve	10-151
Anti-drop valve for boom	10-152
Anti-drop valve for arm	10-156
Center swivel joint	10-160
Accumulator	10-161
Work equipment	10-163
Work equipment	10-163
Work equipment shim	10-164
Bucket play adjustment shim	10-165
Cab and its attachments	10-166
Cab mount and cab tipping stopper	10-166
ROPS cab	10-168
Electrical system	10-170
Electrical control system	10-170
Machine monitor system	10-214
KOMTRAX system	10-236
Sensor	10-238
20 Standard value tables	20-1
Table of contents	20-2
Standard service value table	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
Standard value table for electrical system	20-21
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-6
Engine and cooling system	30-8
Testing engine speed	30-8
Testing exhaust gas color	30-9
Testing and adjusting valve clearance	30-10
Testing compression pressure	30-12
Testing blowby pressure	30-14
Testing engine oil pressure	30-15
Testing fuel pressure	30-16
Testing fuel return rate and leakage	30-17
Bleeding air from fuel system	30-20
Testing fuel circuit for leakage	30-22
Handling cylinder cutout mode operation	30-23
Handling no-injection cranking operation	30-24
Testing and adjusting air conditioner compressor belt tension	30-25
Check fan belt, replace	30-26
Check auto-tensioner, replace	30-28
Writing compensation values at replacement of injector and engine controller	30-31
Power train	30-35
Testing swing circle bearing clearance	30-35
Undercarriage and frame	30-36
Testing and adjusting track tension	30-36
Hydraulic system	30-37
Releasing remaining pressure from hydraulic circuit	30-37
Testing and adjusting oil pressure in work equipment and travel circuits	30-42
Testing and adjusting swing and blade circuit oil pressure	30-45
Testing oil pressure of control circuit	30-48
Testing and adjusting oil pressure in pump PC control circuit	30-49
Testing and adjusting oil pressure in pump LS control circuit	30-52
Testing outlet pressure of solenoid valve	30-55

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$