

# SERVICE MANUAL

**L313 / L315 / L318 / L320 / L323 / L325 / L330**

**Tier 3**

300 Series Skid Steer Loader

*PIN NJM453496 and after*

**C327 / C332 / C338**

**Tier 3**

300 Series Compact Track Loader

*PIN NJM453496 and after*

**Part number 51517858**

English

October 2020





## **SERVICE MANUAL**

**C327 TIER 3 [NJM453496 - ], C332 TIER 3 [NJM453496 - ], C338 TIER 3 [NJM453496 - ], L313 TIER 3 [NJM453496 - ], L315 TIER 3 [NJM453496 - ], L318 TIER 3 [NJM453496 - ], L320 TIER 3 [NJM453496 - ], L323 TIER 3 [NJM453496 - ], L325 TIER 3 [NJM453496 - ], L330 TIER 3 [NJM453496 - ]**

## Link Product / Engine

| Product                    | Market Product        | Engine         |
|----------------------------|-----------------------|----------------|
| C327 TIER 3 [NJM453496 - ] | Latin America         | F5CE5454G*A001 |
| C327 TIER 3 [NJM453496 - ] | Asia Pacific          | F5CE5454G*A001 |
| C327 TIER 3 [NJM453496 - ] | Middle East Africa    | F5CE5454G*A001 |
| C327 TIER 3 [NJM453496 - ] | Australia New Zealand | F5CE5454G*A001 |
| C332 TIER 3 [NJM453496 - ] | Latin America         | F5CE5454B*A005 |
| C332 TIER 3 [NJM453496 - ] | Middle East Africa    | F5CE5454B*A005 |
| C332 TIER 3 [NJM453496 - ] | Australia New Zealand | F5CE5454B*A005 |
| C338 TIER 3 [NJM453496 - ] | Middle East Africa    | F5CE5454C*A003 |
| C338 TIER 3 [NJM453496 - ] | Latin America         | F5CE5454C*A003 |
| C338 TIER 3 [NJM453496 - ] | Asia Pacific          | F5CE5454C*A003 |
| C338 TIER 3 [NJM453496 - ] | Australia New Zealand | F5CE5454C*A003 |
| L313 TIER 3 [NJM453496 - ] | Middle East Africa    | N844L          |
| L313 TIER 3 [NJM453496 - ] | Australia New Zealand | N844L          |
| L313 TIER 3 [NJM453496 - ] | Latin America         | N844L          |
| L315 TIER 3 [NJM453496 - ] | Australia New Zealand | N844LT         |
| L315 TIER 3 [NJM453496 - ] | Asia Pacific          | N844LT         |
| L315 TIER 3 [NJM453496 - ] | Middle East Africa    | N844LT         |
| L315 TIER 3 [NJM453496 - ] | Latin America         | N844LT         |
| L318 TIER 3 [NJM453496 - ] | Australia New Zealand | N844LT         |
| L318 TIER 3 [NJM453496 - ] | Middle East Africa    | N844LT         |
| L318 TIER 3 [NJM453496 - ] | Latin America         | N844LT         |
| L320 TIER 3 [NJM453496 - ] | Australia New Zealand | N844LT         |
| L320 TIER 3 [NJM453496 - ] | Latin America         | N844LT         |
| L320 TIER 3 [NJM453496 - ] | Middle East Africa    | N844LT         |
| L323 TIER 3 [NJM453496 - ] | Asia Pacific          | F5CE5454G*A001 |
| L323 TIER 3 [NJM453496 - ] | Middle East Africa    | F5CE5454G*A001 |
| L323 TIER 3 [NJM453496 - ] | Latin America         | F5CE5454G*A001 |
| L323 TIER 3 [NJM453496 - ] | Australia New Zealand | F5CE5454G*A001 |
| L325 TIER 3 [NJM453496 - ] | Asia Pacific          | F5CE5454B*A005 |
| L325 TIER 3 [NJM453496 - ] | Australia New Zealand | F5CE5454B*A005 |
| L325 TIER 3 [NJM453496 - ] | Latin America         | F5CE5454B*A005 |
| L325 TIER 3 [NJM453496 - ] | Middle East Africa    | F5CE5454B*A005 |
| L330 TIER 3 [NJM453496 - ] | Australia New Zealand | F5CE5454C*A003 |
| L330 TIER 3 [NJM453496 - ] | Latin America         | F5CE5454C*A003 |
| L330 TIER 3 [NJM453496 - ] | Middle East Africa    | F5CE5454C*A003 |
| L330 TIER 3 [NJM453496 - ] | Asia Pacific          | F5CE5454C*A003 |

# Contents

---

## INTRODUCTION

|                                                     |      |
|-----------------------------------------------------|------|
| Engine.....                                         | 10   |
| [10.001] Engine and crankcase .....                 | 10.1 |
| [10.216] Fuel tanks .....                           | 10.2 |
| [10.220] Throttle linkage.....                      | 10.3 |
| [10.400] Engine cooling system .....                | 10.4 |
| [10.414] Fan and drive .....                        | 10.5 |
| Power coupling.....                                 | 19   |
| [19.121] Pump-drive assembly .....                  | 19.1 |
| Front axle system .....                             | 25   |
| [25.450] Chain drive system.....                    | 25.1 |
| Rear axle system.....                               | 27   |
| [27.650] Chain drive system.....                    | 27.1 |
| Hydrostatic drive.....                              | 29   |
| [29.200] Mechanical control .....                   | 29.1 |
| [29.218] Pump and motor components.....             | 29.2 |
| [29.202] Hydrostatic transmission .....             | 29.3 |
| Brakes and controls .....                           | 33   |
| [33.110] Parking brake or parking lock .....        | 33.1 |
| Hydraulic systems.....                              | 35   |
| [35.000] Hydraulic systems.....                     | 35.1 |
| [35.300] Reservoir, cooler, and filters.....        | 35.2 |
| [35.104] Fixed displacement pump.....               | 35.3 |
| [35.359] Main control valve .....                   | 35.4 |
| [35.525] Auxiliary hydraulic valves and lines ..... | 35.5 |
| [35.600] High flow hydraulics.....                  | 35.6 |

|                                                      |           |
|------------------------------------------------------|-----------|
| [35.724] Front loader hydraulic system control ..... | 35.7      |
| [35.701] Front loader arm hydraulic system .....     | 35.8      |
| [35.723] Front loader bucket hydraulic system .....  | 35.9      |
| [35.734] Tool quick coupler hydraulic system .....   | 35.10     |
| <b>Frames and ballasting .....</b>                   | <b>39</b> |
| [39.140] Ballasts and supports .....                 | 39.1      |
| <b>Wheels .....</b>                                  | <b>44</b> |
| [44.511] Front wheels .....                          | 44.1      |
| [44.520] Rear wheels .....                           | 44.2      |
| <b>Tracks and track suspension .....</b>             | <b>48</b> |
| [48.130] Track frame and driving wheels .....        | 48.1      |
| [48.100] Tracks .....                                | 48.2      |
| [48.134] Track tension units .....                   | 48.3      |
| [48.138] Track rollers .....                         | 48.4      |
| <b>Cab climate control .....</b>                     | <b>50</b> |
| [50.100] Heating .....                               | 50.1      |
| [50.200] Air conditioning .....                      | 50.2      |
| <b>Electrical systems .....</b>                      | <b>55</b> |
| [55.000] Electrical system .....                     | 55.1      |
| [55.100] Harnesses and connectors .....              | 55.2      |
| [55.015] Engine control system .....                 | 55.3      |
| [55.201] Engine starting system .....                | 55.4      |
| [55.301] Alternator .....                            | 55.5      |
| [55.302] Battery .....                               | 55.6      |
| [55.011] Fuel tank system .....                      | 55.7      |
| [55.010] Fuel injection system .....                 | 55.8      |
| [55.014] Engine intake and exhaust system .....      | 55.9      |
| [55.012] Engine cooling system .....                 | 55.10     |

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$