

Technical Manual

Operational Principle

ZW

150-6

150PL-6

Wheel Loader

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

SECTION 1

GENERAL

CONTENTS

Group 1 Specifications

Specifications	T1-1-1
----------------------	--------

Group 2 Component Layout

Main Component (Overview)	T1-2-1
Main Component	T1-2-4
Electrical System (Overview)	T1-2-7
Air Cleaner and Radiator Assembly	T1-2-8
Battery Box	T1-2-10
Hydraulic Oil Tank	T1-2-11
Fuel Tank	T1-2-12
Cab	T1-2-13
Engine	T1-2-19
Aftertreatment Device	T1-2-20
Transmission, HST Motor	T1-2-21
Fan Valve	T1-2-22
Fan Valve (With Fan Reverse Rotation) (Optional)	T1-2-22
HST Pump, 3-Gear Pump Unit	T1-2-23
Control Valve	T1-2-24
Manifold Valve	T1-2-25
Brake Charge Valve	T1-2-25
Emergency Steering Block	T1-2-26
Emergency Steering Pump	T1-2-26
Ride Control Valve	T1-2-27
DEF Tank	T1-2-28
DEF Supply Module	T1-2-28

Group 3 Component Specifications

Engine	T1-3-1
Engine Accessories	T1-3-5
Hydraulic Component	T1-3-6
Electrical Component	T1-3-11

(Blank)

SECTION 2

SYSTEM

CONTENTS

Group 1 Controller

Outline	T2-1-1
CAN Circuit	T2-1-2

Group 2 Control System

Summary	T2-2-1
Engine Control (ECM)	T2-2-4
HST Pump/Motor Control, Transmission Control	T2-2-21
Fan Control, Valve Control	T2-2-55
Other Controls	T2-2-65
Control by Electrical and Hydraulic Combined Circuit	T2-2-77

Group 3 Engine System

Outline	T2-3-1
ECM System	T2-3-2
Fuel Injection Control	T2-3-4
Fuel Injection Amount Correction Control	T2-3-12
EGR Control	T2-3-14
Preheating Control	T2-3-16
Variable Turbocharger Control	T2-3-17
Alarm Control	T2-3-18
Urea SCR System	T2-3-19
Engine Output Restriction Control (INDUCEMENT)	T2-3-30
Aftertreatment Device	T2-3-36
Aftertreatment Device Regeneration Control	T2-3-38

Group 4 Hydraulic System

Outline	T2-4-1
Main Circuit	T2-4-2
HST Circuit	T2-4-20
Pilot Circuit/Fan Circuit	T2-4-28
Fan Circuit	T2-4-52
Transmission Circuit	T2-4-58

Group 5 Electrical System

Summary	T2-5-1
Main Circuit	T2-5-2
Electric Power Circuit (Key Switch: OFF)	T2-5-4
CAN Circuit	T2-5-6
Accessory Circuit (Key Switch: ACC)	T2-5-8
Starting Circuit (Key Switch: START)	T2-5-10
Charging Circuit (Key Switch: ON)	T2-5-12
Surge Voltage Prevention Circuit	T2-5-16
Pilot Shut-Off Circuit (Key Switch: ON)	T2-5-18

Auto Shut-Down Circuit (Option)	T2-5-20
Engine Stop Circuit	T2-5-22
Steering Column Box Circuit	T2-5-25
Headlight Circuit	T2-5-26
Hazard Light Circuit (Key Switch: OFF)	T2-5-32
Turn Signal Light Circuit	T2-5-34
Horn Circuit (Key Switch: OFF)	T2-5-36
Reverse Light, Back Buzzer Circuit	T2-5-38
Brake Light Circuit	T2-5-40
Parking Brake Circuit	T2-5-42
Accessory Circuit	T2-5-47
Work Light Circuit	T2-5-48
Wiper Circuit	T2-5-50
Cab Light Circuit	T2-5-56

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$