

Technical Manual

Operational Principle

ZW80

Wheel Loader

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

INTRODUCTION

TO THE READER

- This manual is written for an experienced technician to provide technical information needed to maintain and repair this machine.
- Be sure to thoroughly read this manual for correct product information and service procedures.
- If you have any questions or comments, or if you found any errors regarding the contents of this manual, please contact using "Service Manual Revision Request Form" at the end of this manual. (Note: Do not tear off the form. Copy it for use.):

Publications Marketing & Product Support
Hitachi Construction Machinery Co. Ltd.
TEL: 81-29-832-7084
FAX: 81-29-831-1162
E-mail: dc@hitachi-kenki.com

ADDITIONAL REFERENCES

- Please refer to the other materials (operator's manual, parts catalog, engine technical material and Hitachi training material etc.) in addition to this manual.


MANUAL COMPOSITION

- This manual consists of the Technical Manual and the Workshop Manual.
- Information included in the Technical Manual: technical information needed for redelivery and delivery, operation and activation of all devices and systems, operational performance tests, and troubleshooting procedures.
- Information included in the Workshop Manual: technical information needed for maintenance and repair of the machine, tools and devices needed for maintenance and repair, maintenance standards, and removal/installation and assemble/disassemble procedures.

PAGE NUMBER

- Each page has a number, located on the center lower part of the page, and each number contains the following information:

Example : T 1-3-5

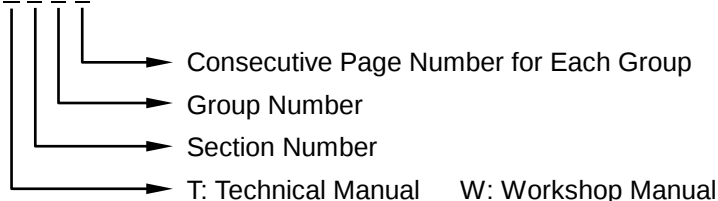

INTRODUCTION

SAFETY ALERT SYMBOL AND HEADLINE NOTATIONS

In this manual, the following safety alert symbol and signal words are used to alert the reader to the potential for personal injury or machine damage.

 This is the safety alert symbol. When you see this symbol, be alert to the potential for personal injury. Never fail to follow the safety instructions prescribed along with the safety alert symbol.

The safety alert symbol is also used to draw attention to component/part weights.

To avoid injury and damage, be sure to use appropriate lifting techniques and equipment when lifting heavy parts.

- **CAUTION:**

Indicated potentially hazardous situation which could, if not avoided, result in personal injury or death.

- **IMPORTANT:**

Indicates a situation which, if not conformed to the instructions, could result in damage to the machine.



NOTE:

Indicates supplementary technical information or know-how.

UNITS USED

- SI Units (International System of Units) are used in this manual.

MKSA system units and English units are also indicated in parentheses just behind SI units.

Example : 24.5 MPa (250 kgf/cm², 3560 psi)

A table for conversion from SI units to other system units is shown below for reference purposes.

Quantity	To Convert From	Into	Multiply By	Quantity	To Convert From	Into	Multiply By
Length	mm	in	0.03937	Pressure	MPa	kgf/cm ²	10.197
	mm	ft	0.003281		MPa	psi	145.0
Volume	L	US gal	0.2642	Power	kW	PS	1.360
	L	US qt	1.057		kW	HP	1.341
	m ³	yd ³	1.308	Temperature	°C	°F	°C×1.8+32
Weight	kg	lb	2.205	Velocity	km/h	mph	0.6214
Force	N	kgf	0.10197		min ⁻¹	rpm	1.0
	N	lbf	0.2248	Flow rate	L/min	US gpm	0.2642
Torque	N·m	kgf·m	1.0197		mL/rev	cc/rev	1.0
	N·m	lbf·ft	0.7375				

SECTION AND GROUP CONTENTS	
SECTION 1 GENERAL	
SECTION 2 SYSTEM	
SECTION 3 COMPONENT OPERATION	
SECTION 4 OPERATIONAL PERFORMANCE TEST	
SECTION 5 TROUBLESHOOTING	
TECHNICAL MANUAL	
(Operational Principle)	

SECTION 1 GENERAL

Group 1 Specifications	
Group 2 Component Layout	
Group 3 Component Specifications	

SECTION 2 SYSTEM

Group 1 Control System	
Group 2 Hydraulic System	
Group 3 Electrical System	

SECTION 3 COMPONENT OPERATION

Group 1 Priority Valve	
Group 2 Control Valve	
Group 3 Steering Valve	
Group 4 HST Pump	
Group 5 HST Motor	
Group 6 Reduction	
Group 7 Axle	
Group 8 Brake Master Cylinder	
Group 9 Others	

TECHNICAL MANUAL (Troubleshooting)

SECTION 4 OPERATIONAL PERFORMANCE TEST

Group 1 Introduction
Group 2 Standard
Group 3 Engine Test
Group 4 Wheel Loader Test
Group 5 Component Test
Group 6 Adjustment

SECTION 5 TROUBLESHOOTING

Group 1 Diagnosing Procedure
Group 2 Component Layout
Group 3 Troubleshooting A
Group 4 Troubleshooting B
Group 5 Troubleshooting C
Group 6 Electrical System Inspection

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$