

# Technical Manual

## Troubleshooting

# ZX

## 160LC-6

### Hydraulic Excavator

ZX160LC-6 HYDRAULIC EXCAVATOR TECHNICAL MANUAL TROUBLESHOOTING

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.  
Technical Manual (Operational Principle) : Vol. No.TODBR50-EN  
Technical Manual (Troubleshooting) : Vol. No.TTDBR50-EN  
Workshop Manual : Vol. No.WDBR50-EN  
Engine Manual : Vol. No.EDBR50-EN



---

## SECTION 4

# OPERATIONAL PERFORMANCE TEST

### CONTENTS

#### Group 1 Introduction

|                                         |        |
|-----------------------------------------|--------|
| Operational Performance Tests.....      | T4-1-1 |
| Preparation for Performance Tests ..... | T4-1-2 |

#### Group 2 Standard

|                                              |         |
|----------------------------------------------|---------|
| Operational Performance Standard Table ..... | T4-2-1  |
| Main Pump P-Q Diagram .....                  | T4-2-11 |
| Sensor Activating Range.....                 | T4-2-13 |
| Monitor Indicating Values.....               | T4-2-14 |

#### Group 3 Engine Test

|                             |        |
|-----------------------------|--------|
| Engine Speed .....          | T4-3-1 |
| Lubricant Consumption ..... | T4-3-4 |

#### Group 4 Machine Performance Test

|                                                                          |         |
|--------------------------------------------------------------------------|---------|
| Travel Speed .....                                                       | T4-4-1  |
| Track Revolution Speed .....                                             | T4-4-2  |
| Mistrack Check.....                                                      | T4-4-3  |
| Travel Parking Leakage .....                                             | T4-4-4  |
| Swing Speed.....                                                         | T4-4-5  |
| Swing Function Drift Check .....                                         | T4-4-6  |
| Swing Motor Leakage .....                                                | T4-4-8  |
| Maximum Swingable Slant Angle.....                                       | T4-4-10 |
| Swing Bearing Play .....                                                 | T4-4-12 |
| Hydraulic Cylinder Cycle Time .....                                      | T4-4-14 |
| Dig Function Drift Check.....                                            | T4-4-16 |
| Control Lever Operating Force.....                                       | T4-4-19 |
| Control Lever Stroke .....                                               | T4-4-20 |
| Combined Operation of Boom Raise and Swing<br>Function Check .....       | T4-4-21 |
| Combined Operation of Boom Raise and Arm<br>Roll-In Function Check ..... | T4-4-22 |
| Clearance of Front Attachment Connecting<br>Part.....                    | T4-4-23 |

#### Group 5 Component Test

|                                                                                          |         |
|------------------------------------------------------------------------------------------|---------|
| Primary Pilot Pressure.....                                                              | T4-5-1  |
| Secondary Pilot Pressure.....                                                            | T4-5-3  |
| 3-Spool Solenoid Valve Set Pressure.....                                                 | T4-5-4  |
| 2-Spool Solenoid Valve (Aftertreatment Device<br>Regeneration Control) Set Pressure..... | T4-5-5  |
| Main Pump Delivery Pressure.....                                                         | T4-5-7  |
| Main Relief Set Pressure .....                                                           | T4-5-8  |
| Relief Pressure (when relieving swing) .....                                             | T4-5-12 |
| Overload Relief Valve Set Pressure .....                                                 | T4-5-14 |
| Main Pump Flow Rate Measurement.....                                                     | T4-5-16 |
| Swing Motor Drainage.....                                                                | T4-5-24 |

|                             |         |
|-----------------------------|---------|
| Travel Motor Drainage ..... | T4-5-26 |
|-----------------------------|---------|

#### Group 6 Adjustment

|                                                                       |         |
|-----------------------------------------------------------------------|---------|
| Rewrite of Aftertreatment Device Serial No.....                       | T4-6-1  |
| How to Clear Fault Code.....                                          | T4-6-2  |
| Procedure after Replacing DCU and ECM .....                           | T4-6-3  |
| Air Bleeding from the Diesel Exhaust Fluid<br>Defrosting Piping ..... | T4-6-4  |
| How to Check Manual Regeneration Switch .....                         | T4-6-6  |
| Remedy at DEF Pressure Decrease .....                                 | T4-6-8  |
| Remedy at DEF Abnormal Quality .....                                  | T4-6-10 |
| Clean DEF Tank.....                                                   | T4-6-12 |
| Remedy when Mixing Oil in DEF Tank.....                               | T4-6-14 |

---

(Blank)

---

---

## SECTION 5

# TROUBLESHOOTING

### CONTENTS

#### Group 1 Diagnosing Procedure

|                                                  |         |
|--------------------------------------------------|---------|
| Introduction.....                                | T5-1-1  |
| Diagnosis Procedure.....                         | T5-1-2  |
| Electrical System Inspection .....               | T5-1-5  |
| Precautions for Inspection and Maintenance ..... | T5-1-6  |
| Instructions for Disconnecting Connectors .....  | T5-1-8  |
| Fuse Inspection.....                             | T5-1-10 |
| Fusible Link Inspection .....                    | T5-1-13 |
| Battery Voltage Check.....                       | T5-1-14 |
| Alternator Check .....                           | T5-1-15 |
| Continuity Check.....                            | T5-1-16 |
| Voltage and Current Measurement.....             | T5-1-18 |
| Check by False Signal .....                      | T5-1-26 |
| Test Wire Harness .....                          | T5-1-27 |

#### Group 2 Monitor

|                                                                                    |         |
|------------------------------------------------------------------------------------|---------|
| Outline .....                                                                      | T5-2-1  |
| Operating Procedures of Service Menu.....                                          | T5-2-2  |
| Setting Menu .....                                                                 | T5-2-43 |
| Inspection of Engine Oil Level, Coolant Level,<br>Hour Meter, and Fuel Gauge ..... | T5-2-48 |
| Fuel Gauge, Coolant Temperature Gauge, DEF<br>Gauge .....                          | T5-2-49 |

#### Group 3 e-Service

|                              |        |
|------------------------------|--------|
| Outline .....                | T5-3-1 |
| List of Operation Data ..... | T5-3-2 |
| Communication System .....   | T5-3-4 |

#### Group 4 Component Layout

|                                              |         |
|----------------------------------------------|---------|
| Main Component.....                          | T5-4-1  |
| Electrical System (Overview) .....           | T5-4-3  |
| Electrical System (Rear Tray).....           | T5-4-4  |
| Electrical System (Switch Panel) .....       | T5-4-5  |
| Electrical System (Around Air Cleaner) ..... | T5-4-6  |
| Electrical System (Relays) .....             | T5-4-7  |
| Engine .....                                 | T5-4-8  |
| Aftertreatment Device .....                  | T5-4-9  |
| Aftertreatment Device .....                  | T5-4-10 |
| Pump Device .....                            | T5-4-11 |
| Around Pump Device .....                     | T5-4-12 |
| Control Valve.....                           | T5-4-13 |
| Signal Control Valve .....                   | T5-4-13 |
| Swing Device .....                           | T5-4-15 |
| Travel Device.....                           | T5-4-15 |
| 3-Spool Solenoid Valve Unit.....             | T5-4-16 |

|                                                                                       |         |
|---------------------------------------------------------------------------------------|---------|
| 2-Spool Solenoid Valve Unit (for Aftertreatment<br>Device Regeneration Control) ..... | T5-4-16 |
| DEF Tank.....                                                                         | T5-4-17 |
| DEF Supply Module.....                                                                | T5-4-17 |
| Layout of Attachment Spec. Parts.....                                                 | T5-4-18 |
| Boom Foot Part Lower Side.....                                                        | T5-4-19 |
| Utility Space Partition Cover .....                                                   | T5-4-20 |
| Control Valve Upper Side, Lower Side .....                                            | T5-4-20 |
| Components in Control Valve.....                                                      | T5-4-22 |
| Pilot Port.....                                                                       | T5-4-36 |

#### Group 5 Troubleshooting A

|                                                                                   |         |
|-----------------------------------------------------------------------------------|---------|
| Troubleshooting A (Base Machine Diagnosis By<br>Using Fault Codes) Procedure..... | T5-5-1  |
| MC Fault Code List.....                                                           | T5-5-3  |
| ECM Fault Code List.....                                                          | T5-5-22 |
| DCU Fault Code List.....                                                          | T5-5-36 |
| Monitor Controller (Monitor) Fault Code List .....                                | T5-5-44 |
| Monitor Controller (Information) Fault Code<br>List.....                          | T5-5-45 |
| Air Conditioner Controller Fault Code List.....                                   | T5-5-48 |
| Communication Terminal Fault Code List .....                                      | T5-5-49 |
| MC Fault Codes 11000 to 11002 .....                                               | T5-5-51 |
| MC Fault Code 11003.....                                                          | T5-5-52 |
| MC Fault Codes 11006, 11007, 11009.....                                           | T5-5-55 |
| Monitor Controller (Monitor) Fault Codes 13002,<br>13003, 13005.....              | T5-5-55 |
| CAN0 Harness Check .....                                                          | T5-5-56 |
| ISO-CAN (Engine) Harness Check.....                                               | T5-5-60 |
| MC Fault Codes 11008, 11010 .....                                                 | T5-5-63 |
| Monitor Controller (Monitor) Fault Codes 13004,<br>13006, 13007 .....             | T5-5-63 |
| CAN1 Harness Check .....                                                          | T5-5-64 |
| MC Fault Code 11100.....                                                          | T5-5-67 |
| MC Fault Code 11101.....                                                          | T5-5-68 |
| MC Fault Codes 11200 to 11202 .....                                               | T5-5-69 |
| MC Fault Codes 11206 to 11208 .....                                               | T5-5-70 |
| MC Fault Codes 11301 to 11303 .....                                               | T5-5-71 |
| MC Fault Codes 11304, 11307, 11325.....                                           | T5-5-72 |
| MC Fault Codes 11995, 11997 .....                                                 | T5-5-73 |
| MC Fault Code 11400.....                                                          | T5-5-74 |
| MC Fault Code 11401.....                                                          | T5-5-75 |
| MC Fault Code 11402.....                                                          | T5-5-76 |
| MC Fault Code 11403.....                                                          | T5-5-77 |
| MC Fault Code 11407.....                                                          | T5-5-78 |
| MC Fault Code 11408.....                                                          | T5-5-79 |

---

It's a preview. You can download the full file by clicking the link below.

**<https://shop servicemanual.com/>**

Service Manuals from 2\$