

Technical Manual

Operational Principle

ZX190W-6

Wheeled Excavator

ZX190W-6 WHEELED EXCAVATOR TECHNICAL MANUAL OPERATIONAL PRINCIPLE

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following separate Part No.
Technical Manual (Operational Principle) : Vol. No.TOLBF50-EN
Technical Manual (Troubleshooting) : Vol. No.TTLBF50-EN
Workshop Manual : Vol. No.WLBF50-EN
Engine Manual : Vol. No.ETDC150-EN, EWDC150-EN

SECTION 1

GENERAL

CONTENTS

Group 1 Specifications

Specifications ZX190W-6 (Standard Gauge, Rear Blade)	T1-1-1
Specifications ZX190W-6 (Standard Gauge, Rear Outrigger).....	T1-1-2
Specifications ZX190W-6 (Standard Gauge, Front Blade, Rear Outrigger) ..	T1-1-3
Specifications ZX190W-6 (Standard Gauge, Front Outrigger, Rear Blade)	T1-1-4
Specifications ZX190W-6 (Standard Gauge, Front Outrigger, Rear Outrigger)	T1-1-5
Working Ranges ZX190W-6 Monoblock Boom.....	T1-1-6
Working Ranges ZX190W-6 2-Piece Boom	T1-1-7

Group 2 Component Layout

Main Component.....	T1-2-1
Electrical System (Overview)	T1-2-5
Electrical System (Cab)	T1-2-7
Electrical System (Switch Panel)	T1-2-8
Electrical System (Controller, Relays)	T1-2-10
Electrical System (Around Air Cleaner)	T1-2-12
Electrical System (Relays)	T1-2-13
Electrical System (Lights)	T1-2-14
Engine	T1-2-15
Aftertreatment Device	T1-2-16
Pump Device	T1-2-17
Around Pump Device	T1-2-18
Control Valve.....	T1-2-19
Signal Control Valve	T1-2-20
Swing Shockless Valve	T1-2-21
Swing Device	T1-2-22
Travel Shockless Valve	T1-2-22
Accumulator Charging Valve	T1-2-22
Brake Valve	T1-2-22
Solenoid Valve Unit	T1-2-23
Transmission Control Solenoid Valve.....	T1-2-25
Travel Device.....	T1-2-25
Around DEF Tank	T1-2-26
Layout of Attachment Spec. Parts.....	T1-2-27
Auxiliary Control Solenoid Valve Unit.....	T1-2-28
Breaker Relief Solenoid Valve	T1-2-28
Selector Valve Control Valve.....	T1-2-28

Group 3 Component Specifications

Engine	T1-3-1
Engine Accessories	T1-3-5
Hydraulic Component.....	T1-3-6
Electrical Component.....	T1-3-11

(Blank)

SECTION 2

SYSTEM

CONTENTS

Group 1 Controller

Outline	T2-1-1
CAN Circuit	T2-1-2

Group 2 Control System

Outline	T2-2-1
Engine Control	T2-2-6
Pump Control	T2-2-40
Valve Control (Standard)	T2-2-70
Valve Control (Option)	T2-2-92
Other Control	T2-2-102
MC2 Control	T2-2-130

Group 3 Engine System

ECM System	T2-3-1
Fuel Injection Control	T2-3-2
Fuel Injection Amount Correction Control	T2-3-10
EGR Control	T2-3-12
Preheating Control	T2-3-14
Variable Turbocharger Control	T2-3-15
Alarm Control	T2-3-16
Urea SCR System	T2-3-17
Engine Output Restriction Control (INDUCEMENT)	T2-3-28
Aftertreatment Device	T2-3-32
Aftertreatment Device Regeneration Control	T2-3-34

Group 4 Hydraulic System

Outline	T2-4-1
Pilot Circuit	T2-4-2
Steering Circuit	T2-4-24
Main Circuit	T2-4-26
Breaker/Pulverizer/Crusher Circuit (Option)	T2-4-44

Group 5 Electrical System

Outline	T2-5-1
Main Circuit	T2-5-2
Electric Power Circuit (Key Switch: OFF)	T2-5-4
CAN Circuit	T2-5-6
Accessory Related Circuit (Key Switch: ACC)	T2-5-8
Starting Circuit (Key Switch: START)	T2-5-10
Charging Circuit (Key Switch: ON)	T2-5-12
Surge Voltage Prevention Circuit	T2-5-16
Pilot Shut-Off Circuit (Key Switch: ON)	T2-5-18
Auto Shut-Down Circuit/Automatic Engine Stop Circuit at Low Temperature	T2-5-20
Engine Stop Circuit	T2-5-22

Monitor Circuit	T2-5-25
Security Circuit	T2-5-26
Radio Circuit	T2-5-28
Air Conditioner Circuit	T2-5-28
Accessory Circuit	T2-5-31
Work Light Circuit	T2-5-32
Wiper/Washer Circuit	T2-5-38
Cab Light Circuit	T2-5-40
Light Circuit	T2-5-43
Light Lighting Circuit	T2-5-44
Turn Signal Light Circuit	T2-5-52
Hazard Light Circuit	T2-5-56
Brake Light Circuit	T2-5-58
Horn Circuit	T2-5-60
Forward/Reverse OFF Buzzer Circuit	T2-5-62
Beacon Light Circuit (Optional)	T2-5-64

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$