

Technical Manual

Troubleshooting

ZX

250LC-6

250LCN-6

Hydraulic Excavator

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

PRINTED IN JAPAN (K) 2015, 09

Service Manual consists of the following separate Part No.

Technical Manual (Operational Principle)	: Vol. No.TODC150-EN
Technical Manual (Troubleshooting)	: Vol. No.TTDC150-EN
Workshop Manual	: Vol. No.WDC150-EN
Engine Manual	: Vol. No.ETDC150-EN, EWDC150-EN

SECTION 4

OPERATIONAL PERFORMANCE TEST

CONTENTS

Group 1 Introduction

Operational Performance Tests.....	T4-1-1
Preparation for Performance Tests	T4-1-2

Group 2 Standard

Operational Performance Standard Table	T4-2-1
Main Pump P-Q Diagram (P1, P2)	T4-2-11
Main Pump P-Q Diagram (P3).....	T4-2-12
Sensor Activating Range.....	T4-2-14
MPDr. Monitor Indicating Values.....	T4-2-16

Group 3 Engine Test

Engine Speed	T4-3-1
Lubricant Consumption	T4-3-4

Group 4 Machine Performance Test

Travel Speed	T4-4-1
Track Revolution Speed	T4-4-2
Mistrack Check.....	T4-4-3
Travel Parking Leakage	T4-4-4
Swing Speed.....	T4-4-5
Swing Function Drift Check	T4-4-6
Swing Motor Leakage	T4-4-8
Maximum Swingable Slant Angle.....	T4-4-10
Swing Bearing Play	T4-4-12
Hydraulic Cylinder Cycle Time	T4-4-14
Dig Function Drift Check.....	T4-4-16
Control Lever Operating Force.....	T4-4-19
Control Lever Stroke	T4-4-20
Combined Operation of Boom Raise and Swing Function Check.....	T4-4-21
Combined Operation of Boom Raise and Arm Roll-In Function Check.....	T4-4-22
Clearance of Front Attachment Connecting Part.....	T4-4-23

Group 5 Component Test

Primary Pilot Pressure.....	T4-5-1
Secondary Pilot Pressure.....	T4-5-3
5-Spool Solenoid Valve Set Pressure.....	T4-5-4
2-Spool Solenoid Valve (Aftertreatment Device Regeneration Control) Set Pressure.....	T4-5-5
Main Pump Delivery Pressure.....	T4-5-7
Main Relief Set Pressure	T4-5-8
Relief Pressure (when relieving swing)	T4-5-12
Overload Relief Valve Set Pressure	T4-5-14
Main Pump Flow Rate Measurement.....	T4-5-16
Swing Motor Drainage.....	T4-5-26
Travel Motor Drainage	T4-5-28

Group 6 Adjustment

Rewrite of Aftertreatment Device Serial No.....	T4-6-1
How to Clear Fault Code.....	T4-6-2
Procedure after Replacing DCU and ECU.....	T4-6-3
Air Bleeding from the Diesel Exhaust Fluid Defrosting Piping	T4-6-4
How to Check Manual Regeneration Switch	T4-6-5
Remedy at DEF Pressure Decrease	T4-6-6
Remedy at DEF Abnormal Quality	T4-6-8
Clean DEF Tank.....	T4-6-10
Remedy when Mixing Oil in DEF Tank.....	T4-6-11

(Blank)

SECTION 5

TROUBLESHOOTING

CONTENTS

Group 1 Diagnosing Procedure

Introduction.....	T5-1-1
Diagnosis Procedure.....	T5-1-2
Electrical System Inspection	T5-1-5
Precautions for Inspection and Maintenance	T5-1-6
Instructions for Disconnecting Connectors	T5-1-8
Fuse Inspection.....	T5-1-10
Fusible Link Inspection	T5-1-13
Battery Voltage Check.....	T5-1-14
Alternator Check	T5-1-15
Continuity Check.....	T5-1-16
Voltage and Current Measurement.....	T5-1-18
Check by False Signal	T5-1-25
Test Wire Harness	T5-1-26

Group 2 Monitor

Outline	T5-2-1
Operating Procedures of Service Menu.....	T5-2-2
Setting Menu	T5-2-43
Inspection of Engine Oil Level, Coolant Level, Hour Meter, and Fuel Gauge	T5-2-48
Fuel Gauge, Coolant Temperature Gauge, DEF/AdBlue Gauge	T5-2-49

Group 3 e-Service

Outline	T5-3-1
List of Operation Data	T5-3-2
Communication System	T5-3-4

Group 4 Component Layout

Main Component.....	T5-4-1
Electrical System (Overview)	T5-4-3
Electrical System (Rear Tray).....	T5-4-4
Electrical System (Switch Panel)	T5-4-5
Electrical System (Utility Space).....	T5-4-6
Electrical System (Relays)	T5-4-7
Engine	T5-4-8
Aftertreatment Device	T5-4-9
Pump Device	T5-4-10
Around Pump Device	T5-4-11
Control Valve.....	T5-4-12
Signal Control Valve	T5-4-12
Swing Device	T5-4-14
Travel Device.....	T5-4-14
5-Spool Solenoid Valve Unit.....	T5-4-15
2-Spool Solenoid Valve Unit (Aftertreatment Device Regeneration Control)	T5-4-15

DEF Tank.....	T5-4-16
DEF Supply Module.....	T5-4-16
Layout of Attachment Spec. Parts	T5-4-18
Components in Control Valve.....	T5-4-24
Pilot Port.....	T5-4-46

Group 5 Troubleshooting A

Troubleshooting A (Base Machine Diagnosis By Using Fault Codes) Procedure.....	T5-5-1
MC Fault Code List.....	T5-5-3
ECM Fault Code List.....	T5-5-24
DCU Fault Code List.....	T5-5-38
Monitor Controller (Monitor) Fault Code List	T5-5-45
Monitor Controller (Information) Fault Code List.....	T5-5-46
Air Conditioner Controller Fault Code List.....	T5-5-49
Communication Terminal Fault Code List	T5-5-50
MC Fault Codes 11000 to 11002	T5-5-51
MC Fault Code 11003.....	T5-5-52
MC Fault Codes 11006, 11007, 11009.....	T5-5-55
Monitor Controller (Monitor) Fault Codes 13002, 13003, 13005	T5-5-55
CAN0 Harness Check	T5-5-56
ISO-CAN (Engine) Harness Check.....	T5-5-60
MC Fault Codes 11008, 11010	T5-5-63
Monitor Controller (Monitor) Fault Codes 13004, 13006, 13007	T5-5-63
CAN1 Harness Check	T5-5-64
MC Fault Code 11100.....	T5-5-67
MC Fault Code 11101.....	T5-5-68
MC Fault Codes 11200 to 11202	T5-5-69
MC Fault Code 11203.....	T5-5-70
MC Fault Codes 11206 to 11208	T5-5-71
MC Fault Codes 11301 to 11303	T5-5-72
MC Fault Codes 11304, 11307, 11325.....	T5-5-73
MC Fault Codes 11995, 11997	T5-5-74
MC Fault Code 11400.....	T5-5-75
MC Fault Code 11401.....	T5-5-76
MC Fault Code 11402.....	T5-5-77
MC Fault Code 11403.....	T5-5-78
MC Fault Code 11406.....	T5-5-79
MC Fault Code 11407.....	T5-5-80
MC Fault Code 11408.....	T5-5-81
MC Fault Code 11409.....	T5-5-82
MC Fault Code 11410.....	T5-5-83
MC Fault Code 11411.....	T5-5-84

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$