

Farmall® 25SC
Tractor

SERVICE MANUAL

Part number 92189883

English
April 2024





SERVICE MANUAL

Farmall® 25SC 25 HP Sub-compact tractor

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.202] Air cleaners and lines	10.4
[10.254] Intake and exhaust manifolds and muffler	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Hydrostatic drive.....	29
[29.200] Mechanical control	29.1
[29.218] Pump and motor components.....	29.2
[29.202] Hydrostatic transmission	29.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2

[31.110] One-speed rear Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.120] Mechanical service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump	35.3
[35.350] Safety and main relief valves	35.4
[35.114] Three-point hitch control valve	35.5
[35.355] Hydraulic hand control	35.6
[35.726] Excavator and backhoe hydraulic controls.....	35.7
Hitches, drawbars, and implement couplings.....	37
[37.120] Rear three-point hitch linkage.....	37.1
[37.162] Front hitch	37.2
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system	55.3

[55.301] Alternator	55.4
[55.302] Battery	55.5
[55.202] Cold start aid	55.6
[55.011] Fuel tank system	55.7
[55.010] Fuel injection system	55.8
[55.012] Engine cooling system	55.9
[55.013] Engine oil system	55.10
[55.610] Ground speed control	55.11
[55.522] Cab Power Take-Off (PTO) controls	55.12
[55.031] Parking brake electrical system	55.13
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.14
[55.404] External lighting	55.15
[55.405] External lighting switches, relays and sensors	55.16
[55.510] Cab or platform harnesses and connectors	55.17
[55.408] Warning indicators, alarms, and instruments	55.18
[55.027] Cruise control	55.19
[55.509] Operator seat	55.20
Accessories	88
[88.100] Accessories	88.1
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.151] Cab interior	90.2
[90.154] Cab doors and hatches	90.3
[90.156] Cab windshield and windows	90.4
[90.118] Protections and footboards	90.5
[90.114] Operator protections	90.6
[90.120] Operator seat	90.7
[90.100] Engine hood and panels	90.8
[90.102] Engine shields, hood latches, and trims	90.9

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$