

# Shop Manual

MOBILE CRUSHER

***BR380JG-3***

SERIAL NUMBERS 5001 and up

**KOMATSU**



---

# 00 Index and foreword

---

# Index

00 Index and foreword	
Index	00-2
Abbreviations	00-16
Foreword, safety, and basic information-	00-21
How to read the shop manual	00-21
Safety notice for operation-	00-23
Precautions to prevent fire-	00-31
Action if fire occurs	00-32
Precautions when disposing of waste materials-	00-33
Exhaust gas regulations - Actions taken	00-34
Precautions about AdBlue®-	00-35
AdBlue/DEF - Store	00-36
Precautions for handling hydraulic component-	00-37
Piping - Precautions for disconnection and connection-	00-39
Precautions for handling electrical component-	00-45
Precautions for handling fuel system component-	00-47
Precautions for handling air intake system component-	00-48
Practical use of KOMTRAX	00-49
Disconnection and connection of push-pull type coupler-	00-50
Precautions for disconnecting and connecting connector	00-54
Procedures for disconnecting and connecting DT connectors	00-58
Procedures for disconnecting and connecting slide lock type connectors	00-59
Procedures for disconnecting and connecting connectors with pull and release type lock	00-60
Procedures for disconnecting and connecting connectors with push and release type lock	00-61
Procedures for disconnecting and connecting connectors that require rotation of housing to release and apply lock-	00-63
How to read wire code	00-64
Description of terms used in maintenance standard-	00-67
Standard tightening torque table	00-69
01 Specifications	
Abbreviations	01-3
Specifications	01-8
Specification drawing	01-8
Specification drawing of :BR380JG-3	01-8
Specifications-	01-9
Specifications of :BR380JG-3-	01-9
Weight table-	01-12
Weight table: BR380JG-3	01-12
Table of fuel, coolant and lubricants	01-13
10 Structure and function	
Abbreviations	10-4
Urea SCR system	10-9
Urea SCR system component layout drawing	10-9
Urea SCR system diagram	10-14
Urea SCR system functions-	10-15
Urea SCR system components	10-29
Starting system	10-38
Starting system component layout drawing	10-38
System operating lamp system	10-40
Battery disconnect switch	10-41
Engine system	10-42
Engine system component layout drawing	10-42
Engine control system-	10-44
Engine automatic warm-up system-	10-47

Overheat prevention system - - - - -	10-49
Turbocharger protection system - - - - -	10-51
Engine system component - - - - -	10-53
Cooling system - - - - -	10-71
Cooling system component layout drawing - - - - -	10-71
Control system - - - - -	10-73
Control system component layout drawing - - - - -	10-73
Machine monitor system - - - - -	10-76
KOMTRAX system - - - - -	10-77
Control system component - - - - -	10-78
Hydraulic system - - - - -	10-106
Hydraulic system component layout drawing - - - - -	10-106
CLSS - - - - -	10-107
Pump and engine combined control system - - - - -	10-111
Pump and valve control system - - - - -	10-115
Hydraulic system components - - - - -	10-117
Work equipment system - - - - -	10-177
Work equipment system component layout drawing - - - - -	10-177
Structure of valve control - - - - -	10-180
Grizzly feeder semi automatic control system - - - - -	10-182
Abnormal load shutdown system - - - - -	10-183
Crusher jaw tip adjustment system - - - - -	10-184
Work equipment system components - - - - -	10-186
Crusher motor - - - - -	10-186
Travel system - - - - -	10-198
Travel system component layout drawing - - - - -	10-198
Travel control system diagram - - - - -	10-202
Travel system components - - - - -	10-204
Undercarriage and frame - - - - -	10-224
Undercarriage layout drawing - - - - -	10-224
Work equipment - - - - -	10-226
Primary conveyor - - - - -	10-226
Grizzly feeder - - - - -	10-228
Crusher - - - - -	10-229
Vibrator - - - - -	10-233
20. Standard value table	
Abbreviations - - - - -	20-3
Standard value table for engine - - - - -	20-8
Standard value table for engine: BR380JG-3 - - - - -	20-8
Standard value table for machine - - - - -	20-11
Standard value table for machine: BR380JG-3 - - - - -	20-11
Machine posture and measuring procedure drawings for performance measurement - - - - -	20-18
30 Testing and adjusting	
Abbreviations - - - - -	30-3
Related information on testing and adjusting - - - - -	30-8
Tools for testing and adjusting - - - - -	30-8
Sketches for testing and adjusting tools - - - - -	30-14
Engine and cooling system - - - - -	30-15
Testing engine speed - - - - -	30-15
Testing boost pressure - - - - -	30-17
Testing exhaust gas color - - - - -	30-19
Testing and adjusting valve clearance - - - - -	30-22
Testing compression pressure - - - - -	30-24
Testing blowby pressure - - - - -	30-29
Testing engine oil pressure - - - - -	30-31
Testing EGR valve and VGT oil pressures - - - - -	30-32

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$