

Shop Manual

BULLDOZER

D475A -8E0

D475Ai -8E0

SERIAL NUMBERS 50001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-27
Foreword, Safety, Basic Information	00-30
How to Read the Shop Manual	00-30
Safety Notice for Operation	00-32
Precautions to Prevent Fire	00-40
Procedures If Fire Occurs	00-42
Precautions When You Discard Waste Materials	00-43
Precautions When You Handle Hydraulic Equipment	00-44
Precautions When You Disconnect and Connect Pipings	00-47
Precautions When You Handle Electrical Equipment	00-53
Precautions When You Handle Fuel System Equipment	00-55
Precautions When You Handle Intake System Equipment	00-56
Practical Use of KOMTRAX	00-57
Disconnect and Connect Push-Pull Type Coupler	00-58
Precautions for Disconnection and Connection of Connectors	00-62
How to Disconnect and Connect Deutsch Connector	00-67
How to Disconnect and Connect Slide Lock Type Connector	00-68
How to Disconnect and Connect Connector with Lock to Pull	00-75
How to Disconnect and Connect Connector with Lock to Push	00-76
How to Disconnect and Connect Connector with Housing to Rotate	00-79
How to Read the Codes for Electric Cable	00-80
Explanation of Terms for Maintenance Standard	00-84
Standard Tightening Torque Table	00-87
Conversion Table	00-94
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-7
Weight Table	01-27
Fuel, Coolant, Lubricant	01-32
10 Structure and Function	10-1
Table of Contents	10-2
NOx Control System	10-6
Function of NOx Control System	10-6
Boot-up System	10-9
Layout Drawing of Boot-up System	10-9
System Operating Lamp System	10-10
Battery Isolator	10-11
Engine System	10-13
Layout Drawing of Engine System	10-13
Engine Control System	10-15
Automatic Idle Stop System	10-18
Component Parts of Engine System	10-21
Cooling System	10-42
Layout Drawing of Cooling System	10-42
Specifications of Cooling System	10-44
Component Parts of Cooling System	10-45
Control System	10-66
Layout Drawing of Control System	10-66
Machine Monitor System	10-67
KOMTRAX Plus System	10-69
Component Parts of Control System	10-71
Hydraulic System	10-129
Layout Drawing of Hydraulic System	10-129

CLSS	10-130
Component Parts of Hydraulic System.....	10-133
Power Train System.....	10-186
Layout Drawing of Power Train System	10-186
Transmission, Steering, and Brake Control System	10-189
Palm Command Control System	10-193
Function of Gear Shift Mode	10-197
Centralized Pressure Pickup Port.....	10-200
Component Parts of Power Train System.....	10-202
Work Equipment System.....	10-260
Layout Drawing of Work Equipment System	10-260
Function of Work Equipment System	10-265
Component Parts of Work Equipment System	10-266
ICT System	10-277
Layout Drawing of ICT System.....	10-277
System Diagram of ICT Control System.....	10-278
Blade Control System	10-280
Smooth Start System	10-286
Slip Control System.....	10-288
Assist Control System	10-290
Straight Travel Correction System.....	10-292
Smooth Carry System	10-294
Component Parts of ICT System.....	10-296
Lifting System	10-310
Power Ladder System.....	10-310
Component Parts of Lifting System	10-313
Undercarriage and Frame	10-319
Main Frame.....	10-319
Suspension	10-321
Track Frame and Idler Cushion	10-323
Work Equipment	10-325
Structure of Front Work Equipment	10-325
Structure of Cylinder Stay	10-327
Structure of Variable Giant Ripper.....	10-328
Structure of Variable Multi-Shank Ripper.....	10-329
CAB Related Parts.....	10-330
ROPS.....	10-330
CAB	10-331
CAB Mount	10-332
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine D475A-8E0.....	20-3
Standard Value Table for Engine D475AI-8E0.....	20-8
Standard Value Table for Machine.....	20-13
Standard Value Table for Machine: D475A-8E0	20-13
Standard Value Table for Machine: D475AI-8E0	20-38
Machine Posture and Procedures to Measure Performance	20-63
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-6
Related Information on Testing and Adjusting	30-7
Tools for Testing and Adjusting.....	30-7
Sketch of Tools for Testing and Adjusting	30-16
Engine and Cooling System	30-19
Examine Engine Speed.....	30-19
Examine Boost Pressure.....	30-24
Examine Exhaust Gas Temperature.....	30-31

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$