

Shop Manual

HYDRAULIC EXCAVATOR

PC130-11E0

SERIAL NUMBERS

PC130-11E0-C40001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-20
How to Read the Shop Manual	00-20
Safety Notice for Operation	00-22
Precautions to Prevent Fire	00-30
Procedures If Fire Occurs	00-32
Precautions for Disposing of Waste Materials	00-33
Engine Technology to Conform Exhaust Gas Emission	00-34
Precautions for DEF	00-35
Store DEF	00-36
Precautions When You Handle Hydraulic Equipment	00-37
Precautions When You Disconnect and Connect Pipings	00-40
Precautions When You Handle Electrical Equipment	00-47
Precautions When You Handle Fuel System Equipment	00-49
Precautions When You Handle Intake System Equipment	00-50
Practical Use of KOMTRAX	00-51
Disconnect and Connect Push-Pull Type Coupler	00-52
Precautions for Disconnection and Connection of Connectors	00-56
How to Disconnect and Connect Deutsch Connector	00-61
How to Disconnect and Connect Slide Lock Type Connector	00-62
How to Disconnect and Connect Connector with Lock to Pull	00-69
How to Disconnect and Connect Connector with Lock to Push	00-70
How to Disconnect and Connect Connector with Housing to Rotate	00-73
How to Read the Codes for Electric Cable	00-74
Explanation of Terms for Maintenance Standard	00-78
Standard Tightening Torque Table	00-81
Conversion Table	00-88
Abbreviation List	00-93
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-5
Specifications	01-6
Weight Table	01-9
Fuel, Coolant, Lubricant	01-11
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-6
Layout Drawing of Urea SCR System	10-6
Urea SCR System Diagram	10-9
Function of Urea SCR System	10-10
Component Parts of Urea SCR System	10-20
Boot-up System	10-29
Layout Drawing of Boot-Up System	10-29
System Operating Lamp System	10-30
Battery Disconnect Switch	10-32
Engine System	10-33
Layout Drawing of Engine System	10-33
Engine Control System	10-35
Auto-Deceleration System	10-38
Engine Automatic Warm-up System	10-40
Overheat Prevention System	10-42
Turbocharger Protection System	10-44
Automatic Idle Stop System	10-45
Component Parts of Engine System	10-48

Cooling System.....	10-66
Layout Drawing of Cooling System	10-66
Fan Speed Control System of Fan Clutch	10-68
Engine Output Control System of Fan Clutch	10-70
Component Parts of Cooling System	10-72
Control System	10-73
Layout Drawing of Control System	10-73
Machine Monitor System.....	10-75
KomVision System	10-77
PPC Levers.....	10-81
PPC Oil Pressure Switch	10-83
Sensor	10-84
KOMTRAX System	10-87
Component Parts of Control System	10-88
Hydraulic System	10-126
Layout Drawing of Hydraulic System.....	10-126
CLSS	10-128
Engine and Pump Combined Control System	10-131
Component Parts of Hydraulic System.....	10-136
Work Equipment System.....	10-223
Layout Drawing of Work Equipment System	10-223
Structure of Valve Control	10-225
PPC Lock System	10-226
Work Equipment and Travel Automatic Lock System	10-227
Attachment Oil Flow Adjuster System	10-229
Component Parts of Work Equipment System	10-232
Swing System	10-264
Layout Drawing of Swing System.....	10-264
Swing Control System Diagram	10-266
Component Parts of Swing System.....	10-269
Travel System	10-280
Layout Drawing of Travel System.....	10-280
System Diagram of Travel Control System.....	10-282
Component Parts of Travel System.....	10-286
Undercarriage and Frame	10-302
Layout Drawing of Undercarriage.....	10-302
Idle Cushion.....	10-303
Work Equipment	10-304
Structure of Work Equipment	10-304
Function of Work Equipment.....	10-305
Work Equipment Clearance Adjustment Shim.....	10-306
Bucket Clearance Adjustment Shim	10-307
CAB Related Parts.....	10-308
ROPS CAB	10-308
CAB Mount	10-309
CAB Tipping Stopper	10-310
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC130-11E0	20-3
Standard Value Table for Machine.....	20-7
Standard Value Table for Machine: PC130-11E0.....	20-7
Machine Posture and Procedures to Measure Performance	20-20
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-6
Related Information on Testing and Adjusting	30-7
Differences In Machine Monitor Symbols	30-7

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$