

# Shop Manual

HYDRAULIC  
EXCAVATOR

# PC170LC-11E0

SERIAL NUMBERS

PC170LC-11E0 K77001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-19
Foreword, Safety, Basic Information .....	00-25
How to Read the Shop Manual .....	00-25
Safety Notice for Operation .....	00-27
Precautions to Prevent Fire .....	00-35
Procedures If Fire Occurs .....	00-37
Precautions for Disposing of Waste Materials .....	00-38
Engine Technology to Conform Exhaust Gas Emission .....	00-39
Precautions for DEF .....	00-40
Precautions When You Handle Hydraulic Equipment .....	00-42
Precautions When You Disconnect and Connect Pipings .....	00-45
Precautions When You Handle Electrical Equipment .....	00-52
Precautions When You Handle Fuel System Equipment .....	00-54
Precautions When You Handle Intake System Equipment .....	00-55
Practical Use of KOMTRAX .....	00-56
Disconnect and Connect Push-Pull Type Coupler .....	00-57
Precautions for Disconnection and Connection of Connectors .....	00-61
How to Disconnect and Connect Deutsch Connector .....	00-66
How to Disconnect and Connect Slide Lock Type Connector .....	00-67
How to Disconnect and Connect Connector with Lock to Pull .....	00-74
How to Disconnect and Connect Connector with Lock to Push .....	00-75
How to Disconnect and Connect Connector with Housing to Rotate .....	00-78
How to Read the Codes for Electric Cable .....	00-79
Explanation of Terms for Maintenance Standard .....	00-83
Standard Tightening Torque Table .....	00-86
Conversion Table .....	00-93
01 Specifications .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing .....	01-9
Working Range Drawings .....	01-11
Specifications .....	01-12
Weight Table .....	01-16
Table of Fuel, Coolant, and Lubricants .....	01-18
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-5
Urea SCR System .....	10-11
Layout Drawing of Urea SCR System .....	10-11
Urea SCR System Diagram (Divided Type) .....	10-16
Function of Urea SCR System .....	10-17
Component Parts of Urea SCR System .....	10-27
Boot-up System .....	10-36
Layout Drawing of Boot-up System .....	10-36
Engine System .....	10-38
Layout Drawing of Engine System .....	10-38
Engine Control System .....	10-40
Auto-Deceleration System .....	10-43
Engine Automatic Warm-up System .....	10-45
Overheat Prevention System .....	10-47
Turbocharger Protection System .....	10-50
Automatic Idle Stop System .....	10-52
Component Parts of Engine System .....	10-55
Cooling System .....	10-64

Layout Drawing of Cooling System .....	10-64
Fan Speed Control System of Fan Clutch .....	10-66
Engine Output Control System of Fan Clutch .....	10-68
Component Parts of Cooling System .....	10-70
Control System .....	10-71
Layout Drawing of Control System .....	10-71
Machine Monitor System.....	10-72
KomVision System.....	10-74
KOMTRAX System .....	10-97
Component Parts of Control System .....	10-98
Hydraulic System .....	10-141
Layout Drawing of Hydraulic System.....	10-141
CLSS .....	10-145
Engine and Pump Combined Control System .....	10-148
Pump and Valve Control System.....	10-154
Component Parts of Hydraulic System.....	10-157
Work Equipment System.....	10-245
Layout Drawing of Work Equipment System .....	10-245
One-Touch Power Maximizing System .....	10-249
PPC Lock System .....	10-251
Work Equipment and Travel Automatic Lock System .....	10-252
Attachment Oil Flow Adjuster System .....	10-254
Tool Control System.....	10-256
Component Parts of Work Equipment System .....	10-258
Swing System .....	10-293
Layout Drawing of Swing System.....	10-293
Swing Control System Diagram .....	10-297
Component Parts of Swing System.....	10-300
Travel System .....	10-308
Layout Drawing of Travel System.....	10-308
System Diagram of Travel Control System.....	10-311
Component Parts of Travel System.....	10-313
Undercarriage and Frame .....	10-333
Layout Drawing of Undercarriage.....	10-333
Work Equipment .....	10-335
Structure of Work Equipment .....	10-335
Function of Work Equipment.....	10-336
Work Equipment Clearance Adjustment Shim.....	10-337
Bucket Clearance Adjustment Shim .....	10-338
CAB Related Parts.....	10-339
ROPS CAB .....	10-339
CAB Mount .....	10-340
CAB Tipping Stopper .....	10-341
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Abbreviation List .....	20-3
Standard Value Table for Engine .....	20-9
Standard Value Table for Engine: PC170LC-11E0.....	20-9
Standard Value Table for Machine.....	20-13
Standard Value Table for Machine: PC170LC-11E0 .....	20-13
Machine Posture and Procedures to Measure Performance .....	20-26
Standard Value Table for Electricity.....	20-31
Standard Value Table for Electricity.....	20-31
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Abbreviation List .....	30-6
Related Information on Testing and Adjusting .....	30-12
Tools for Testing and Adjusting.....	30-12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$