

# Shop Manual



## CRAWLER HARVESTER

---

**PC210F-10M0**

**PC210FLC-10M0**

## SERIAL NUMBERS

---

B40001-

and up

**KOMATSU**



---

# **00 Index and Foreword**

---

# Index

|                                                                      |       |
|----------------------------------------------------------------------|-------|
| 00 Index and Foreword .....                                          | 00-1  |
| Abbreviation List .....                                              | 00-14 |
| Foreword, Safety, Basic Information .....                            | 00-17 |
| How to Read the Shop Manual .....                                    | 00-17 |
| Safety Notice for Operation .....                                    | 00-19 |
| Precautions to Prevent Fire .....                                    | 00-27 |
| Procedures If Fire Occurs .....                                      | 00-28 |
| Precautions When You Dispose of Waste Materials .....                | 00-29 |
| Precautions When You Handle Hydraulic Equipment .....                | 00-30 |
| Precautions When You Disconnect and Connect Pipings .....            | 00-33 |
| Precautions When You Handle Electrical Equipment .....               | 00-40 |
| Precautions When You Handle Fuel System Equipment .....              | 00-42 |
| Precautions When You Handle Intake System Equipment .....            | 00-43 |
| Practical Use of KOMTRAX .....                                       | 00-44 |
| Disconnect and Connect Push-Pull Type Coupler .....                  | 00-45 |
| Precautions for Disconnection and Connection of Connectors .....     | 00-49 |
| How to Disconnect and Connect Deutsch Connector .....                | 00-53 |
| How to Disconnect and Connect Slide Lock Type Connector .....        | 00-54 |
| How to Disconnect and Connect Connector with Lock to Pull .....      | 00-56 |
| How to Disconnect and Connect Connector with Lock to Push .....      | 00-57 |
| How to Disconnect and Connect Connector with Housing to Rotate ..... | 00-59 |
| How to Read the Codes for Electric Cable .....                       | 00-60 |
| Explanation of Terms for Maintenance Standard .....                  | 00-64 |
| Standard Tightening Torque Table .....                               | 00-67 |
| Conversion Table .....                                               | 00-74 |
| 01 Specifications .....                                              | 01-1  |
| Table of Contents .....                                              | 01-2  |
| Specifications .....                                                 | 01-3  |
| Specification Drawing .....                                          | 01-3  |
| Working Range Drawings .....                                         | 01-6  |
| Specifications .....                                                 | 01-9  |
| Weight Table .....                                                   | 01-15 |
| Fuel, Coolant and Lubricant to Meet Ambient Temperature .....        | 01-18 |
| 10 Structure and Function .....                                      | 10-1  |
| Table of Contents .....                                              | 10-2  |
| Boot-up System .....                                                 | 10-5  |
| Layout Drawing of Boot-up System .....                               | 10-5  |
| System Operating Lamp System .....                                   | 10-6  |
| Battery Disconnect Switch .....                                      | 10-7  |
| Engine System .....                                                  | 10-8  |
| Layout Drawing of Engine System .....                                | 10-8  |
| Engine Control System .....                                          | 10-9  |
| Auto-Deceleration System .....                                       | 10-11 |
| Engine Automatic Warm-up System .....                                | 10-13 |
| Overheat Prevention System .....                                     | 10-15 |
| Turbocharger Protection System .....                                 | 10-18 |
| Cooling System .....                                                 | 10-19 |
| Layout Drawing of Cooling System .....                               | 10-19 |
| Control System .....                                                 | 10-21 |
| Layout Drawing of Control System .....                               | 10-21 |
| Machine Monitor System .....                                         | 10-23 |
| KOMTRAX System .....                                                 | 10-25 |
| Component Parts of Control System .....                              | 10-26 |
| Hydraulic System .....                                               | 10-50 |
| Layout Drawing of Hydraulic System .....                             | 10-50 |
| CLSS .....                                                           | 10-53 |

|                                                             |        |
|-------------------------------------------------------------|--------|
| Engine and Pump Combined Control System .....               | 10-72  |
| Pump and Valve Control System.....                          | 10-77  |
| Component Parts of Hydraulic System.....                    | 10-80  |
| Work Equipment System.....                                  | 10-148 |
| Layout Drawing of Work Equipment System .....               | 10-148 |
| PPC Lock System .....                                       | 10-154 |
| Attachment Oil Flow Adjuster System .....                   | 10-156 |
| Component Parts of Work Equipment System .....              | 10-158 |
| Swing System .....                                          | 10-179 |
| Layout Drawing of Swing System.....                         | 10-179 |
| Swing Control System Diagram .....                          | 10-181 |
| Component Parts of Swing System.....                        | 10-185 |
| Travel System .....                                         | 10-197 |
| Layout Drawing of Travel System.....                        | 10-197 |
| System Diagram of Travel Control System.....                | 10-199 |
| Function of Travel Control System .....                     | 10-200 |
| Component Parts of Travel System.....                       | 10-201 |
| Function of Swing Circle .....                              | 10-220 |
| Undercarriage and Frame .....                               | 10-221 |
| Layout Drawing of Undercarriage.....                        | 10-221 |
| Work Equipment .....                                        | 10-223 |
| Structure of Work Equipment .....                           | 10-223 |
| Work Equipment Clearance Adjustment Shim.....               | 10-224 |
| CAB Related Parts.....                                      | 10-226 |
| ROPS CAB .....                                              | 10-226 |
| CAB Mount .....                                             | 10-227 |
| CAB Tipping Stopper .....                                   | 10-229 |
| 20 Standard Value Table .....                               | 20-1   |
| Table of Contents .....                                     | 20-2   |
| Standard Value Table for Engine .....                       | 20-3   |
| Standard Value Table for Engine: PC210F-10M0 .....          | 20-3   |
| Standard Value Table for Engine: PC210FLC-10M0.....         | 20-7   |
| Standard Value Table for Machine: PC210F-10M0.....          | 20-11  |
| Standard Value Table for Machine: PC210FLC-10M0 .....       | 20-25  |
| Machine Posture and Procedures to Measure Performance ..... | 20-39  |
| 30 Testing and Adjusting .....                              | 30-1   |
| Table of Contents .....                                     | 30-2   |
| Precautions Before Work .....                               | 30-5   |
| Related Information on Testing and Adjusting .....          | 30-6   |
| Tools for Testing and Adjusting.....                        | 30-6   |
| Sketch of Tools for Testing and Adjusting .....             | 30-11  |
| Engine and Cooling System .....                             | 30-13  |
| Examine Engine Speed.....                                   | 30-13  |
| Examine Boost Pressure.....                                 | 30-16  |
| Examine Exhaust Gas Color .....                             | 30-19  |
| Examine Mass Air Flow and Temperature Sensor.....           | 30-22  |
| Examine and Adjust Valve Clearance.....                     | 30-24  |
| Examine Compression Pressure .....                          | 30-27  |
| Examine Blowby Pressure .....                               | 30-30  |
| Examine Engine Oil Pressure .....                           | 30-33  |
| Examine Fuel Pressure.....                                  | 30-35  |
| Examine Fuel Discharge, Return and Leakage .....            | 30-42  |
| Bleed Air from Fuel System.....                             | 30-48  |
| Examine Fuel Circuit for Leakage .....                      | 30-50  |
| Handle Cylinder Cut-out Mode Operation.....                 | 30-52  |
| Handle No-Injection Cranking Operation .....                | 30-53  |

It's a preview. You can download the full file by clicking the link below.

**<https://shop servicemanual.com/>**

Service Manuals from 2\$