

Shop Manual

WHEEL LOADER

WA475-11E0

WA485-11E0

SERIAL NUMBERS

WA475-11E0	H30051 and up 130004 and up
WA485-11E0	H35051 and up 140002 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-30
How to Read the Shop Manual	00-30
Safety Notice for Operation	00-32
Precautions to Prevent Fire	00-40
Procedures If Fire Occurs	00-42
Precautions for Disposing of Waste Materials	00-43
Engine Technology to Conform Exhaust Gas Emission	00-44
Precautions for DEF	00-45
Store DEF	00-46
Precautions When You Handle Hydraulic Equipment	00-47
Precautions When You Disconnect and Connect Pipings	00-50
Precautions When You Handle Electrical Equipment	00-57
Precautions When You Handle Fuel System Equipment	00-59
Precautions When You Handle Intake System Equipment	00-60
Practical Use of KOMTRAX	00-61
Disconnect and Connect Push-Pull Type Coupler	00-62
Precautions for Disconnection and Connection of Connectors	00-66
How to Disconnect and Connect Deutsch Connector	00-71
How to Disconnect and Connect Slide Lock Type Connector	00-72
How to Disconnect and Connect Connector with Lock to Pull	00-79
How to Disconnect and Connect Connector with Lock to Push	00-80
How to Disconnect and Connect Connector with Housing to Rotate	00-83
How to Read the Codes for Electric Cable	00-84
Explanation of Terms for Maintenance Standard	00-88
Standard Tightening Torque Table	00-91
Conversion Table	00-98
Abbreviation List	00-103
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-11
Weight Table	01-31
Fuel, Coolant, Lubricants (WA475-11, WA485-11)	01-39
Fuel, Coolant, Lubricants (WA475-11E0)	01-41
Fuel, Coolant, Lubricants (WA485-11E0)	01-43
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-7
Layout Drawing of Urea SCR System	10-7
Urea SCR System Diagram	10-9
Function of Urea SCR System	10-10
Component Parts of Urea SCR System	10-25
Boot-up System	10-34
Layout Drawing of Boot-up System	10-34
System Operating Lamp System	10-36
Battery Disconnect Switch	10-38
Preheating System	10-39
Starter Signal Unit System	10-41
Remote Courtesy Lights System	10-44
Remote Open Door System	10-46
Engine System	10-47
Layout Drawing of Engine System	10-47
Engine Control System	10-50
Component Parts of Engine System	10-55

Cooling System.....	10-64
Layout Drawing of Cooling System	10-64
Cooling Fan Control System	10-66
Component Parts of Cooling System	10-71
Control System	10-86
Layout Drawing of Control System	10-86
Machine Monitor System.....	10-88
Rearview Monitor System	10-90
KOMTRAX System	10-91
Seat Belt Reminder System	10-92
Load Meter System	10-94
Rear Object Detection System	10-99
Component Parts of Control System	10-106
Hydraulic System	10-171
Layout Drawing of Hydraulic System.....	10-171
CLSS	10-172
Work Equipment Pump and Steering Pump Control System	10-176
Component Parts of Hydraulic System.....	10-177
Total Control System	10-250
System Diagram of Total Control System	10-250
Independent Work Equipment Control Function	10-251
Power Mode Selector Function	10-253
Overheat Prevention Function.....	10-254
Output Limitation Function for Low Temperature	10-255
Work Equipment Speed Level.....	10-256
Power Train System.....	10-257
Layout Drawing of Power Train System	10-257
Operation of Power Train System	10-259
HST Charge System	10-260
Pump Motor Control System	10-261
Transmission Gear Shift Control System.....	10-263
Transmission Protection Function	10-265
Directional Selector Switch Control Function.....	10-266
Traction Control System.....	10-268
KHMT System.....	10-271
Component Parts of Power Train System.....	10-280
Work Equipment System.....	10-327
Layout Drawing of Work Equipment System	10-327
Work Equipment Control System	10-329
Work Equipment Neutral Lock System	10-335
Remote Positioner System.....	10-337
Automatic Bucket Shake System	10-342
Bucket Positioner and Boom Positioner	10-343
Auto-Digging System	10-344
ECSS	10-347
Quick Coupler System	10-349
Component Parts of Work Equipment System	10-355
Steering System.....	10-368
Layout Drawing of Steering System (Steering Wheel Specification).....	10-368
Layout Drawing of Steering System (AFJS Specification)	10-370
Secondary Steering System.....	10-372
AFJS.....	10-374
AFJS System	10-376
Steering Column	10-382
Component Parts of Steering System	10-383
Brake System.....	10-411
Layout Drawing of Brake System	10-411
Parking Brake Control System	10-413

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$