

WSM

WORKSHOP MANUAL **TRACTOR**

B2650HSDC, B3350HSDC

Kubota

TO THE READER

This Workshop Manual tells the servicing personnel about the mechanism, servicing and maintenance of the B2650HSDC and B3350HSDC. It contains 4 parts: **"Information"**, **"General"**, **"Mechanism"** and **"Servicing"**.

■ Information

This section primarily contains information below.

- Safety First
- Safety Decal
- Specifications
- Dimensions

■ General

This section primarily contains information below.

- Engine Identification
- Model Identification
- General Precautions
- Maintenance Check List
- Check and Maintenance
- Special Tools

■ Mechanism

This section contains information on the structure and the function of the unit. Before you continue with the subsequent sections, make sure that you read this section.

Refer to the latest version of Workshop Manual (Code No. 9Y021-01870 / 9Y021-18200) for the diesel engine / tractor mechanism that this workshop manual does not include.

■ Servicing

This section primarily contains information below.

- Troubleshooting
- Servicing Specifications
- Tightening Torques
- Checking, Disassembling and Servicing

Regarding the servicing of Diesel Particulate Filter (DPF), refer to "DIAGNOSIS MANUAL" (9Y120-02490)

All illustrations, photographs and specifications contained in this manual are of the newest information available at the time of publication.

KUBOTA reserves the right to change all information at any time without notice.

Since this manual includes many models, information or illustrations and photographs can show more than one model.

December, 2012

© KUBOTA Corporation 2012

Record of Revisions

For pdf, use search function {Search word} to find all the revised locations.

Last digit of the Code No.	Issue month	Main Revised Point and Corrective Measures {Search word}	Reference Page
1	2014.05	• Add Diagmaster • Change the reforming mechanism • Change the after treatment devices • Change the indication pattern of DPF regeneration and add the regeneration Mode (Default Version) • Deleted the electrical system of engine. • Add the electrical circuit of B3350 (Default Version) • Change the ENGINE CONTROL SYSTEM • Add the accelerator sensor calibration	TO THE READER 1-M5 1-M7 1-M11 – 8-M2 8-S31 to 8-S33 8-S55

I INFORMATION

INFORMATION

CONTENTS

1. SAFETY FIRST	I-1
2. SAFETY DECALS	I-4
3. SPECIFICATIONS	I-8
4. TRAVELING SPEEDS	I-9
5. DIMENSIONS	I-10

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$