

WSM

WORKSHOP MANUAL
**TRACTOR, FRONT LOADER,
BACKHOE, ROTARY MOWER**

**BX23S, LA340, BT603,
RCK54D, RCK60D,
RCK54, RCK60B**

Kubota

TO THE READER

This Workshop Manual tells the servicing personnel about the mechanism, servicing and maintenance of *BX23S*. It contains 4 parts: "Information", "General", "Mechanism", and "Servicing".

Information

This section primarily contains information below.

- Safety first
- Safety decal
- Specifications
- Dimensions

General

This section primarily contains information below.

- Engine identification
- Model identification
- General precautions
- Maintenance check list
- Check and maintenance
- Special tools

Mechanism

This section contains information on the structure and the function of the unit. Before you continue with the subsequent sections, make sure that you read this section.

Servicing

This section primarily contains information below.

- Troubleshooting
- Servicing specifications
- Tightening torques
- Checking, disassembling and servicing

All illustrations, photographs and specifications contained in this manual are of the newest information available at the time of publication.

Kubota reserves the right to change all information at any time without notice.

Since this manual includes many models, information or illustrations and photographs can show more than one model.

March, 2017

© KUBOTA Corporation

CONTENTS

1. INFORMATION

SAFETY FIRST	1-1
1. Safety first.....	1-1
2. Before you start service	1-2
3. Start safely.....	1-2
4. Operate safely	1-2
5. Protect against high pressure spray	1-3
6. Avoid hot exhaust	1-3
7. Exhaust filter cleaning	1-3
8. Prevent a fire	1-4
9. Keep a good airflow in the work area	1-4
10. Discard fluids correctly	1-4
11. Prevent acid burns	1-4
12. Prepare for emergencies	1-5
SAFETY LABEL	1-7
1. Safety labels for BX tractor	1-7
2. Safety labels for mower	1-12
3. Safety labels for loader	1-13
4. Safety labels for backhoe	1-15
SPECIFICATIONS	1-17
1. BX tractor specifications	1-17
2. Mower specifications	1-19
3. Loader specifications	1-20
3.1 Loader specifications	1-20
3.2 Bucket specifications.....	1-21
3.3 Dimensional specifications of loader	1-22
3.4 Operational specifications of loader	1-23
4. Backhoe specifications	1-25
4.1 Backhoe specifications.....	1-25
4.2 Backhoe dimensions	1-26
4.3 Backhoe lift capacity	1-27
TRAVELING SPEEDS	1-29
DIMENSIONS	1-31

2. GENERAL

IDENTIFICATION.....	2-1
1. Tractor identification	2-1
1.1 Checking serial number and hour meter	2-1
1.2 Cylinder number	2-1
2. Checking mower identification	2-2
3. Checking loader identification.....	2-2
4. Checking backhoe identification	2-2
GENERAL PRECAUTIONS.....	2-3
HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING	2-5
LUBRICANTS, FUEL AND COOLANT	2-7
1. BX tractor.....	2-7
1.1 Lubricants, fuel, and coolant	2-7
1.1.1 Fuel.....	2-8
1.1.2 Engine oil	2-8
1.1.3 Transmission oil	2-8
1.2 Overview of biodiesel fuel (BDF).....	2-9
2. Mower	2-11
2.1 Lubricants.....	2-11
TIGHTENING TORQUES	2-13

1. General use screws, bolts and nuts	2-13
2. Stud bolts.....	2-13
3. Metric screws, bolts and nuts	2-14
4. American standard screws, bolts and nuts with UNC or UNF threads	2-14
5. Plugs.....	2-14
6. Adapters, elbows and others	2-15
MAINTENANCE CHECK LIST.....	2-17
1. BX tractor service intervals.....	2-17
2. Mower service intervals	2-19
CHECK AND MAINTENANCE.....	2-21
1. Periodic service	2-21
1.1 Opening bonnet.....	2-21
1.2 Daily check.....	2-21
1.2.1 Walk around inspection.....	2-21
1.2.2 Checking fuel gauge and refueling	2-21
1.2.3 Checking engine oil level	2-22
1.2.4 Checking transmission fluid level.....	2-22
1.2.5 Checking coolant level.....	2-23
1.2.6 Cleaning panel and radiator screen	2-23
1.2.7 Checking brake pedal	2-24
1.2.8 Checking gauges, meters, and Easy Checker™	2-24
1.2.9 Checking head light, hazard light, and tail light	2-24
1.2.10 Checking seat belt and ROPS	2-24
1.2.11 Checking and cleaning electrical wiring and battery cables.....	2-24
1.2.12 Checking movable parts	2-25
1.3 Check points of initial 50 hours	2-25
1.3.1 Changing engine oil	2-25
1.3.2 Replacing engine oil filter.....	2-25
1.3.3 Replacing transmission oil filter	2-26
1.3.4 Changing transmission fluid.....	2-26
1.3.5 Cleaning transmission strainer	2-27
1.4 Check points of every 50 hours.....	2-27
1.4.1 Greasing	2-27
1.4.2 Checking engine start system.....	2-29
1.4.3 Checking operator presence control (OPC) system	2-29
1.4.4 Checking wheel bolt torque	2-30
1.4.5 Cleaning lock lever shaft.....	2-30
1.5 Check points of every 100 hours.....	2-30
1.5.1 Checking battery condition	2-30
1.5.2 Cleaning air cleaner element	2-32
1.5.3 Checking fuel filter	2-32
1.5.4 Adjusting fan belt tension.....	2-33
1.5.5 Adjusting HST neutral spring	2-33
1.5.6 Adjusting brake pedal	2-34
1.6 Check point of every 200 hours	2-34
1.6.1 Replacing engine oil filter.....	2-34
1.6.2 Changing engine oil	2-35
1.6.3 Replacing transmission oil filter	2-35
1.6.4 Adjusting toe-in	2-36
1.7 Check points of every 400 hours.....	2-36
1.7.1 Adjusting front axle pivot.....	2-36
1.7.2 Changing transmission fluid.....	2-37
1.7.3 Cleaning transmission strainer	2-38
1.7.4 Changing front axle case oil	2-38
1.7.5 Replacing fuel filter element	2-38
1.8 Check points of every 800 hours.....	2-39
1.8.1 Adjusting engine valve clearance	2-39
1.9 Check points of every 1000 hours or 1 year	2-39

1.9.1 Replacing air cleaner element	2-39
1.10 Check points of every 1500 hours	2-39
1.10.1 Checking injection pressure of fuel injection nozzle	2-39
1.11 Check points of every 2000 hours or 2 years	2-39
1.11.1 Flushing cooling system and changing coolant.....	2-39
1.11.2 Antifreeze	2-40
1.12 Check points of every 3000 hours	2-41
1.12.1 Checking injection pump.....	2-41
1.13 Check points of every 1 year	2-41
1.13.1 Checking intake air line.....	2-41
1.13.2 Checking radiator hoses and hose clamps	2-41
1.13.3 Checking power steering line.....	2-41
1.13.4 Checking fuel lines.....	2-42
1.13.5 Checking engine breather hose	2-42
1.14 Check points of every 4 years	2-43
1.14.1 Replacing radiator hose	2-43
1.14.2 Replacing fuel hose	2-43
1.14.3 Replacing power steering hose	2-43
1.14.4 Replacing intake air line.....	2-43
1.14.5 Replacing engine breather hose	2-43
1.15 Service as required	2-43
1.15.1 Bleeding fuel system.....	2-43
1.15.2 Replacing fuse	2-43
1.15.3 Replacing light bulb	2-44
2. Mower	2-44
2.1 Check points of daily or each use	2-44
2.1.1 Retightening mower blade screw.....	2-44
2.1.2 Checking mower blade	2-45
2.1.3 Checking mower belt	2-45
2.1.4 Checking gear box oil level.....	2-45
2.1.5 Greasing spindle shafts, belt tension pivot and tension pulley	2-46
2.1.6 Greasing front and rear anti-scalp rollers	2-46
2.1.7 Greasing universal joint	2-46
2.2 Check points of initial 50 hours	2-47
2.2.1 Changing gear box oil.....	2-47
2.3 Check point of every 150 hours	2-47
2.3.1 Changing gear box oil.....	2-47
2.4 Check points of every 1 year.....	2-47
2.4.1 Checking gear box oil seal.....	2-47
2.5 Check point of every 4 years.....	2-48
2.5.1 Replacing gear box oil seal.....	2-48
3. Front loader	2-48
3.1 Check points of daily or each use	2-48
3.1.1 Checking transmission fluid level.....	2-48
3.1.2 Checking hydraulic hoses.....	2-48
3.2 Check points of every 10 hours.....	2-49
3.2.1 Greasing loader	2-49
3.3 Check points of every 50 hours.....	2-49
3.3.1 Checking torque of main frame bolt and nut.....	2-49
4. Backhoe.....	2-49
4.1 Check points of daily or each use	2-49
4.1.1 Checking transmission fluid level.....	2-49
4.1.2 Checking hydraulic hoses.....	2-49
4.1.3 Checking backhoe mounting pin.....	2-50
4.2 Check points of every 10 hours.....	2-50
4.2.1 Greasing backhoe.....	2-50
4.3 Check points of every 50 hours.....	2-51
4.3.1 Checking torque sub frame bolt and nut.....	2-51

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$