

WSM

WORKSHOP MANUAL
KUBOTA EXCAVATOR

U48-4, U55-4

Kubota

CONTENTS

TO THE READER	
TO THE READER	
INFORMATION	
CONTENTS	
INFORMATION	
1. SAFETY FIRST	I-1
2. SAFETY DECALS	I-4
GENERAL	
CONTENTS	
GENERAL	
1. CHECKING EXCAVATOR IDENTIFICATION	G-1
2. ENGINE IDENTIFICATION	G-2
3. GENERAL PRECAUTIONS	G-4
4. HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING	G-8
5. TIGHTENING TORQUES	G-12
6. NEW PRODUCT FEATURE (EUROPEAN VERSION)	G-17
7. NEW FEATURES OUTLINE	G-20
8. QUALITY SPECIFICATIONS	G-22
9. WATER AND OIL QUANTITY	G-33
10. DESCRIPTION OF PARTS	G-34
11. MAINTENANCE CHECK LIST	G-41
MACHINE BODY	
CONTENTS	
SERVICING	
1. FRONT OPERATING MACHINE	1-S1
2. SWIVEL FRAME	1-S3
3. TRACK FRAME	1-S21
ENGINE	
CONTENTS	
GENERAL	
1. ENGINE	2-G1
2. SPECIAL TOOLS	2-G5
MECHANISM	
1. FEATURE	2-M1
2. ENGINE BODY	2-M2
3. LUBRICATING SYSTEM	2-M7
4. COOLING SYSTEM	2-M8
5. FUEL SYSTEM	2-M10
SERVICING	
1. TROUBLESHOOTING	2-S1
2. SERVICING SPECIFICATIONS	2-S4
3. TIGHTENING TORQUES	2-S10
4. CHECKING, DISASSEMBLING AND SERVICING	2-S13
HYDRAULIC SYSTEM	
CONTENTS	
MECHANISM	
1. DIAGRAM OF HYDRAULIC CIRCUIT	3-M1
2. HYDRAULIC DEVICE LAYOUT	3-M3
3. FEATURES	3-M4
4. PUMP	3-M8
5. CONTROL VALVE	3-M32
6. SWIVEL MOTOR	3-M54
7. TRAVEL MOTOR	3-M60
8. HYDRAULIC CYLINDER	3-M82
9. PILOT VALVE	3-M92
10. UNLOAD VALVE	3-M103
11. HOLDING VALVE	3-M107
12. SERVICE PORT	3-M111
SERVICING	
1. PUMP	3-S1
2. CONTROL VALVE	3-S34
3. SWIVEL MOTOR	3-S63
4. SWIVEL JOINT	3-S77
5. TRAVEL MOTOR	3-S81
6. HYDRAULIC CYLINDER	3-S140
7. PILOT VALVE (CONTROL)	3-S153
8. PILOT VALVE (TRAVEL)	3-S163
9. PILOT VALVE (BLADE, SWING)	3-S173
10. UNLOAD VALVE	3-S184
11. THIRD LINE VALVE ASSEMBLY	3-S189
12. ROUTING OF HYDRAULIC HOSES	3-S191
13. BOOM HOLDING VALVE	3-S217
14. MEASURING HYDRAULIC DEVICE PERFORMANCE	3-S223
15. TROUBLESHOOTING	3-S244
ELECTRICAL SYSTEM	
CONTENTS	
SERVICING	
1. ELECTRONIC DEVICE LAYOUT	4-S1
2. WIRING CIRCUIT	4-S2
3. TROUBLESHOOTING (START-UP EQUIPMENT VERSION)	4-S13
4. INSPECTIONS	4-S15
5. Instrument Panel Operating Guide	4-S22
6. TROUBLESHOOTING (METER PANEL EDITION)	4-S77
CABIN	
CONTENTS	
MECHANISM	
1. AIR CONDITIONING SYSTEM	5-M1
2. WIPER	5-M20
SERVICING	
1. TROUBLESHOOTING	5-S1
2. MAINTENANCE AND SERVICE RELATED SPECIFICATIONS	5-S4
3. TORQUE	5-S5
4. PRECAUTIONS WHEN REPAIRING THE REFRIGERANT SYSTEM	5-S6
5. INSPECTING AND CHARGING THE REFRIGERANT SYSTEM	5-S12
6. INSPECTION AND DISASSEMBLY	5-S21
7. CABIN REMOVAL AND MOUNTING	5-S38
8. WINDOW WASHER	5-S40
9. LIGHTING DEVICES (CAB WORK LIGHT, INTERIOR LIGHT)	5-S43
10. REMOVAL AND INSTALLATION OF GLASS	5-S46
11. FRONT WINDOW	5-S49

TO THE READER

This Workshop Manual provides service personnel with information about the mechanisms, service and maintenance of the construction machinery. This Workshop Manual is divided into 3 sections, General, Mechanisms and Service.

■ General

This section contains information such as engine and equipment ID numbers, general precautions, maintenance schedules, inspections and maintenance items and special tools.

■ Mechanisms

This section describes the structure of mechanisms and explains their functions. Be sure that you fully understand this Mechanisms section prior to performing any service work, such as troubleshooting or when performing any disassembly or assembly work.

■ Service

This section contains information and procedures for performing maintenance on the backhoe, such as troubleshooting, service specification tables, torque specifications, items to be inspected and adjusted, disassembly and assembly procedures, as well as precautions, maintenance standard values and usage limits.

All of the illustrations, specifications and other information in this manual were created based on the latest model at the time of publication.

Please be aware that changes to the content may be made without prior notice.

■ NOTE

- Corresponding model list

Machine Model		Engine Model
U48-4 U55-4	For European Union	V2607-DI-E3-BH

© KUBOTA Corporation 2010

March, 2010

Record of Revisions

Last digit of the Code No.	Date	Main Revised Point and Corrective Measures	Person-in-charge
1			
2			
3			
4			

I INFORMATION

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$